

## DigiLand DL1036

# DigiLand DL1036 Android Tablet User Manual

Model: DL1036

## 1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your DigiLand DL1036 Android Tablet. Please read this manual thoroughly before operating the device and keep it for future reference. The DigiLand DL1036 is a 10.1-inch Android tablet designed for versatile use, featuring a quad-core processor, HD IPS touchscreen, and dual cameras.

## 2. SAFETY INFORMATION

To ensure proper operation and avoid damage, please observe the following safety precautions:

- Do not expose the tablet to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the tablet to strong impacts.
- Use only the charger and charging cable provided with the tablet.
- Do not disassemble, repair, or modify the tablet yourself. Refer to qualified service personnel.
- Keep the tablet away from water and other liquids.
- Dispose of the tablet and its battery responsibly according to local regulations.

## 3. WHAT'S IN THE BOX

Carefully unpack your DigiLand DL1036 Tablet and ensure all items are present:

- DL1036 Tablet
- Charger
- Charging Cable
- User Manual (this document)



Image: The DigiLand DL1036 Tablet shown with its included charger and charging cable, alongside the user manual.

## 4. PRODUCT OVERVIEW

---

Familiarize yourself with the physical components of your tablet.

# 10.1 inch Android Tablet

High-resolution dual cameras for great shots anytime, anywhere



Image: Three DigiLand DL1036 tablets displayed from different angles, showcasing the slim profile and rear camera placement.

### 4.1. Ports and Buttons

- **Power Button:** Located on the side, used to turn the tablet on/off or put it to sleep/wake it up.
- **Volume Buttons:** Adjust the audio volume.
- **USB-C Port:** For charging and data transfer.
- **Headphone Jack:** 3.5mm audio output.
- **MicroSD Card Slot:** For expanding storage up to 256GB.
- **Front Camera:** For video calls and selfies.
- **Rear Camera:** For taking photos and videos.
- **Speakers:** For audio output.

# 5000mAh Enduring Battery



**5000mAh**  
Resolution



**USB-C**  
Charging

Image: A close-up view of the DigiLand DL1036 tablet's side, highlighting the USB-C charging port and the MicroSD card slot.

## 5. SETUP

### 5.1. Charging the Tablet

Before first use, fully charge the tablet. Connect the provided charging cable to the USB-C port on the tablet and the other end to the charger. Plug the charger into a power outlet. The battery indicator on the screen will show charging status.

### 5.2. Powering On/Off

- **To Power On:** Press and hold the Power button until the DigiLand logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears. Select "Power off" and confirm.
- **Sleep/Wake:** Briefly press the Power button to put the tablet to sleep or wake it up.

## 5.3. Initial Setup

Upon first power-on, the tablet will guide you through the initial setup process:

1. **Language Selection:** Choose your preferred language.
2. **Wi-Fi Connection:** Select your Wi-Fi network and enter the password. A stable internet connection is recommended for setup.
3. **Google Account:** Sign in with your existing Google account or create a new one. This is necessary to access the Google Play Store and other Google services.
4. **Date & Time:** Set the correct date and time, or allow the network to set it automatically.
5. **Security:** Set up a screen lock (PIN, pattern, or password) for security.

## 6. OPERATING THE TABLET

### 6.1. Navigation and Gestures

The DigiLand DL1036 uses a touch-sensitive screen for navigation:

- **Tap:** To select an item or open an app.
- **Touch & Hold:** To access contextual menus or move icons.
- **Swipe:** To scroll through pages or lists.
- **Pinch-to-Zoom:** To zoom in or out on images or web pages.

### 6.2. Connecting to Wi-Fi

To connect to a Wi-Fi network:

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Turn on Wi-Fi.
3. Select your desired network from the list.
4. Enter the password if prompted and tap **Connect**.



Image: A graphic illustrating the 2.4G WiFi capability of the DigiLand DL1036 tablet, along with camera and charging details.



## 6.3. Downloading Apps

Access the Google Play Store to download and install applications:

1. Tap the **Play Store** icon on your home screen or app drawer.
2. Search for the app you want to install.
3. Tap **Install** and follow the on-screen prompts.

# Google Authentication

Tons of built-in apps, or download apps  
from the Google Play Store

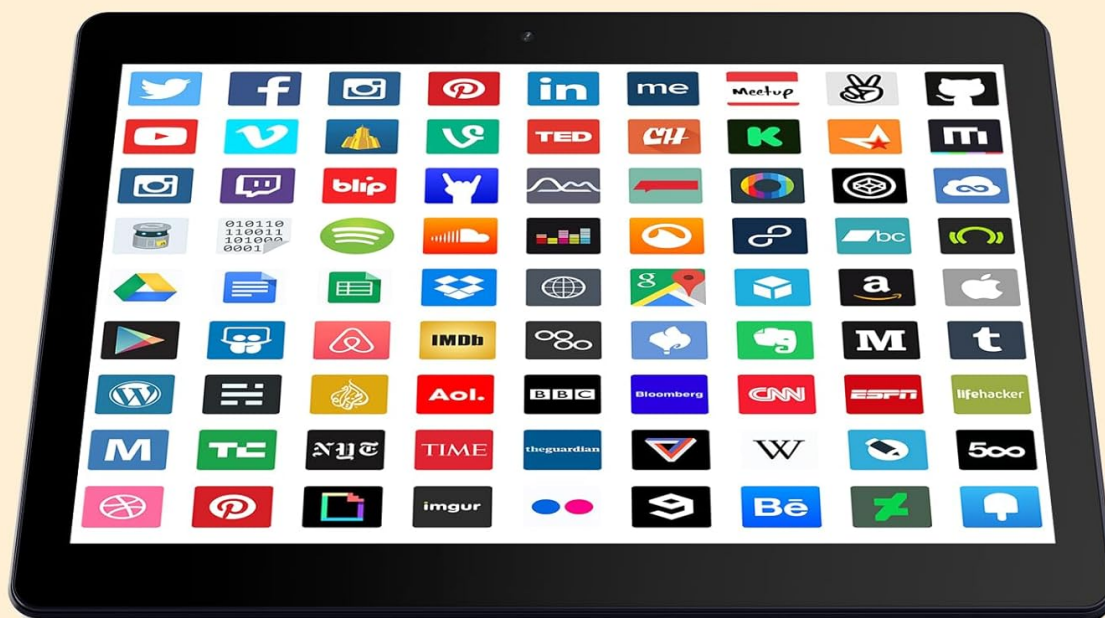 


Image: The DigiLand DL1036 tablet screen filled with various application icons, demonstrating its compatibility with Google Play Store apps.

## 6.4. Camera Usage

The tablet features a 2MP front camera and a 2MP rear camera.

1. Open the **Camera** app.
2. Tap the camera switch icon to toggle between front and rear cameras.
3. Tap the shutter button to take a photo or start/stop video recording.

## 2M + 2M Camera

Record the moments of a beautiful life

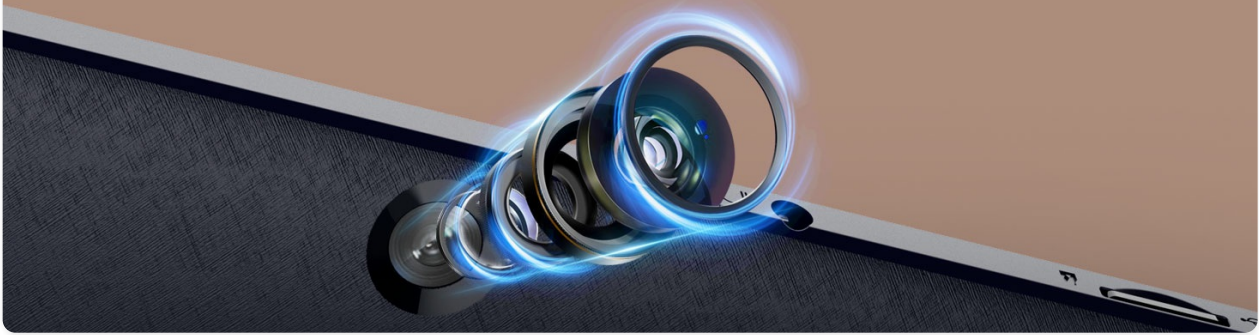 


Image: A detailed graphic showcasing the dual 2MP cameras of the DigiLand DL1036 tablet, emphasizing its photo and video capabilities.

### 6.5. Storage Management

The tablet comes with 32GB of internal storage and supports expansion up to 256GB via a MicroSD card. To manage storage:

- Go to **Settings** > **Storage** to view storage usage.
- Insert a MicroSD card into the designated slot to expand storage for photos, videos, and other files.

## 2G RAM whit 32G ROM

Store all your favorite



Image: A visual representation of the DigiLand DL1036 tablet's 2GB RAM and 32GB ROM, indicating ample space for photos, videos, and music.

### 6.6. Battery Life

The tablet is equipped with a 5000mAh battery, providing extended usage time. To optimize battery life:

- Reduce screen brightness.
- Turn off Wi-Fi or Bluetooth when not in use.
- Close unused applications running in the background.

Engineered to Keep You Going

5000mAh

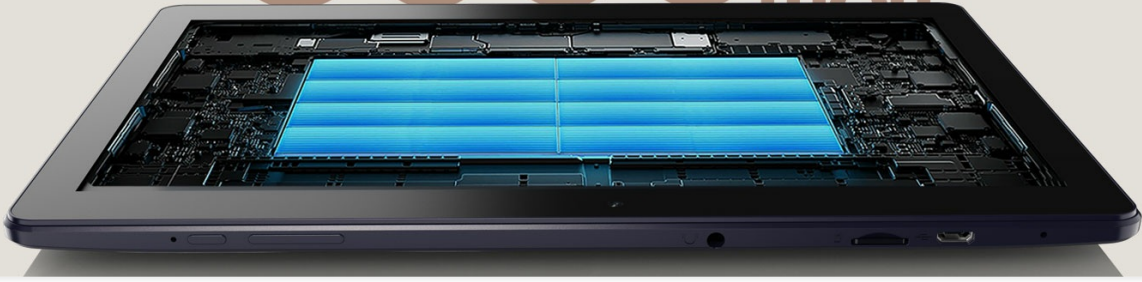 


Image: A graphic highlighting the 5000mAh battery capacity of the DigiLand DL1036 tablet, emphasizing its long-lasting power.

## 7. MAINTENANCE

---

### 7.1. Cleaning

Use a soft, lint-free cloth to clean the tablet screen and body. Do not use liquid cleaners or aerosols directly on the tablet.

### 7.2. Software Updates

Periodically check for system updates to ensure optimal performance and security:

1. Go to **Settings > System > System update**.
2. Follow the on-screen instructions to download and install any available updates.

### 7.3. Storage Optimization

To maintain smooth performance, regularly clear unnecessary files and apps:

- Uninstall apps you no longer use.
- Clear cache data for apps in **Settings > Apps & notifications > [App Name] > Storage & cache**.
- Transfer large files (photos, videos) to a MicroSD card or cloud storage.

## 8. TROUBLESHOOTING

---

If you encounter issues with your tablet, refer to the following common solutions:

Problem	Solution
---------	----------



Problem	Solution
Tablet does not turn on	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again. If still unresponsive, perform a forced restart by holding the Power button for 10-15 seconds.
Wi-Fi connection issues	Check if Wi-Fi is enabled in Settings. Restart your Wi-Fi router. Forget the network and reconnect.
Tablet is slow or unresponsive	Close unused apps. Clear app cache. Restart the tablet. Check for system updates. If issues persist, consider a factory reset (backup data first).
Apps are crashing	Clear the app's cache and data (Settings > Apps & notifications > [App Name] > Storage & cache). Reinstall the app. Ensure the tablet's software is up to date.
Screen is unresponsive	Restart the tablet. Ensure the screen is clean and dry.

## 8.1. Factory Reset

A factory reset will erase all data from your tablet and restore it to its original factory settings. **Backup all important data before proceeding.**

1. Go to **Settings > System > Reset options**.
2. Select **Erase all data (factory reset)**.
3. Confirm your decision and enter your PIN/pattern/password if prompted.

## 9. SPECIFICATIONS

Key technical specifications for the DigiLand DL1036 Tablet:

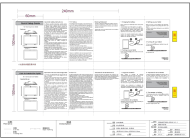
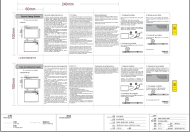
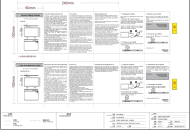




Image: A comprehensive graphic detailing the DigiLand DL1036 tablet's core specifications including display, battery, processor, OS, RAM, and ROM.

Feature	Specification
Model Name	DL1036
Screen Display Size	10.1 Inches
Screen Resolution	1280 x 800 IPS
Processor	2 GHz Quad-core (MediaTek)
RAM	2 GB
Internal Storage	32 GB
Expandable Storage	Up to 256GB (MicroSD)
Operating System	Android 11 Go
Rear Webcam Resolution	2 MP
Front Webcam Resolution	2 MP
Battery Life (Average)	10 Hours
Battery Capacity	5000mAh
Wireless Type	802.11g (2.4G WiFi)
Item Weight	1.06 pounds
Product Dimensions	9.6 x 6.8 x 0.3 inches
Color	Blue

## 10. WARRANTY AND SUPPORT

DigiLand products are covered by a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official DigiLand website. If you encounter any issues or require technical assistance, please contact DigiLand customer support through the contact information provided on our website or in your product packaging. Please have your model number (DL1036) and purchase information ready when contacting support.

	<p><a href="#">DIGILAND 10.1 Inch Quad Core Tablet Quick Setup Guide   MID1016</a></p> <p>Concise setup guide for the DIGILAND 10.1 Inch Quad Core Tablet (Model MID1016), covering safety instructions, FCC compliance, charging, setup, and shutdown procedures.</p>
	<p><a href="#">Digi-Land 10.1 Inch Octa Core Tablet Quick Setup Guide and Safety Information</a></p> <p>Concise guide for setting up and safely using the Digi-Land 10.1 Inch Octa Core Tablet, including FCC compliance details and important safety instructions.</p>
	<p><a href="#">DIGILAND 10.1 Inch Octa Core Tablet Quick Setup Guide</a></p> <p>Comprehensive quick setup guide for the DIGILAND 10.1 Inch Octa Core Tablet, covering safety instructions, FCC compliance, charging, setup, and shutdown procedures.</p>
	<p><a href="#">Digiland M11 Pro Quick Start Guide</a></p> <p>A quick start guide for the Digiland M11 Pro tablet, covering initial setup, charging, basic operations, and important FCC compliance information.</p>
	<p><a href="#">Digiland Limited Product Warranty Information</a></p> <p>Official limited product warranty details for Digiland electronics, covering terms, exclusions, and claim procedures. Includes 90-day parts and labor warranty.</p>