

[Manuals.plus](#) /

› [USARMT](#) /

› SN-1LC Universal Remote Control User Manual

USARMT 5656-SONY SN-1LC Univ

SN-1LC Universal Remote Control User Manual

Model: 5656-SONY SN-1LC Univ

Brand: USARMT

INTRODUCTION

Thank you for choosing the SN-1LC Universal Remote Control. This remote is designed to be compatible with a wide range of Sony LCD, LED, Smart, 4K, and 8K TVs, offering a convenient replacement for your original remote. Please read this manual carefully to ensure proper setup and operation.

Package Contents:

- 1 x SN-1LC Universal Remote Control
- 1 x User Manual (this document)

Note: Batteries are not included and must be purchased separately. This remote requires 2 x AAA batteries.

SETUP AND PROGRAMMING

1. Battery Installation

Open the battery compartment cover on the back of the remote control. Insert two AAA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment. Close the cover securely.

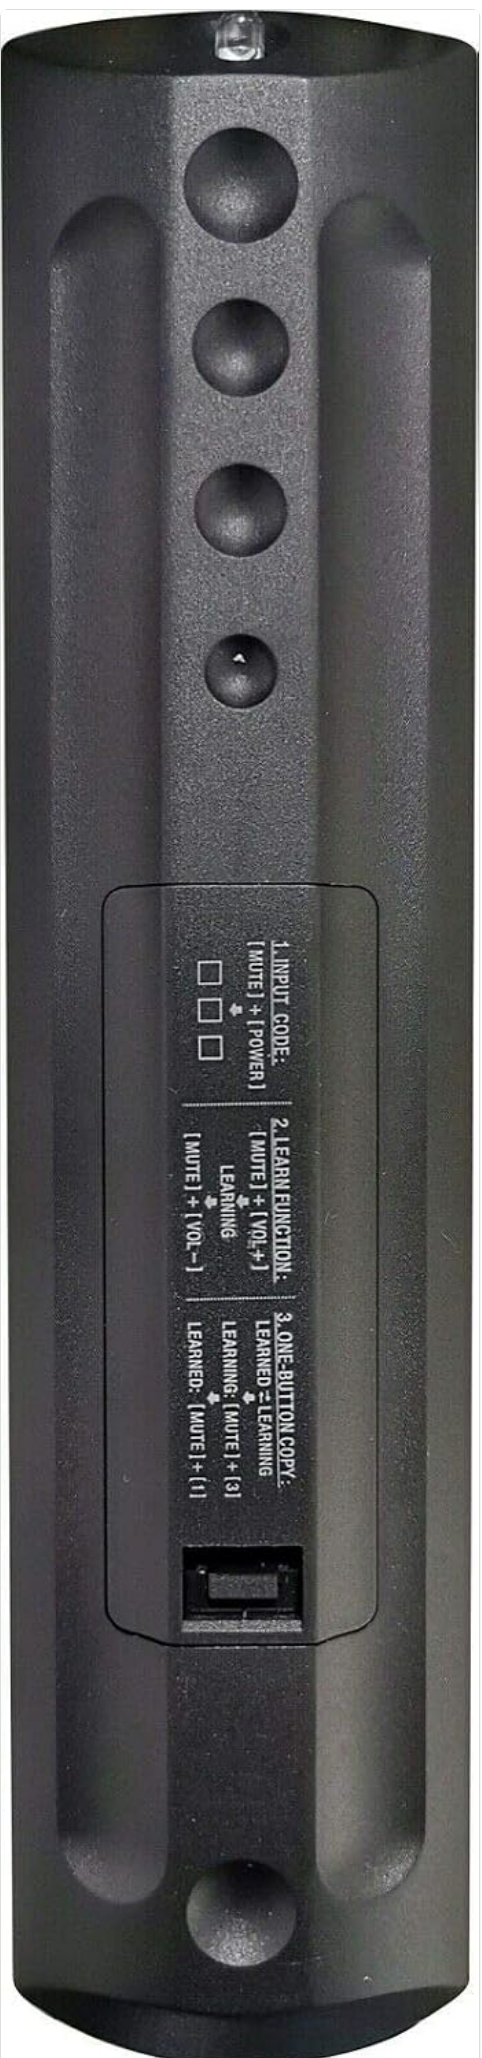


Image: Back view of the SN-1LC remote control, highlighting the battery compartment area. Ensure correct battery polarity when inserting.

2. Programming the Remote Control

The SN-1LC remote control can be programmed using several methods to ensure compatibility with your Sony TV. Please try the methods below until your remote functions correctly.

Method A: Input Code Programming

This method involves entering a specific 3-digit code that corresponds to your Sony TV model.

1. Press and hold the **MUTE** key and **POWER** key simultaneously for 3 seconds. The LED light on the remote will illuminate, indicating it is ready for code input.
2. Enter the 3-digit code for your Sony TV. If the code is correct, the LED light will turn off. If the LED light remains on, the code is incorrect or not supported.
3. Test the remote's functions. If it doesn't work properly, try another code from the list.

Example Codes for Sony TVs: 001, 002, 003, 004, 005, 006, 007, 008, 009, 010. (Refer to your TV's manual or manufacturer's website for a comprehensive list of Sony TV codes if these do not work.)



Image: Illustration of the process for inputting a 3-digit code: press MUTE and POWER, then enter the code. The LED indicates success or failure.

Method B: Learning Function (Copying from Original Remote)

This function allows the SN-1LC remote to learn infrared signals directly from your original Sony TV remote control.

1. Press and hold the **MUTE** key and **VOL+** key simultaneously for about 3 seconds. The LED light will illuminate, indicating learning mode. Release the keys.
2. Point the original remote control to the SN-1LC remote control, ensuring they are 1-3cm apart and facing each other.
3. Press any key on the original remote that you wish to copy. The LED on the SN-1LC remote will flash to confirm reception.
4. Immediately press the corresponding key on the SN-1LC remote where you want to store the learned function. The LED will flash twice to confirm successful learning.
5. Repeat steps 3 and 4 for all desired keys.
6. To exit learning mode, press the **MUTE** key. The LED will turn off.

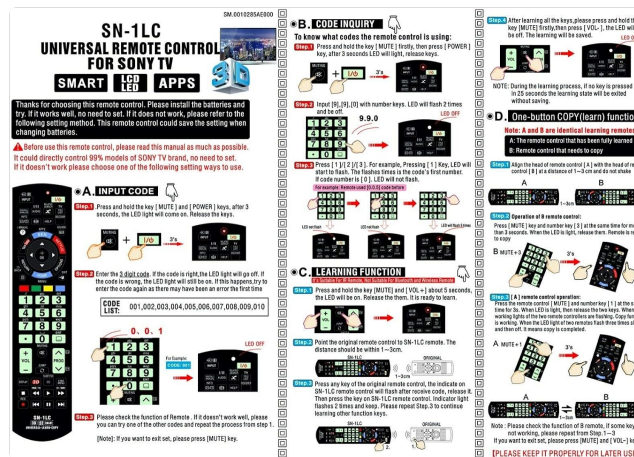


Image: Visual guide for the learning function, showing how to position the key original remote and the SN-1LC remote for signal transfer.

Method C: One-Button Copy (Learn) Function

This method is for quickly copying a single function, particularly useful if you have two identical remotes or need to copy a specific button.

1. Ensure both the original remote and the SN-1LC remote are identical or have similar button layouts for the function you wish to copy.
2. Align the head of the control A (original remote) with the head of control B (SN-1LC remote) at a distance of 1-3cm.
3. Press and hold the **MUTE** key and **VOL+** key simultaneously on the SN-1LC remote for 3 seconds. The LED will illuminate.
4. Press the desired key on the original remote (e.g., **VOL+**). The LED on the SN-1LC remote will flash to confirm reception.
5. Immediately press the corresponding key on the SN-1LC remote where you want to store the learned function. The LED will flash twice to confirm successful learning.
6. To exit, press the **MUTE** key.

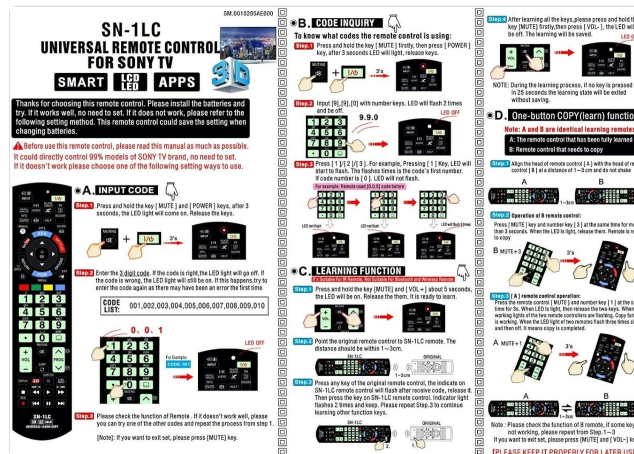


Image: Depiction of the one-button copy process, showing two remotes facing each other for direct signal transfer.

KCODE Inquiry (Diagnostic)

This function allows you to check the internal code currently being used by the remote or to verify successful programming by observing LED flashes.

1. Press and hold the **MUTE** key, then press the **POWER** key. After 2 seconds, the LED will light up. Release both keys.
2. Press the number keys **[9], [9], [0]**. The LED will flash 2 times and then turn off.
3. Press the number keys **[9], [9], [1]**. The LED will flash 3 times and then turn off.
4. Continue with **[9], [9], [2]** through **[9], [9], [9]** to observe corresponding LED flashes. This can help confirm if the remote is responding to internal commands.

Note: This is primarily a diagnostic feature and not a programming method. If the remote is not responding, ensure batteries are fresh and correctly inserted, and try the programming methods again.

OPERATING INSTRUCTIONS

Once programmed, your SN-1LC remote control functions similarly to an original Sony TV remote. Below is a general overview of common button functions.





Image: Front view of the SN-1LC universal remote control, displaying all buttons and their labels.

Common Button Functions:

- **POWER (Red Button):** Turns the TV on or off.
- **INPUT:** Cycles through video input sources (HDMI, AV, etc.).
- **TV:** Switches to TV mode.
- **VOL +/-:** Adjusts the volume up or down.
- **CH +/- (PROG):** Changes channels up or down.
- **MUTE:** Mutes or unmutes the TV sound.
- **Number Pad (0-9):** Direct channel input.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **MENU / HOME:** Opens the TV's main menu or smart TV home screen.
- **BACK / RETURN:** Goes back to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **APPS:** Direct access to smart TV applications.
- **NETFLIX:** Direct access to the Netflix application.
- **GUIDE:** Displays the electronic program guide (EPG).
- **OPTIONS:** Displays context-sensitive options for the current screen.
- **Color Buttons (Red, Green, Yellow, Blue):** Functions vary depending on the TV model and current application.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward, Record):** Controls playback of media content.

Specific button functions may vary slightly depending on your Sony TV model and its firmware. Refer to your TV's user manual for detailed information on its features.

MAINTENANCE

- Keep the remote control dry. Avoid exposure to water or high humidity.
- Do not drop, strike, or apply excessive force to the remote control.
- Clean the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- If the remote control will not be used for an extended period, remove the batteries to prevent leakage.
- Replace batteries when the remote's response becomes sluggish or the LED indicator does not light up consistently.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not working at all.	Batteries are dead or incorrectly inserted. Remote is not programmed.	Replace batteries with new ones, ensuring correct polarity. Re-program the remote using one of the methods in the "Setup and Programming" section.
Remote only controls some functions.	Incorrect code programmed. Learning function not fully successful.	Try a different code from the "Input Code Programming" list. Re-attempt the "Learning Function" for specific buttons that are not working.
LED on remote doesn't light up during programming.	Incorrect button combination pressed. Low batteries.	Ensure you are pressing the correct keys simultaneously for the required duration. Replace batteries.
Remote works intermittently.	Low batteries. Obstruction between remote and TV.	Replace batteries. Ensure a clear line of sight between the remote's IR emitter and the TV's IR receiver.

SPECIFICATIONS

- Model Number:** 5656-SONY SN-1LC Univ
- Brand:** USARMT
- Compatible Devices:** Sony LCD, LED, Smart, 4K, 8K TVs
- Connectivity Technology:** Infrared (IR)
- Controller Type:** Button Control
- Product Dimensions:** 9 x 1.5 x 1 inches
- Item Weight:** 3 ounces
- Power Source:** 2 x AAA Batteries (not included)
- Date First Available:** October 20, 2020

WARRANTY AND SUPPORT

USARMT is committed to providing quality products and customer satisfaction.

Return Policy:

This product is covered by a **30-Day Hassle-Free Return Policy**. If you encounter any issues or are not satisfied with your purchase within 30 days of receipt, please contact the seller for a refund or replacement.

Customer Support:

For any questions, concerns, or technical assistance, please contact our customer support. We aim to respond to customer inquiries within 1 business day.

Please refer to your purchase platform for specific contact details for the seller, "Sourcing Remote".

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question