

NKF RC-1162

NKF RC-1162 Remote Control User Manual

For Denon CD Receiver Models: RCDM39, RCDM39DAB, RCD-M39, RCD-M39DAB

1. INTRODUCTION

This manual provides instructions for the NKF RC-1162 replacement remote control. This remote is designed to function as a direct replacement for the original remote controls of compatible Denon CD Receiver models, offering full access to all necessary functions without requiring any programming.

2. PRODUCT OVERVIEW

2.1 Key Features

- Direct replacement for original Denon remote control.
- No programming or pairing required.
- Provides full access to all essential functions.
- Operates by simply inserting new batteries.

2.2 Compatible Models

The NKF RC-1162 remote control is compatible with the following Denon CD Receiver models:

- RCDM39
- RCDM39DAB
- RCD-M39
- RCD-M39DAB

2.3 Product Images



Figure 1: Angled view of the NKF RC-1162 remote control, displaying the layout of all function buttons.



Figure 2: Front view of the NKF RC-1162 remote control, highlighting the button arrangement.



Figure 3: Rear view of the NKF RC-1162 remote control with the battery compartment cover removed, showing the battery slots.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control. Refer to Figure 3 for assistance.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two (2) AAA alkaline batteries into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: Batteries are not included with the remote control. Please use new alkaline batteries for optimal performance.

4. OPERATING INSTRUCTIONS

Once batteries are installed, the NKF RC-1162 remote control is ready for immediate use with your compatible Denon CD Receiver. No additional programming or pairing is required.

4.1 Basic Functions

Point the remote control directly at your Denon CD Receiver and press the desired function button. Common functions include:

- **POWER:** Turns the receiver on or off.
- **SOURCE (CD, TUNER, DIGITAL IN, ANALOG IN, iPod/USB):** Selects the input source.
- **VOLUME (+/-):** Adjusts the audio volume.

- **MUTE:** Silences the audio output.
- **PLAY/PAUSE, STOP, SKIP (<< / >>):** Controls playback for CD or USB sources.
- **CHANNEL (+/-):** Navigates radio channels (for tuner source).
- **NUMBER BUTTONS (0-9, +10):** Direct input for track numbers or radio frequencies.
- **ENTER:** Confirms selections.
- **SETUP:** Accesses system settings.
- **SLEEP, CLOCK, DIMMER:** Controls various system utilities.

Refer to your Denon CD Receiver's original manual for detailed information on specific functions and their usage.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Avoid using liquid cleaners, abrasive pads, or chemical solvents, as these may damage the remote's finish or internal components.

5.2 Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops functioning. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	Batteries are depleted or incorrectly installed.	Check battery orientation (+/-). Replace with new AAA alkaline batteries.
Remote control has limited functionality.	Remote is not pointed directly at the receiver, or there is an obstruction.	Ensure a clear line of sight between the remote and the Denon CD Receiver.
Remote does not control the Denon CD Receiver.	The receiver model is not compatible with the RC-1162.	Verify that your Denon CD Receiver model is listed under Section 2.2 Compatible Models.

7. SPECIFICATIONS

- Model:** NKF RC-1162
- Brand:** NKF
- Compatible Devices:** Denon CD Receiver (RCDM39, RCDM39DAB, RCD-M39, RCD-M39DAB)
- Connectivity Technology:** Infrared
- Power Source:** 2 x AAA Batteries (not included)
- Special Feature:** No Programming Required
- Product Dimensions:** 7.87 x 1.97 x 0.79 inches (approximately)
- Item Weight:** 3.2 ounces (approximately, without batteries)

8. SUPPORT AND CONTACT

Should you encounter any issues or have questions regarding the NKF RC-1162 remote control, please contact the seller or manufacturer for assistance. Providing details about your specific Denon CD Receiver model and the nature of the problem will help expedite support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question