

BELLA 90078

BELLA PRO 12 Cup Flavor Infusion Coffee Maker

Model: 90078

Brand: BELLA

INTRODUCTION

Welcome to the BELLA PRO 12 Cup Flavor Infusion Coffee Maker manual. This guide provides essential information for the safe and efficient operation of your new coffee maker.

Product Overview

The BELLA PRO 12 Cup Flavor Infusion Coffee Maker is designed to deliver a superior coffee experience. Featuring a 1500-watt brewing system, it brews coffee hotter and faster than standard models. The unique flavor infusion carafe lid ensures even distribution and mixing for a perfectly balanced pot. Convenience is key with programmable brewing up to 24 hours in advance and a Bold Strength Selector for customized taste. The pause and serve feature allows for quick pours during brewing, while the "Time since last brew" indicator helps monitor freshness. For peace of mind, the unit includes a 2-hour automatic shut-off.

Key Features

- Brew up to 12 cups of your favorite beverage.
- Included carafe for easy serving.
- Auto shut-off promotes safe operation.
- Clear LCD display for easy programming.
- Strength control to customize your coffee.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the coffee maker.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.

- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycle.
- The carafe is designed for use with this appliance only. It must never be used on a range top.
- Do not place a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive material.

COMPONENTS

Familiarize yourself with the parts of your BELLA PRO Coffee Maker:

- Water Reservoir with MAX/MIN markings
- Brew Basket (removable)
- Permanent Filter (optional, paper filters can also be used)
- Flavor Infusion Carafe with Lid
- Heating Plate
- Control Panel with LCD Display
- Power Button
- 1-4 Cup Button
- Program Button
- Hour/Minute Buttons
- Strength Selector (Bold)



Figure 1: Front view of the BELLA PRO 12 Cup Flavor Infusion Coffee Maker. This image highlights the main components including the water reservoir with level indicators, the control panel with LCD display and buttons, and the glass carafe resting on the heating plate.

INITIAL SETUP

1. **Unpacking:** Carefully remove all packaging materials from your coffee maker. Keep packaging for future storage or disposal.
2. **First Use Cleaning:** Before first use, wash the carafe and brew basket in warm, soapy water. Rinse thoroughly. Wipe the exterior of the coffee maker with a soft, damp cloth.

3. **First Brew Cycle (Cleaning):** Fill the water reservoir to the MAX line with clean water. Place the empty brew basket into its position. Do not add coffee grounds. Place the carafe on the heating plate. Run a full brew cycle to clean the internal components. Discard the water. Repeat this process 2-3 times.
4. **Placement:** Place the coffee maker on a flat, stable, heat-resistant surface, away from the edge of the counter. Ensure there is adequate ventilation around the unit.

OPERATING INSTRUCTIONS

Brewing Coffee

1. **Fill Water Reservoir:** Open the lid and fill the water reservoir with fresh, cold water to the desired level, using the markings on the side. Do not exceed the MAX line.
2. **Add Coffee Grounds:** Place a paper filter (cone-shaped) or the permanent filter into the brew basket. Add the desired amount of ground coffee. For best results, use 1 tablespoon of ground coffee per cup. Adjust to taste.
3. **Position Carafe:** Ensure the flavor infusion carafe with its lid is properly placed on the heating plate.
4. **Start Brewing:** Press the **BREW** button. The indicator light will illuminate, and brewing will begin.
5. **Pause & Serve:** During brewing, you can temporarily remove the carafe to pour a cup. The brewing will pause automatically. Replace the carafe within 20 seconds to prevent overflow.
6. **Keep Warm:** After brewing is complete, the coffee maker will automatically switch to the "Keep Warm" mode for 2 hours. The "Time since last brew" indicator on the LCD will show how long the coffee has been kept warm.
7. **Automatic Shut-off:** The coffee maker will automatically shut off after 2 hours of keeping warm.

Programming Brew Time

1. **Set Current Time:** With the coffee maker plugged in, press the **HOUR** and **MINUTE** buttons to set the current time. The LCD display will show the time.
2. **Set Program Time:** Press the **PROGRAM** button. The "PROGRAM" indicator will flash. Use the **HOUR** and **MINUTE** buttons to set the desired time for brewing to start.
3. **Activate Program:** Press the **PROGRAM** button again to confirm. The "PROGRAM" indicator will stop flashing and remain lit, indicating the programmed brew is set.
4. **Cancel Program:** To cancel the programmed brew, press the **PROGRAM** button until the "PROGRAM" indicator turns off.

Bold Strength Selection

To select a bolder coffee strength, press the **BOLD** button before starting the brew cycle. The "BOLD" indicator will illuminate on the LCD, and the coffee maker will adjust the brewing process for a richer flavor.

1-4 Cup Brewing

For smaller batches (1-4 cups), press the **1-4 CUP** button before starting the brew cycle. This optimizes the brewing process for smaller volumes, ensuring full flavor extraction.



Figure 2: Angled view of the BELLA PRO 12 Cup Flavor Infusion Coffee Maker. This perspective emphasizes the sleek stainless steel finish and the user-friendly control panel, which includes buttons for 1-4 Cup, Program, Hour, Minute, and Brew, along with the LCD display.

CARE AND MAINTENANCE

Daily Cleaning

1. **Unplug:** Always unplug the coffee maker from the power outlet and allow it to cool completely before cleaning.
2. **Wash Removable Parts:** The carafe, carafe lid, and brew basket can be washed in warm, soapy water. Rinse

thoroughly and dry. These parts are also top-rack dishwasher safe.

3. **Wipe Exterior:** Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
4. **Clean Heating Plate:** Wipe the heating plate with a clean, damp cloth. Do not immerse the heating plate in water.

Descaling (Mineral Deposit Removal)

Mineral deposits (calcium) can build up in your coffee maker over time, affecting its performance. Descale your coffee maker regularly, depending on the hardness of your water and frequency of use (e.g., every 2-4 weeks).

1. **Prepare Solution:** Fill the water reservoir with a solution of white vinegar and cold water. A common ratio is 1 part white vinegar to 2 parts water. For example, 4 cups of vinegar and 8 cups of water.
2. **Run Brew Cycle:** Place the empty carafe on the heating plate. Run a full brew cycle with the vinegar solution.
3. **Soak:** After the cycle, turn off the coffee maker and let the solution sit in the carafe and reservoir for at least 15-30 minutes, or longer for heavy buildup.
4. **Rinse Cycles:** Discard the vinegar solution. Fill the water reservoir with fresh, cold water and run several full brew cycles (at least 3) to rinse out any remaining vinegar taste or odor.



Figure 3: Side angled view of the BELLA PRO 12 Cup Flavor Infusion Coffee Maker. This view provides a comprehensive look at the appliance's design, including the water tank, main body, and carafe, illustrating its compact yet functional form.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	Coffee maker not plugged in; power outage; brew cycle not started; water reservoir empty.	Ensure unit is plugged in. Check power supply. Press the BREW button. Fill water reservoir.

Problem	Possible Cause	Solution
Coffee is too weak.	Not enough coffee grounds; coffee grounds too coarse; "BOLD" setting not selected.	Add more coffee grounds. Use finer grind. Select the BOLD setting.
Coffee overflows from brew basket.	Too much coffee grounds; filter clogged; carafe not properly placed; carafe removed for too long during brewing.	Reduce coffee grounds. Clean filter. Ensure carafe is correctly positioned. Replace carafe quickly during pause & serve.
Coffee tastes bad.	Old coffee grounds; dirty coffee maker; poor water quality.	Use fresh coffee grounds. Clean coffee maker thoroughly, including descaling. Use filtered water.
Unit leaks.	Water reservoir overfilled; carafe not properly seated; loose parts.	Do not overfill past MAX line. Ensure carafe is correctly placed. Check for any loose components.

SPECIFICATIONS

Feature	Detail
Brand	BELLA
Model Name	90078
Color	Stainless Steel
Special Feature	Programmable
Coffee Maker Type	Coffee Infuser
Operation Mode	Fully Automatic
Included Components	Carafe
Product Dimensions	7.1 x 11.7 x 13.58 inches
Item Weight	10 pounds
UPC	829486900785
Manufacturer	Bella
Unit Count	12.0 Count

© 2023 BELLA. All rights reserved.
For customer support, please visit bellahousewares.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question