

[Manuals.plus](#) /

› [RCA](#) /

› RCA Luna Max RCT6T48Q35 14-inch Tablet User Manual

RCA RCT6T48Q35

RCA Luna Max RCT6T48Q35 14-inch Tablet User Manual

Model: RCT6T48Q35

INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your RCA Luna Max RCT6T48Q35 14-inch tablet. Please read this manual thoroughly before using your device to ensure proper function and longevity.

PACKAGE CONTENTS

Verify that all items are present in the package:

- RCA Luna Max 14-inch Tablet
- Detachable Keyboard
- AC Adapter
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the tablet's components and ports.



Image: RCA Luna Max 14-inch tablet with its detachable keyboard, showing the Android home screen with various app icons.

Luna Max



14 pulgadas de pantalla (Multi-Toque)
1920 x 1080 Pantalla IPS
Android 10
Almacenamiento de 128GB (Micro SD expandible)
Compatible con Google Play
Cámaras de delanteras
Puerto de USB x 2
La batería dura hasta 4 horas

HDMI
WiFi
Bluetooth

Luna Max
TABLETTE AVEC CLAVIER DÉTACHABLE



android Google Play

14 POUCES
Écran

3Go
RAM

128Go
Mémoire

1920 x 1080
Écran tactile IPS

Caméra frontale

Maximale de 4 heures

Luna Max



14 inch Multi-Touch Display
1920 x 1080 IPS Display
Android™ 10
128GB Storage (Micro SD Expandable)
Compatible with Google Play
Front Camera
USB port x 2
Battery life up to 4 hours

Écran tactile multipointe de 14 pouces
Écran IPS 1920 x 1080
Android 10
Capacité de 128 Go (extensible avec microcarte SD)
Compatible avec Google Play
Caméras frontale
Port USB x 2
Batterie d'une autonomie maximale de 4 heures

RCA
Premier

SpaceMaker™ Clavier pliable




Image: Detailed diagram illustrating the location of ports and buttons on the RCA Luna Max tablet.

Tablet Components

- **Display:** 14-inch IPS FHD Touchscreen (1920 x 1080 pixels)

- **Front Camera:** For video calls and photos.
- **Microphone:** For audio input.
- **Volume +/-:** Adjusts audio output level.
- **Power/Standby Button:** Turns the device on/off or puts it into standby mode.
- **Charging Indicator:** Displays the current charging status.
- **Docking Pins:** Connects the tablet to the detachable keyboard.
- **Reset Button:** A small pinhole for performing a system reset (use a thin, non-sharp object).
- **Headphones Jack:** 3.5mm audio output port.
- **USB Ports (x2):** For connecting USB devices such as flash drives or peripherals.
- **HDMI Port:** For connecting to an external display.
- **DC IN Jack:** For connecting the power adapter.
- **Micro SD Card Slot:** For expanding storage capacity.

INITIAL SETUP

Charging the Tablet

1. Connect the AC adapter to the DC IN jack on the tablet.
2. Plug the AC adapter into a standard power outlet.
3. Allow the tablet to charge fully before its first use. The charging indicator light will show the charging status.

Powering On/Off

- **To Power On:** Press and hold the Power/Standby button until the screen illuminates.
- **To Power Off:** Press and hold the Power/Standby button, then select "Power off" from the on-screen options.
- **Standby Mode:** Briefly press the Power/Standby button to put the tablet into standby mode or to wake it up.

Attaching the Detachable Keyboard

1. Align the tablet's docking pins with the corresponding slots on the detachable keyboard.
2. Gently push the tablet down until it securely connects to the keyboard. A magnetic connection will help guide it into place.



Image: Illustrates the process of attaching the tablet to the detachable keyboard, highlighting the secure connection.

OPERATING INSTRUCTIONS

Basic Navigation (Android 10)

Your tablet runs on Android 10. Use the following touch gestures for navigation:

- **Tap:** To select an item, open an app, or activate a button.
- **Tap & Hold:** To access contextual menus, move icons, or select text.
- **Swipe:** To navigate between screens, scroll through content, or dismiss notifications.
- **Pinch:** To zoom in or out on images, maps, or web pages.

Connecting to Wi-Fi

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle the Wi-Fi switch to the 'On' position.
3. Select your desired network from the list of available networks.
4. Enter the network password if prompted, then tap **Connect**.

Bluetooth Pairing

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle the Bluetooth switch to the 'On' position.
3. Ensure the device you wish to pair (e.g., headphones, speaker) is in pairing mode.

4. Select the device from the list of available devices and follow any on-screen prompts to complete the pairing process.

Using the Detachable Keyboard

Once securely attached, the keyboard functions like a standard laptop keyboard. The tablet will automatically detect and enable it.

- Use the keys for typing text and navigating the Android interface.
- The keyboard may include dedicated function keys for quick access to system settings like volume or screen brightness.

External Storage (MicroSD Card)

1. Locate the Micro SD card slot on the tablet (refer to Product Overview diagram).
2. Insert a Micro SD card (up to 128GB, not included) into the slot until it clicks into place.
3. The tablet will prompt you to set up the card for either portable storage (for media files) or internal storage (to expand app storage). Follow the on-screen instructions.

Connecting to an External Display (HDMI)

1. Connect an HDMI cable (not included) from the tablet's HDMI port to an HDMI input on your television or monitor.
2. Select the corresponding HDMI input on your external display using its remote control or menu.
3. The tablet's display will be mirrored or extended to the external screen automatically.

MAINTENANCE

Cleaning

- Use a soft, lint-free cloth, slightly dampened with water, to clean the screen and tablet body.
- Do not use harsh chemical cleaners, liquid sprays, or aerosols directly on the screen or any part of the tablet.

Battery Care

- Avoid exposing the tablet to extreme temperatures (hot or cold), as this can degrade battery performance.
- For optimal battery longevity, avoid completely draining the battery frequently. Charge it before it reaches very low levels.
- If storing the tablet for an extended period, charge it to approximately 50% before storage.

TROUBLESHOOTING

Device Not Responding

- Press and hold the Power/Standby button for 10-15 seconds to force a restart of the tablet.
- If the tablet remains unresponsive, locate the small reset pinhole (refer to the Product Overview diagram) and gently press it with a thin, non-sharp object (e.g., a paperclip) to perform a hard reset.

Wi-Fi Connection Issues

- Ensure Wi-Fi is enabled in the tablet's Settings.
- Restart your Wi-Fi router and modem.
- In tablet settings, 'forget' the problematic Wi-Fi network and then attempt to reconnect.

Slow Performance

- Close unused applications running in the background.
- Clear cache data for frequently used apps in Settings > Apps.
- Ensure there is sufficient free storage space on the tablet.
- Restart the tablet regularly to clear temporary files and refresh the system.

TECHNICAL SPECIFICATIONS

Feature	Detail
Model	RCT6T48Q35
Display	14-inch IPS FHD Touchscreen (1920 x 1080 pixels)
Processor	Qualcomm Quad-Core, 1.3 GHz
RAM	3 GB
Internal Storage	128 GB Flash Storage
Expandable Storage	Micro SD card slot (up to 128 GB)
Operating System	Android 10
Connectivity	Wi-Fi (802.11g), Bluetooth
Ports	HDMI, 2x Full USB, Micro SD card slot, 3.5mm Headphone jack, DC IN
Front Camera	2 MP
Battery Life	Up to 4 hours (average)

WARRANTY AND SUPPORT

This RCA Luna Max tablet is covered by a manufacturer's 1-year limited warranty. For warranty claims or technical support, please refer to the contact information provided with your purchase documentation or visit the official RCA support website. Please retain your proof of purchase for warranty service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08LK99S9Z>

More documents and user manuals: <https://manuals.plus/>