

[Manuals.plus](#) /

› [BELLA](#) /

› BELLA 6qt Air Fryer Touchscreen Black User Manual

BELLA 90109

BELLA 6-Quart Touchscreen Air Fryer

MODEL: 90109

1. Introduction

Thank you for choosing the BELLA 6-Quart Touchscreen Air Fryer. This appliance is designed to provide a healthier alternative to traditional frying, using rapid air circulation to cook your favorite foods with little to no oil. Its intuitive touchscreen controls and versatile functions make meal preparation simple and efficient.



Figure 1: Front view of the BELLA 6-Quart Touchscreen Air Fryer, showcasing its digital display and control panel.

2. Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or air fryer in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.

- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the air fryer is placed on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.

3. Setup and First Use

1. **Unpack:** Carefully remove the air fryer and all packaging materials. Ensure all components are present.
2. **Clean Components:** Before first use, wash the removable basket and crisper plate thoroughly with warm, soapy water. Rinse and dry completely. The basket and crisper plate are dishwasher safe.
3. **Placement:** Place the air fryer on a stable, level, heat-resistant surface. Ensure there is adequate space (at least 6 inches) around the back and sides for proper ventilation.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

4. Operating Instructions

The BELLA Air Fryer features a user-friendly touchscreen interface for easy operation.

1. **Power On:** Plug in the air fryer. The digital display will illuminate.
2. **Prepare Food:** Place your food inside the air fryer basket. Ensure not to overfill the basket to allow for even cooking.
3. **Insert Basket:** Slide the basket firmly into the air fryer until it clicks into place.
4. **Select Function:** Press the 'MENU' button to cycle through the preset cooking functions **AIR FRY, ROAST, BROIL, BAKE, REHEAT, KEEP WARM, PIZZA, and DEHYDRATE**. The selected function will blink.
5. **Adjust Temperature:** Use the 'TEMP' up and down arrows to set your desired cooking temperature (e.g., 370°F for many recipes). The temperature range is typically from 170°F to 400°F.
6. **Adjust Time:** Use the 'TIME' up and down arrows to set your desired cooking time in minutes.
7. **Start Cooking:** Press the 'POWER/START' button to begin the cooking cycle. The air fryer will start preheating if necessary, then begin cooking.
8. **Shaking/Turning Food:** For best results, especially with smaller items or larger quantities, pull out the basket halfway through the cooking time and shake or turn the food. Reinsert the basket to resume cooking.
9. **End of Cycle:** The air fryer will beep when the cooking cycle is complete, and the display will show 'END'.

5. Maintenance and Cleaning

Proper maintenance ensures the longevity and optimal performance of your air fryer.

- 1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
- 2. **Clean Basket and Crisper Plate:** The air fryer basket and crisper plate are non-stick and dishwasher safe. For stubborn residue, soak them in warm, soapy water before cleaning. Avoid abrasive cleaning tools that could damage the non-stick coating.
- 3. **Clean Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- 4. **Clean Interior:** Wipe the interior with a damp cloth. If necessary, use a small amount of mild dish soap. Ensure the interior is completely dry before next use.
- 5. **Storage:** Store the air fryer in a cool, dry place with the power cord neatly wrapped.

6. Troubleshooting

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; basket not fully inserted.	Ensure power cord is securely plugged into a working outlet. Push the basket firmly into the unit until it clicks.
Food is not cooked evenly.	Basket is overfilled; food not shaken/turned.	Do not overfill the basket. Shake or turn food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; fatty foods cooking.	Clean the basket and crisper plate thoroughly after each use. For fatty foods, add a small amount of water to the bottom of the basket to prevent smoke.
Food is not crispy.	Not enough oil (if applicable); temperature too low; cooking time too short.	Lightly coat food with oil. Increase temperature or cooking time as needed.

7. Specifications

Feature	Value
Brand	BELLA
Model Number	90109
Capacity	6 Quarts
Color	Black
Wattage	1800 Watts
Voltage	120 Volts (AC)
Control Method	Touch
Nonstick Coating	Yes

Feature	Value
Dishwasher Safe Parts	Yes
Material	Stainless Steel (Outer), Steel (Inner)
Item Weight	11.95 pounds (5.43 Kilograms)
Product Dimensions	8.07 x 5.31 x 2.76 inches

8. Warranty and Support

For warranty information, product registration, or customer support, please refer to the documentation included with your purchase or visit the official BELLA website. You may also contact BELLA customer service directly for assistance with any product-related inquiries.

© 2024 BELLA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question