

[Manuals.plus](#) /

› [YCCTEAM](#) /

› YCCTEAM Wired Controller User Manual

YCCTEAM Wired Controller for Xbox One/Xbox Series X|S

YCCTEAM Wired Controller User Manual

Model: Wired Controller for Xbox One/Xbox Series X|S

INTRODUCTION

Thank you for purchasing the YCCTEAM Wired Controller. This manual provides detailed instructions on how to set up, operate, and maintain your controller, ensuring an optimal gaming experience. Please read this manual thoroughly before use.

This controller is designed for use with Xbox One, Xbox One S, Xbox One X, Xbox Series S, Xbox Series X, and Windows 7/8/10 PCs.

PRODUCT FEATURES

- **Wide Compatibility:** Perfectly compatible with Microsoft Xbox systems, including Xbox One, Xbox One X, Xbox One S, Xbox Series S, Xbox Series X, and Windows 7/8/10.
- **Ergonomic Design & Quick Response:** Asymmetrical design with non-slip grips and contour design for comfortable handling. High sensitivity and quick response buttons for immediate reaction and tactile feedback.
- **Dual Vibration Function:** Integrated vibrating motors in the side grips provide a realistic gaming experience, enhancing impact and action.
- **Special 3.5mm Audio Jack:** External 3.5mm audio jack allows you to plug in headphones for improved gaming experience and free chat with friends.
- **Stable Wired Connection:** Reduces input latency compared to wireless controllers and eliminates the need for batteries or charging.

PACKAGE CONTENTS

- 1 x YCCTEAM Wired Controller (White)
- 1 x User Manual

SETUP GUIDE

Follow these steps to connect your YCCTEAM Wired Controller to your console or PC:

1. Connect to Xbox Console:

Locate an available USB port on your Xbox One, Xbox One S, Xbox One X, Xbox Series S, or Xbox Series X console. Insert the USB plug of the controller cable firmly into the USB port. The controller will automatically be recognized by the console and is ready for use.



Image: The YCCTEAM wired controller connected via its USB cable to an Xbox console, with a television displaying a racing game in the background. This illustrates the simple plug-and-play setup.

2. Connect to PC (Windows 7/8/10):

Locate an available USB port on your Windows PC. Insert the USB plug of the controller cable firmly into the USB port. Your PC will automatically detect and install the necessary drivers. If drivers do not install automatically, ensure your Windows operating system is up to date. The controller will be ready for use once drivers are installed.

Note: This controller uses a wired connection, eliminating the need for battery charging or wireless pairing. Simply plug and play.

OPERATING INSTRUCTIONS

Familiarize yourself with the controller's layout and functions for optimal gameplay.



Image: A clear top-down view of the YCCTEAM wired controller, showcasing its white body with black grips, dual analog sticks, D-pad, ABXY buttons, and central function buttons. This provides a visual reference for button layout.

Controller Layout and Functions:

- **Analog Joysticks (Left & Right):** Used for precise movement and camera control. The 360° rotation allows for fluid and accurate input.
- **D-Pad (Directional Pad):** Used for directional input, menu navigation, and specific in-game actions.
- **ABXY Buttons:** Standard action buttons (A, B, X, Y) for various in-game commands.
- **Shoulder Buttons (LB, RB) & Triggers (LT, RT):** Located on the top of the controller, used for firing, aiming, and other contextual actions. The triggers are sensitive for precise control.
- **Menu Button:** Typically used to access in-game menus or pause the game.
- **View Button:** Often used to change camera views or access specific game information.
- **Xbox Button:** Central button to access the Xbox Guide or dashboard.

Special Features:

- **Dual Vibration Feedback:** The controller features two built-in vibration motors that provide haptic feedback during gameplay, enhancing immersion by simulating in-game events like crashes, explosions, or impacts.

Feedback mit zwei Motorvibrationen

Geeignet für Renn- und Schießspiele, sorgt für
Ein realistisches Spielerlebnis



Image: The YCCTEAM wired controller shown with blue wave effects emanating from its grips, superimposed over a racing game scene on a screen. This visually represents the dual motor vibration feedback feature, enhancing realism in games.

- **3.5mm Audio Jack:** A standard 3.5mm audio jack is located at the bottom of the controller. Plug in your compatible headset to enjoy in-game audio and communicate with other players.

7.2ft USB-Kabel- Nur Plug & Play!

Entfernen Sie die Einschränkungen von Entfernung und Standort



Image: A hand plugging a 3.5mm audio jack into the bottom of the YCCTEAM wired controller, with a gaming headset visible in the background. This demonstrates the audio functionality for communication and immersive sound.

MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your YCCTEAM Wired Controller, please follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the controller's finish.
- **Storage:** When not in use, store the controller in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Avoid wrapping the cable too tightly around the controller to prevent damage to the wire.
- **Handling:** Do not drop the controller or subject it to strong impacts. Avoid pulling the cable forcefully when disconnecting it from the console or PC; always grasp the USB plug.
- **Liquid Exposure:** Keep the controller away from liquids. If liquid spills on the controller, immediately disconnect it and allow it to dry completely before attempting to use it again.

TROUBLESHOOTING

If you encounter any issues with your YCCTEAM Wired Controller, please refer to the following common problems and solutions:

- **Controller Not Responding:**
 - Ensure the USB cable is securely plugged into both the controller and the console/PC.
 - Try plugging the controller into a different USB port on your console or PC.
 - If on PC, check Device Manager to see if the controller is recognized and if there are any driver issues. Try updating or reinstalling drivers.
 - Restart your console or PC.
- **Vibration Not Working:**
 - Check in-game settings to ensure vibration feedback is enabled.
 - Some games may not support vibration or may have limited vibration effects.
 - Ensure the controller is properly connected.
- **Audio Jack Not Working:**
 - Ensure your headset is fully plugged into the 3.5mm audio jack on the controller.
 - Check your console's or PC's audio settings to ensure the controller's audio output is selected.
 - Test the headset with another device to confirm it is working correctly.
- **Buttons/Joysticks Unresponsive or Drifting:**
 - Ensure the controller is clean and free of debris around the buttons and joysticks.
 - Restart your console or PC.
 - If the issue persists, it may indicate a hardware problem.

If these steps do not resolve your issue, please contact YCCTEAM customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Controller Size	4.7 x 6.2 x 2.7 inches (approx. 11.9 x 15.7 x 6.8 cm)
Controller Weight	266 grams (approx. 0.58 lbs)
Connection Method	Wired USB Connection
Cable Length	2.2 meters / 7.2 feet
Audio Jack	Yes (3.5mm)
Vibration Feedback	Dual Motors
Compatibility	Xbox One, Xbox One S, Xbox One X, Xbox Series S, Xbox Series X, PC (Windows 7/8/10)

WARRANTY AND SUPPORT

This product is a third-party controller and not manufactured by Microsoft. YCCTEAM provides customer support for any

issues or inquiries regarding this product.

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official YCCTEAM website. Please retain your proof of purchase for warranty claims.

© 2023 YCCTEAM. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question