

## Xtrasaver QS-805

# Xtrasaver Ridgeway QS-805 Portable Bluetooth Speaker User Manual

Model: QS-805

[Introduction](#) [Product](#)

[Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## 1. INTRODUCTION

---

Thank you for purchasing the Xtrasaver Ridgeway QS-805 Portable Bluetooth Speaker. This powerful and versatile speaker system is designed to provide high-quality audio for various occasions. Featuring Bluetooth connectivity, USB/SD card playback, FM radio, AUX input, and a microphone input, it offers a complete audio solution. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure you get the best experience from your device.

## 2. PRODUCT OVERVIEW

---

### 2.1 Key Features

- Powerful 8-inch high-efficiency portable speaker system.
- Multifunction music player with intuitive controls.
- Integrated Bluetooth for wireless audio streaming.
- USB and SD card inputs for direct media playback.
- FM radio tuner.
- AUX input for connecting external audio devices.
- Microphone input with volume and echo control.
- Built-in rechargeable battery (2400 mAh) for extended use.
- Durable ABS cabinet with an extendable handle and rear wheels for easy portability.
- LED light effects.

### 2.2 Package Contents

- 1 x Ridgeway QS-805 Portable Speaker
- 1 x Wired Microphone
- 1 x Remote Control
- 1 x Charging Cable
- 1 x User Manual

## 2.3 Speaker Components and Controls



Figure 1: Front view of the Ridgeway QS-805 Portable Bluetooth Speaker, showcasing the main speaker grille and the dynamic LED light ring.



Figure 2: Rear view of the speaker, highlighting the integrated control panel, retractable handle, and transport wheels for easy mobility.



Figure 3: Detailed view of the control panel, showing inputs for MIC, AUX, USB, SD card, power switch, and various control knobs and buttons for audio adjustments and mode selection.



Figure 4: The wired microphone and charging cable supplied with the speaker, ready for use.



Figure 5: Side profile of the speaker, illustrating the extended handle and sturdy wheels for convenient transport.

The control panel (Figure 3) includes:

- **MIC Input:** 6.35mm jack for wired microphone.
- **ECHO Knob:** Adjusts microphone echo effect.
- **MIC VOL Knob:** Adjusts microphone volume.
- **BASS Knob:** Adjusts bass level.

- **TREBLE Knob:** Adjusts treble level.
- **VOL MAX Knob:** Master volume control.
- **AUX IN:** 3.5mm input for external audio devices.
- **USB Port:** For USB flash drives.
- **SD Card Slot:** For SD memory cards.
- **Power Input (AC 110V-240V):** For charging and direct power.
- **ON/OFF Switch:** Powers the unit on or off.
- **MODE Button:** Switches between Bluetooth, USB, SD, FM, and AUX modes.
- **LIGHT Button:** Controls the LED light effects.
- **Previous/Rewind Button:** Skips to previous track or rewinds.
- **Play/Pause Button:** Plays or pauses current track.
- **Next/Fast Forward Button:** Skips to next track or fast forwards.

## 3. SETUP

---

### 3.1 Charging the Speaker

1. Ensure the speaker is turned OFF using the ON/OFF switch on the control panel.
2. Connect the provided charging cable to the AC power input on the speaker.
3. Plug the other end of the charging cable into a standard AC 110V-240V, 50Hz-60Hz power outlet.
4. The charging indicator light (if present, refer to speaker display) will illuminate to show charging status.
5. Allow approximately 4-6 hours for a full charge. The indicator light will change or turn off when fully charged.
6. For optimal battery life, avoid completely draining the battery before recharging.

### 3.2 Initial Power On

1. After charging, disconnect the charging cable.
2. Flip the ON/OFF switch to the 'ON' position.
3. The speaker will power on, and the display will show the current mode (e.g., "BLUE" for Bluetooth).

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Mode Selection

Press the **MODE** button repeatedly to cycle through available input modes: Bluetooth, USB, SD, FM Radio, and AUX.

### 4.2 Bluetooth Pairing

1. Turn on the speaker and switch to Bluetooth mode using the **MODE** button. The display will show "BLUE" and a pairing indicator will flash.
2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.).
3. Search for available Bluetooth devices. You should find "QS-805" in the list.
4. Select "QS-805" to pair. Once connected, the speaker will emit a confirmation sound, and the pairing indicator will stop flashing.
5. You can now play audio from your device through the speaker.

### 4.3 USB/SD Card Playback

1. Insert a USB flash drive or SD card (pre-loaded with MP3 audio files) into the respective port/slot.
2. Switch the speaker to USB or SD mode using the **MODE** button. The speaker will automatically detect and begin playing audio files.
3. Use the Previous/Rewind, Play/Pause, and Next/Fast Forward buttons to control playback.

#### 4.4 FM Radio Operation

1. Switch the speaker to FM Radio mode using the **MODE** button.
2. Press and hold the **Play/Pause** button to initiate an automatic station scan. The speaker will scan and save available FM stations.
3. Use the Previous/Rewind and Next/Fast Forward buttons to navigate between saved stations.

#### 4.5 AUX Input

1. Connect one end of a 3.5mm audio cable (not included) to the AUX IN port on the speaker.
2. Connect the other end of the cable to the audio output of your external device (e.g., MP3 player, laptop).
3. Switch the speaker to AUX mode using the **MODE** button.
4. Control playback and volume from your external device.

#### 4.6 Microphone Usage

1. Plug the wired microphone into the **MIC Input** jack.
2. Adjust the microphone volume using the **MIC VOL** knob.
3. Adjust the echo effect using the **ECHO** knob.
4. Ensure the master volume (VOL MAX) is set to an appropriate level.

#### 4.7 LED Light Control

Press the **LIGHT** button to turn the LED light effects on or off.

#### 4.8 Volume and Tone Control

- Use the **VOL MAX** knob to adjust the overall speaker volume.
- Use the **BASS** knob to increase or decrease the bass frequencies.
- Use the **TREBLE** knob to increase or decrease the treble frequencies.

#### 4.9 Portability

Extend the top handle and tilt the speaker to engage the rear wheels for easy transport. Retract the handle when not in use.

### 5. MAINTENANCE

---

#### 5.1 Cleaning

- Always turn off and unplug the speaker before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- For stubborn dirt, lightly dampen the cloth with water and a mild detergent, then wipe dry immediately.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- Keep liquids away from the control panel and input ports.

#### 5.2 Battery Care

- Recharge the battery regularly, even if the speaker is not used frequently, to maintain battery health.
- Avoid storing the speaker in extreme temperatures (hot or cold) as this can degrade battery performance.
- If the speaker will not be used for an extended period, charge it to about 50% before storage and recharge every few months.

### 5.3 Storage

- Store the speaker in a cool, dry place, away from direct sunlight and moisture.
- Keep the speaker covered to prevent dust accumulation.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted. Power switch is off.	Charge the speaker battery. Ensure the ON/OFF switch is in the 'ON' position.
No sound from speaker.	Volume is too low. Incorrect input mode selected. Audio cable not connected properly (AUX mode). Bluetooth device not connected or volume low.	Increase the VOL MAX knob. Press the MODE button to select the correct input. Check AUX cable connection. Ensure Bluetooth is paired and device volume is up.
Bluetooth not connecting.	Speaker not in Bluetooth mode. Device Bluetooth is off. Speaker is already paired to another device. Too far from speaker.	Switch speaker to Bluetooth mode. Enable Bluetooth on your device. Disconnect from other devices or restart speaker. Move device closer to the speaker (within 10 meters).
USB/SD playback not working.	Incorrect mode selected. USB/SD card not inserted correctly. Unsupported file format. Corrupted files.	Switch to USB or SD mode. Re-insert USB/SD card firmly. Ensure files are in MP3 format. Try different USB/SD card or files.
FM radio static/poor reception.	Weak signal. Interference.	Relocate the speaker to an area with better reception. Ensure no other electronic devices are causing interference.
Microphone not working.	Microphone not plugged in. MIC VOL knob is low. Master volume (VOL MAX) is low.	Ensure microphone is securely plugged into MIC Input. Increase MIC VOL knob. Increase VOL MAX knob.

## 7. SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Model Name	QS-805
Brand	Xtrasaver
Speaker Type	Woofer
Woofer Diameter	8 Inches
Connectivity Technology	Bluetooth, USB, SD Card, AUX
Wireless Communication	Bluetooth
Audio Input	USB, SD Card, Bluetooth, FM Radio, AUX
Output Wattage	25 Watts
Frequency Response	60 Hz - 18 KHz
Sensitivity	85 dB ± 2
Power Source	Battery, AC 110V - 240V, 50Hz - 60Hz
Battery Type	Rechargeable Lithium
Battery Capacity	2400 mAh
Control Method	Remote Control, On-device buttons/knobs
Color	Black
Product Dimensions (D x W x H)	21 x 25.4 x 43.2 cm (8.27 x 10 x 17 inches)
Product Weight	6.61 Pounds (approx. 3 kg)
Waterproof	No
Compatible Devices	Laptop, Smartphone, MP3 Players

## 8. WARRANTY & SUPPORT

---

### 8.1 Warranty Information

The Xtrasaver Ridgeway QS-805 Portable Bluetooth Speaker comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package or contact your retailer for specific warranty terms and conditions. This warranty typically covers manufacturing defects and material faults under normal use.

### 8.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Xtrasaver customer support or your authorized dealer. Have your product model number (QS-805) and purchase information ready when contacting support.

