#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Coby /
- > Coby Wireless & Wired Headphones Instruction Manual

# Coby CHBT590

# **Coby Wireless & Wired Headphones Instruction Manual**

Model: CHBT590 Brand: Coby

# 1. Introduction and Overview

Thank you for choosing the Coby Wireless & Wired Headphones. These versatile over-ear headphones offer both seamless Bluetooth connectivity and a reliable 3.5mm AUX wired option, ensuring uninterrupted audio for various devices. Designed for comfort and portability, they feature HiFi stereo sound with deep bass, a built-in microphone for hands-free calling, and a foldable structure for easy storage. Enjoy up to 5 hours of continuous playtime, making them ideal for travel, work, and leisure.





Image: Front view of the Coby Wireless & Wired Headphones in white, showcasing the over-ear design and control buttons on the earcup.

# 2. What's in the Box

Please check the package contents to ensure all items are present:

- Coby Wireless Bluetooth Headphones
- 3.5mm Aux Cable
- User Manual (this document)

# 3. PRODUCT FEATURES

The Coby Wireless & Wired Headphones are engineered with features to enhance your audio experience:

- Versatile Connectivity: Supports Bluetooth 5.3 for wireless freedom and includes a 3.5mm AUX input for wired connections.
- High-Fidelity Audio: Experience rich HiFi stereo sound with powerful deep bass, delivered through 40mm

dynamic drivers.

- Hands-Free Communication: A built-in microphone allows for clear hands-free calls and voice commands.
- **Intuitive Controls:** Easy-to-use button controls on the earcup for power, play/pause, volume adjustment, track navigation, and call management.
- **Portable & Comfortable Design:** Lightweight (4 ounces) and foldable, with an adjustable headband and comfortable over-ear earcups, making them ideal for travel and extended wear.
- Extended Playtime: Enjoy up to 5 hours of continuous audio playback on a single charge, thanks to the rechargeable battery.



Image: A detailed diagram highlighting key features of the headphones, including the adjustable headband, 3.5mm AUX input, Bluetooth wireless capability, comfortable earcups, and the layout of the seamless control buttons.



Image: The Coby headphones shown in their folded, compact state, emphasizing their travel-friendly design for easy and safe storage.



Image: A man wearing the headphones in a winter setting, accompanied by icons indicating the 3.5mm AUX input and the built-in microphone, highlighting connectivity options.



Image: A man wearing the headphones while walking outdoors, with text overlay emphasizing the powerful and clear audio quality available anywhere.

#### **Official Product Video**

Your browser does not support the video tag.

Video: An official product video showcasing the Coby Wireless Bluetooth Headphones, highlighting their key features, design, and versatility for various usage scenarios. This video provides a visual overview of the product's capabilities and benefits.

# 4. SETUP

# 4.1 Bluetooth Pairing

- 1. Charge the Headphones: Before first use, fully charge the headphones using a compatible USB charger.
- 2. **Power On:** Press and hold the Power button on the earcup until the LED indicator flashes blue and red, indicating pairing mode.
- 3. Activate Bluetooth on Your Device: Go to the Bluetooth settings on your smartphone, tablet, or computer.

- 4. Select 'CHBT590': In the list of available devices, select 'CHBT590' to connect.
- 5. **Connection Confirmation:** The LED indicator on the headphones will turn solid blue, and a voice prompt will confirm the successful connection.

#### **4.2 Wired Connection**

To use the headphones in wired mode:

- 1. Insert one end of the included 3.5mm AUX cable into the AUX port on the headphones.
- 2. Insert the other end of the 3.5mm AUX cable into the audio output jack of your device (e.g., PC, phone, tablet).
- 3. The headphones will automatically switch to wired mode.

#### 5. OPERATING INSTRUCTIONS

Familiarize yourself with the control buttons located on the earcup:

Function	Action
Power On/Off	Press and hold the Power button () for 3 seconds.
Play/Pause	Press the Play/Pause button (▶∥) once.
Volume Up	Press the '+' button once.
Volume Down	Press the '-' button once.
Next Track	Press and hold the '+' button.
Previous Track	Press and hold the '-' button.
Answer/End Call	Press the Play/Pause button (▶∥) once during an incoming call or active call.
Reject Call	Press and hold the Play/Pause button (▶  ) for 2 seconds during an incoming call.
Redial Last Number	Double-press the Play/Pause button (▶∥).

#### 6. MAINTENANCE

Proper care will extend the life of your Coby headphones:

- Cleaning: Use a soft, dry cloth to wipe the surfaces of the headphones. For earcups, gently wipe with a slightly damp cloth and allow to air dry completely. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use, fold the headphones and store them in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. Recharge the headphones regularly, even if not used for extended periods.
- Water Resistance: These headphones are water repellent. Avoid submerging them in water or exposing them to heavy rain.

# 7. TROUBLESHOOTING

If you encounter issues with your headphones, please refer to the following common solutions:

#### • Headphones will not power on:

Ensure the headphones are fully charged. Connect them to a power source using the Micro USB cable and allow them to charge for at least 30 minutes before attempting to power on again.

#### • Cannot pair with Bluetooth device:

Make sure the headphones are in pairing mode (LED flashing blue and red). Ensure Bluetooth is enabled on your device and it is within 33 feet (10 meters) of the headphones. Try turning Bluetooth off and on again on your device, or restarting both the headphones and your device.

#### • No sound from headphones:

Check the volume level on both the headphones and your connected device. Ensure the headphones are properly paired via Bluetooth or the AUX cable is securely connected. Test with a different audio source or device.

#### • Poor sound quality or intermittent connection:

Move closer to your Bluetooth device to reduce interference. Avoid obstacles between the headphones and your device. Ensure the headphones are fully charged. If using wired mode, check the AUX cable for damage and ensure it's fully inserted.

#### • Microphone not working:

Ensure the headphones are properly connected to your device. Check your device's audio input settings to confirm the headphones' microphone is selected. Test the microphone with a different application or device.

#### 8. Specifications

Feature	Detail
Model Name	Wireless Headphones - Bluetooth Headphones Over-Ear Headset with Mic
Connectivity Technology	Wireless, Wired
Wireless Communication Technology	Bluetooth
Bluetooth Version	5.3
Bluetooth Range	33 Feet (10 meters)
Headphones Jack	3.5 mm Jack
Audio Driver Size	40 Millimeters
Audio Driver Type	Dynamic Driver
Battery Life	5 Hours (Playtime)

Feature	Detail
Control Type	Button Control
Ear Placement	Over Ear
Form Factor	On Ear
Item Weight	4 ounces
Product Dimensions	1.5 x 3 x 6 inches
Material	Acrylonitrile Butadiene Styrene (ABS)
Water Resistance Level	Water Repellent
Compatible Devices	Bluetooth-enabled devices
Manufacturer	Summit Electronics, LLC
UPC	083832847210

### 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Coby website. Keep your proof of purchase for any warranty claims.

© 2024 Coby. All rights reserved.

# **Related Documents - CHBT590**



# Coby CHBT590 Wireless Headphones Instruction Manual


Instruction manual for the Coby CHBT590 Wireless Headphones, covering setup, operation, music controls, and warranty information.

FCC ID: 2AMSOCHBT835



# COBY CHBT835 Wireless Bluetooth Headphones User Manual

 Comprehensive user manual for the COBY CHBT835 wireless Bluetooth headphones, covering setup, controls, charging, specifications, safety, and warranty information.




#### COBY CHBT84FD Audiodynamic App-Enabled Headphones User Manual

User manual for the COBY CHBT84FD Audiodynamic App-Enabled Headphones. Learn about setup, controls, app integration, specifications, safety, and warranty information.



#### Coby DVD209 DVD Player Bottom Portion Replacement Guide

 A step-by-step repair guide from iFixit for replacing the bottom portion of a Coby DVD209 DVD player. Learn how to safely remove screws, disconnect cables, and access internal components.



#### CETW645 Active Noise Cancelling TWS Earbuds User Manual

User manual for the CETW645 Active Noise Cancelling TWS Earbuds with Hi-Res LCD Touchscreen Case. Learn about powering on/off, pairing, controls, troubleshooting, and specifications.



#### Coby MP201 USB MP3 Player Instruction Manual

Comprehensive instruction manual for the Coby MP201 USB MP3 Player, covering setup, features, controls, music playback, software installation, and troubleshooting.