

Coby CETW570WH

COBY True Wireless Sport Earbuds User Manual

Model: CETW570WH

INTRODUCTION

Thank you for choosing COBY True Wireless Sport Earbuds. These earbuds are designed to provide a seamless audio experience with advanced features like Bluetooth 5.3 connectivity, automatic pairing, and intuitive controls, perfect for active lifestyles. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new earbuds to ensure optimal performance and longevity.

1. PACKAGE CONTENTS

Before you begin, please ensure all items are present in the package:

- COBY True Wireless Sport Earbuds
- Charging Case
- Charging Cable
- 2 Extra Pairs of Ear Gels (S/M)
- User Manual (this document)

2. SETUP GUIDE

2.1 Charging the Earbuds and Case

For first-time use, fully charge the earbuds and the charging case. The charging case holds two extra charges, providing up to 15 hours of total battery life.

1. Place the earbuds into their respective slots in the charging case. Ensure they are seated correctly.
2. Connect the charging cable to the charging port on the case and the other end to a USB power source (e.g., wall adapter, computer USB port).
3. The LED indicators on the case and earbuds will show charging status. Once fully charged, the indicators will change or turn off.



Image: Earbuds securely placed within the charging case, ready for charging.



Image: The earbuds displayed alongside their open charging case, illustrating how they fit.

2.2 Initial Pairing (Auto-Pairing)

Your COBY earbuds feature auto-pairing for convenience.

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, etc.), go to Bluetooth settings and enable Bluetooth.
4. Search for available devices and select "COBY CETW570WH" (or similar name) from the list.
5. Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.
6. After the initial pairing, the earbuds will automatically connect to your last paired device when removed from the case.



Image: A close-up view of the white COBY True Wireless Sport Earbuds, highlighting their design.

3. OPERATING INSTRUCTIONS

3.1 Wearing the Earbuds

These earbuds are designed with rubberized ear hooks for a secure and comfortable fit, especially during sports and exercise.

1. Identify the left (L) and right (R) earbuds.
2. Gently insert the earbud into your ear canal.
3. Adjust the ear hook over the top of your ear until it feels snug and stable.
4. Ensure a good seal in your ear canal for optimal sound quality and bass response.



Image: A person wearing one of the COBY True Wireless Sport Earbuds, demonstrating the secure fit with the ear hook.

3.2 Playback and Call Controls

The earbuds feature intuitive button controls for managing your audio and calls:

Action	Control
Play/Pause Music	Single press on either earbud button
Next Track	Double press on the Right earbud button

Action	Control
Previous Track	Double press on the Left earbud button
Answer/End Call	Single press on either earbud button
Reject Call	Press and hold either earbud button for 2 seconds
Activate Voice Assistant (Siri/Google Assistant)	Triple press on either earbud button

3.3 Automatic Disconnection

To disconnect the earbuds from your device and begin charging, simply place them back inside the charging case and close the lid. They will automatically power off and start charging.

4. MAINTENANCE AND CARE

Proper care will extend the life of your earbuds and ensure consistent performance.

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the earbuds and charging case. Do not use abrasive cleaners, alcohol, or chemical solvents. Regularly clean the ear tips and charging contacts to prevent debris buildup.
- **Storage:** When not in use, always store the earbuds in their charging case to protect them from dust, dirt, and damage.
- **Battery Care:** To preserve battery life, avoid fully discharging the earbuds and case frequently. Charge them regularly, even if not in constant use. Store in a cool, dry place away from extreme temperatures.
- **Water Resistance:** While designed for sport, these earbuds are sweat-proof. Avoid submerging them in water or exposing them to heavy rain.

5. TROUBLESHOOTING

If you encounter any issues with your earbuds, please refer to the following common solutions:

Problem	Solution
Earbuds not pairing with device	<p>Ensure earbuds are charged and removed from the case.</p> <p>Turn off and on Bluetooth on your device.</p> <p>Forget the device in your Bluetooth settings and re-pair.</p> <p>Try pairing with another device to confirm earbud functionality.</p>
No sound from one or both earbuds	<p>Check the volume level on both your device and the earbuds.</p> <p>Ensure earbuds are properly connected to your device.</p> <p>Re-pair the earbuds.</p> <p>Clean any debris from the earbud speakers.</p>
Charging case not charging earbuds	<p>Ensure the charging cable is securely connected to both the case and the power source.</p> <p>Check if the power source is active.</p> <p>Clean the charging contacts on both the earbuds and the case.</p>

Problem	Solution
Poor sound quality or intermittent connection	Ensure you are within the 33-foot (10-meter) wireless range. Reduce interference by moving away from other wireless devices. Ensure the earbuds are properly seated in your ears.

6. SPECIFICATIONS




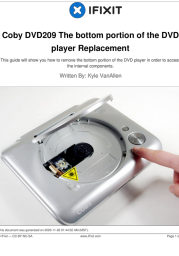


Feature	Detail
Model Name	CETW570WH
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.3
Wireless Range	Up to 33 feet (10 meters)
Battery Life (Earbuds)	Up to 5 hours per charge
Total Play Time (with Case)	Up to 15 hours
Control Type	Button Control, Siri, Google Assistant
Ear Placement	In Ear with Hook
Material	Acrylonitrile Butadiene Styrene (ABS)
Product Dimensions	5 x 2.24 x 6.46 inches
Item Weight	10 ounces
UPC	643620020470

7. WARRANTY AND SUPPORT

COBY products are designed for reliability and performance. For information regarding warranty coverage, please refer to the warranty card included in your product packaging or visit the official COBY website. Keep your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact COBY customer service through their official website or the contact information provided in your product documentation.

Note: Specifications are subject to change without notice.

	<p>CETW645 Active Noise Cancelling TWS Earbuds User Manual</p> <p>User manual for the CETW645 Active Noise Cancelling TWS Earbuds with Hi-Res LCD Touchscreen Case. Learn about powering on/off, pairing, controls, troubleshooting, and specifications.</p>
	<p>Coby CETW571 True Wireless Stereo Earbuds User Manual</p> <p>User manual for the Coby CETW571 True Wireless Stereo Earbuds, covering overview, charging, powering on/off, pairing, controls, troubleshooting, specifications, safety precautions, and FCC statements.</p>
	<p>Coby CETW516 True Wireless Stereo Earbuds User Manual</p> <p>User manual for Coby CETW516 true wireless stereo earbuds, detailing features, operation, charging, pairing, controls, troubleshooting, specifications, and safety guidelines.</p>
	<p>Coby DVD209 DVD Player Bottom Portion Replacement Guide</p> <p>A step-by-step repair guide from iFixit for replacing the bottom portion of a Coby DVD209 DVD player. Learn how to safely remove screws, disconnect cables, and access internal components.</p>
	<p>COBY CSTW530 True Wireless Party Speaker Instruction Manual</p> <p>Instruction manual for the COBY CSTW530 True Wireless Party Speaker, covering safety, setup, features, controls, specifications, and warranty information.</p>
	<p>Coby CSTW-43FD True Wireless Rugged Speaker Instruction Manual</p> <p>Instruction manual for the Coby CSTW-43FD True Wireless Rugged Speaker, covering setup, operation, features, and specifications.</p>

