

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Coby](#) /

› [Coby True Wireless Sport Earbuds User Manual](#)

## Coby CETW570BL

# Coby True Wireless Sport Earbuds User Manual

Model: CETW570BL

## INTRODUCTION

Thank you for purchasing the Coby True Wireless Sport Earbuds. This manual provides detailed instructions on how to set up, operate, and maintain your earbuds to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.



Image: The Coby True Wireless Sport Earbuds, one earbud placed inside its open charging case, and the other earbud shown separately, highlighting its design.

## WHAT'S IN THE BOX

Verify that all items are present in the package:

- True Wireless Earbuds (Left and Right)
- Charging Case
- Charging Cable
- 2 Extra Pairs of Ear Gels (Sizes S/M)
- User Manual (this document)

## FEATURES

**COBY®**

- Autopairing
- Activate Siri and Google Assistant
- Bluetooth® 5.0 Connectivity
- Wireless Range: 33 ft
- Built-in Microphone
- Press Play/Pause Button, Answer/Hang Up
- Rechargeable Carrying Case
- LED Battery Indicator
- 5 Hours Play Time on Single Charge; Up to 15 Hours Total Play Time with Included Charging Case



## PACKAGING CONTAINS

True Wireless Earbuds, Charging Case, Charging Cable, 2 Extra Pairs of Ear Gels (S/M), and User Manual

Image: A visual representation of the earbuds, charging case, and accessories, indicating the contents of the product packaging.

## SETUP

### 1. Initial Charging

Before first use, fully charge the earbuds and the charging case.

1. Place both earbuds into the charging case. Ensure they are seated correctly; the LED indicators on the earbuds should light up.
2. Connect the charging cable to the charging port on the case and the other end to a USB power source (e.g., computer, wall adapter).
3. The LED battery indicator on the charging case will show charging status. Allow approximately 1-2 hours for a full charge.
4. Once fully charged, the LED indicators will change or turn off, depending on the model.

### 2. Pairing with Your Device (Autopairing)

The earbuds feature automatic pairing for convenience.

1. Ensure Bluetooth is enabled on your smartphone, tablet, or other audio device.
2. Open the charging case and remove both earbuds. They will automatically power on and enter pairing mode.

3. On your device, search for Bluetooth devices and select "Coby Earbuds" (or similar name) from the list.
4. Once connected, you will hear an audible confirmation, and the earbud LEDs may stop flashing.
5. For subsequent uses, simply remove the earbuds from the case, and they will automatically connect to the last paired device.



Image: Both Coby True Wireless Sport Earbuds are shown outside their charging case, illustrating their readiness for use or pairing.

## OPERATING INSTRUCTIONS

---

### Wearing the Earbuds

The earbuds are designed with rubberized ear hooks for a secure and comfortable fit, especially during sports and exercise.

1. Identify the Left (L) and Right (R) earbuds.
2. Gently insert the earbud into your ear canal.
3. Adjust the ear hook over the top of your ear until it feels secure and comfortable.
4. Experiment with the included ear gel sizes (S/M) to find the best fit for optimal sound quality and comfort.

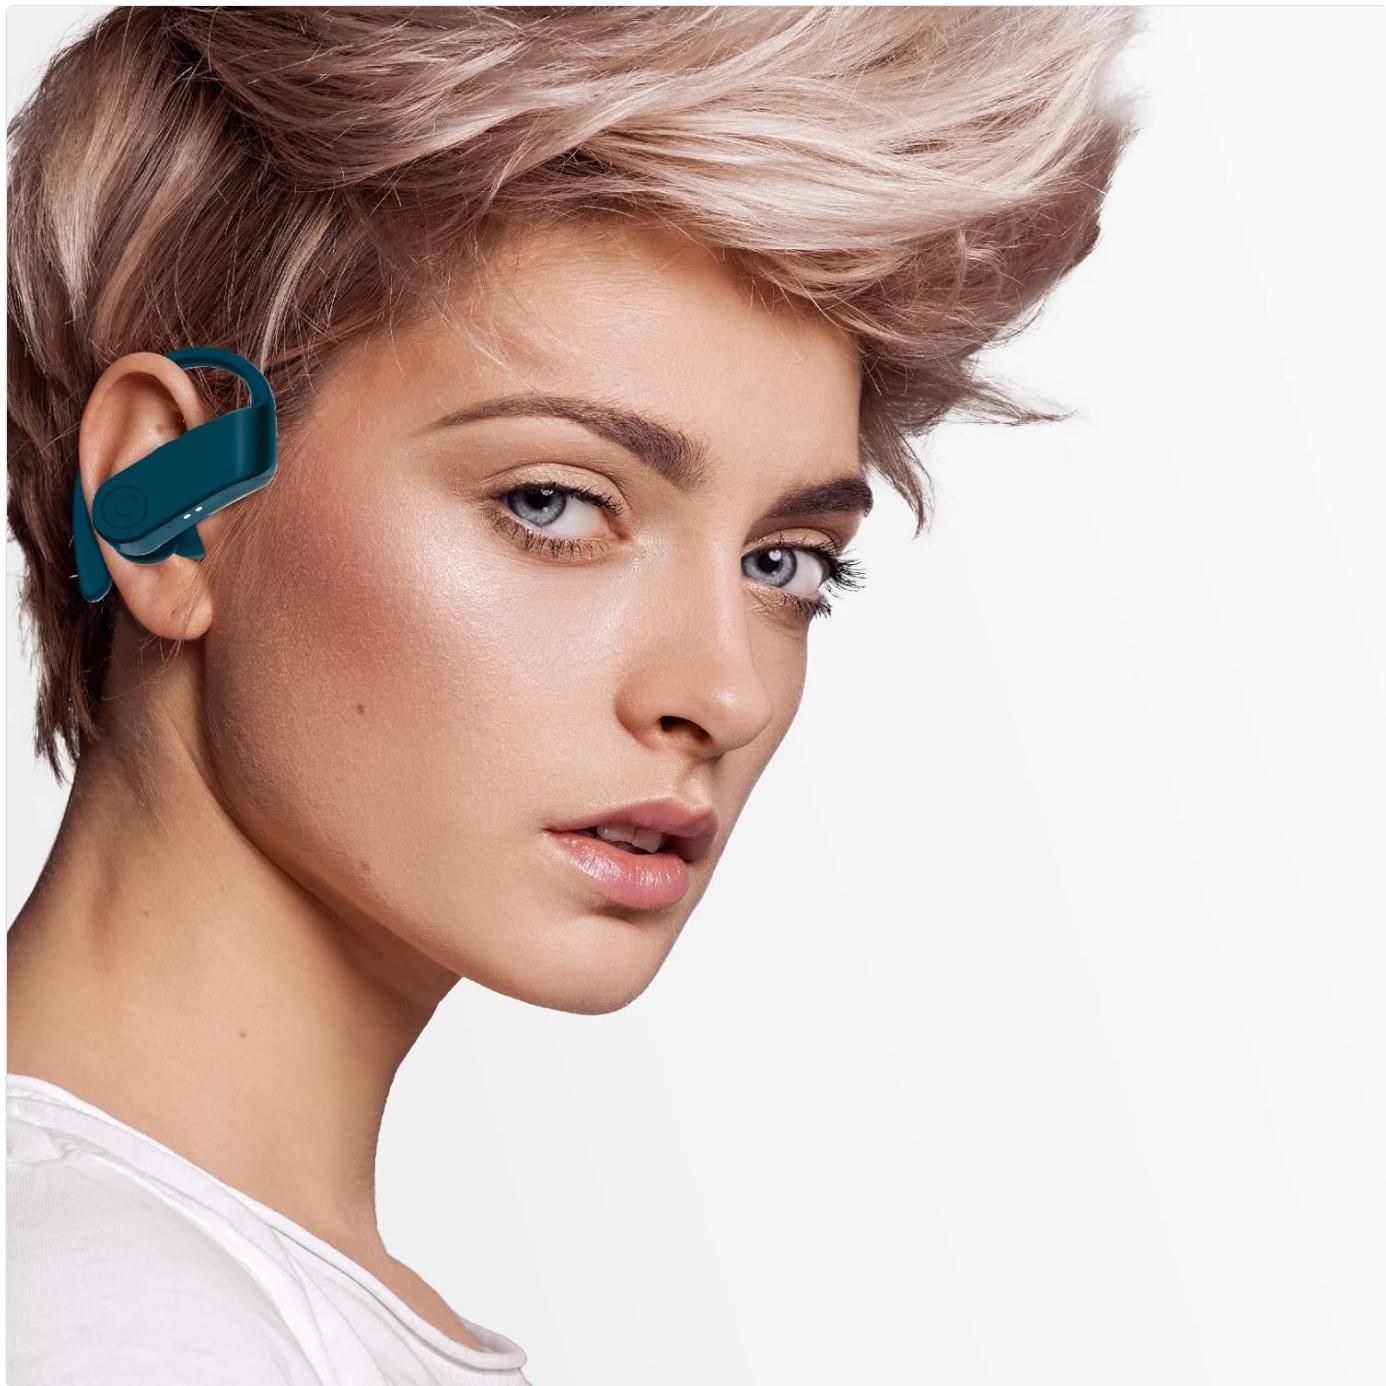


Image: A woman wearing one of the Coby True Wireless Sport Earbuds, demonstrating how the ear hook fits securely around the ear.

## Button Controls

The earbuds feature intuitive button controls for various functions:

| Action                           | Function                          |
|----------------------------------|-----------------------------------|
| Single Press (Left/Right Earbud) | Play/Pause Music, Answer/End Call |
| Double Press (Right Earbud)      | Next Track                        |
| Double Press (Left Earbud)       | Previous Track                    |

| Action                         | Function  |
|--------------------------------|---|
| Long Press (Left/Right Earbud) | Activate Voice Assistant (Siri/Google Assistant), Reject Call |

## Voice Assistant (Siri/Google Assistant)

Activate your device's voice assistant by long-pressing the button on either earbud. You can then use voice commands for various tasks without needing to access your phone.

## MAINTENANCE

Proper care will extend the life of your earbuds:

- Cleaning:** Use a soft, dry, lint-free cloth to clean the earbuds and charging case. Do not use abrasive cleaners, alcohol, or chemical sprays.
- Storage:** When not in use, always store the earbuds in their charging case to protect them and keep them charged.
- Water Resistance:** The earbuds are sweat-proof, making them suitable for workouts. However, they are not waterproof. Do not submerge them in water or expose them to heavy rain.
- Temperature:** Avoid exposing the earbuds to extreme temperatures (hot or cold) or high humidity.

## TROUBLESHOOTING

If you encounter issues with your Coby True Wireless Sport Earbuds, try the following solutions:

| Problem                        | Possible Solution  |
|--------------------------------|--|
| Earbuds not pairing/connecting | Ensure earbuds are charged.<br>Turn off and on Bluetooth on your device.<br>Forget "Coby Earbuds" from your device's Bluetooth list and re-pair.<br>Place earbuds back in the case, close it, wait a few seconds, then remove them to re-enter pairing mode. |
| Only one earbud working        | Ensure both earbuds are charged.<br>Place both earbuds back in the charging case, close the lid, and then open it again to reset their connection.<br>Try re-pairing the earbuds with your device.   |
| No sound or low volume         | Increase volume on both your device and the earbuds.<br>Ensure earbuds are properly connected to your device.<br>Clean any debris from the earbud speakers.  |
| Charging issues                | Ensure the charging cable is securely connected.<br>Try a different charging cable or USB power source.<br>Clean the charging contacts on the earbuds and inside the case.   |

## SPECIFICATIONS

| Feature    | Detail    |
|------------|-----------|
| Model Name | CETW570BL |

| Feature                              | Detail                                |
|--------------------------------------|---------------------------------------|
| Connectivity Technology              | Wireless (Bluetooth 5.3)              |
| Wireless Range                       | Up to 33 feet (10 meters)             |
| Battery Life (Earbuds)               | Up to 5 hours on a single charge      |
| Total Play Time (with Charging Case) | Up to 15 hours                        |
| Control Type                         | Button, Voice (Siri/Google Assistant) |
| Material                             | Acrylonitrile Butadiene Styrene (ABS) |
| Ear Placement                        | In Ear with Ear Hooks                 |
| Manufacturer                         | Summit Electronics LLC                |
| Product Dimensions                   | 3.05 x 3.05 x 1.74 inches             |
| Item Weight                          | 10.4 ounces                           |

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official Coby website. Keep your purchase receipt as proof of purchase for any warranty claims.

**Manufacturer:** Summit Electronics LLC

**Date First Available:** November 4, 2021

© 2024 Coby. All rights reserved.

## Related Documents - CETW570BL

|   |  |
|---|--|
|  <p><b>Coby</b><br/>CETW645<br/>Active Noise Cancelling TWS Earbuds<br/>With Hi-Res LCD Touchscreen Case<br/>User Manual   Manual De Usuario</p> <p>Bluetooth®           </p> | <p><a href="#">CETW645 Active Noise Cancelling TWS Earbuds User Manual</a></p> <p>User manual for the CETW645 Active Noise Cancelling TWS Earbuds with Hi-Res LCD Touchscreen Case. Learn about powering on/off, pairing, controls, troubleshooting, and specifications.</p>                 |
|  <p><b>Coby</b><br/>CETW571<br/>User Manual   Manual de usuario</p> <p>Bluetooth®       </p>  | <p><a href="#">Coby CETW571 True Wireless Stereo Earbuds User Manual</a></p> <p>User manual for the Coby CETW571 True Wireless Stereo Earbuds, covering overview, charging, powering on/off, pairing, controls, troubleshooting, specifications, safety precautions, and FCC statements.</p> |

|  |  |
|--|--|
|  <p><b>Coby CETW516</b><br/>Manual de usuario/User Manual</p> <p>Bluetooth®    </p>   | <p><a href="#"><u>Coby CETW516 True Wireless Stereo Earbuds User Manual</u></a></p> <p>User manual for Coby CETW516 true wireless stereo earbuds, detailing features, operation, charging, pairing, controls, troubleshooting, specifications, and safety guidelines.</p>                          |
|  <p><b>Coby CSTW52FD</b><br/>True Wireless Speaker<br/>Versión en línea/versión en línea</p> <p>User Manual/Manual de usuario</p> <p>Bluetooth®    </p> | <p><a href="#"><u>Coby CSTW52FD True Wireless Speaker User Manual</u></a></p> <p>User manual for the Coby CSTW52FD True Wireless Speaker. Learn about its features, operation, charging, Bluetooth connectivity, TWS pairing, FM radio mode, external device playback, and safety precautions.</p> |
|  <p><b>Coby DVD209</b> The bottom portion of the DVD player Replacement</p> <p>This guide will show you how to remove the bottom portion of the DVD player in order to access internal components.</p> <p>Written By: Kyle VanAllen</p> <p>The document was generated on date: 04-04-2019 at 08:45:20 AM<br/>Page 1 of 2</p>  | <p><a href="#"><u>Coby DVD209 DVD Player Bottom Portion Replacement Guide</u></a></p> <p>A step-by-step repair guide from iFixit for replacing the bottom portion of a Coby DVD209 DVD player. Learn how to safely remove screws, disconnect cables, and access internal components.</p>           |
|  <p><b>COBY®</b><br/>True Wireless Party Speaker</p> <p>Instruction Manual<br/>CSTW530</p> <p></p>   | <p><a href="#"><u>COBY CSTW530 True Wireless Party Speaker Instruction Manual</u></a></p> <p>Instruction manual for the COBY CSTW530 True Wireless Party Speaker, covering safety, setup, features, controls, specifications, and warranty information.</p>  |