

[Manuals.plus](#) /

› [MCombo](#) /

› MCombo Manual Swivel Glider Rocker Recliner Chair User Manual

MCombo 8031

MCombo Manual Swivel Glider Rocker Recliner Chair with Massage and Heat

Model: 8031

INTRODUCTION

Thank you for choosing the MCombo Manual Swivel Glider Rocker Recliner Chair. This manual provides essential information for the safe assembly, operation, and maintenance of your new recliner. Designed for comfort and versatility, this chair features a swivel rocking base, recline function, full-body vibration massage, lumbar heating, dual USB ports, and convenient storage pockets. Please read this manual thoroughly before use and retain it for future reference.



Image: The MCombo Manual Swivel Glider Rocker Recliner Chair in light brown faux leather, showcasing its design and features.

SAFETY INFORMATION

- **Maximum Weight Capacity:** This recliner is designed to support a maximum weight of 320 lbs (145 kg). Do not exceed this limit to prevent damage or injury.
- **User Height:** Recommended user height is 5'1" to 5'9". Ensure proper fit for safe and comfortable operation.
- **Assembly:** Exercise caution during assembly, especially when handling heavy components. It is recommended to have two adults for assembly.
- **Children and Pets:** Keep children and pets away from the recliner's moving parts, especially during operation, to prevent entrapment or injury.
- **Power Cord:** Ensure the power cord for massage and heat functions is not pinched or damaged. Do not operate the chair with a damaged cord.

- **Stability:** Always ensure the chair is on a flat, stable surface. Do not stand on the chair or use it as a step stool.
- **Reclining:** Before reclining, ensure there are no obstructions behind or around the chair.
- **Electrical Safety:** Do not expose electrical components to water or excessive moisture. Unplug the chair before cleaning or if it will be unused for an extended period.

PACKAGE CONTENTS

Please check the package contents carefully to ensure all parts are present and undamaged. If any parts are missing or damaged, contact customer support immediately.

- Recliner Backrest
- Recliner Seat Base (with armrests, cup holders, USB ports, and pockets)
- Power Adapter for Massage and Heat
- Remote Control for Massage and Heat
- Instruction Manual (this document)

ASSEMBLY INSTRUCTIONS

Assembly of this recliner is designed to be straightforward and requires no additional tools. An adult can typically complete the assembly in approximately 30 minutes.

1. **Unpack Components:** Carefully remove all components from the packaging. Place them on a soft, clean surface to prevent scratching.
2. **Attach Backrest:** Align the metal grooves on the backrest with the corresponding brackets on the seat base. Slide the backrest down firmly until it clicks securely into place. Ensure both sides are fully engaged.
3. **Connect Wires:** Locate the electrical wires extending from the backrest and the seat base. Connect these wires, ensuring they are securely fastened. These connections power the massage and heat functions.
4. **Connect Power Adapter:** Plug the power adapter into the designated port on the chair, usually located near the back or side. Then, plug the adapter into a standard electrical outlet.
5. **Final Check:** Gently push and pull on the backrest to confirm it is securely attached. Test all functions (recline, swivel, massage, heat) before regular use.

OPERATING INSTRUCTIONS

Recline Function

The recliner features a manual recline mechanism. To recline:

- **Raise Footrest:** Pull the handle located on the side of the chair. This will raise the footrest.
- **Recline Backrest:** Once the footrest is up, exert gentle pressure onto the backrest to recline it to your desired angle, up to 140 degrees.
- **Return to Upright:** To return to the upright position, lean forward and push the footrest down with your legs until it locks into place. The chair will automatically return to its original position when you stand up.



Pull the handle to raise the footrest separately.



Exert some pressure onto the back to recline back.

Image: Illustration demonstrating the manual recline function, showing the handle pull for the footrest and the pressure required to recline the backrest.

Swivel and Gliding Motion

The chair is equipped with a swivel rocking base, allowing for versatile movement:

- **360-Degree Swivel:** The chair can rotate a full 360 degrees on its base. Simply push off the floor with your feet to turn in any direction.
- **Gliding Motion:** The chair also offers a smooth gliding motion, allowing you to rock gently back and forth.



Swivel Movement



Gliding Motion

Image: Diagram illustrating the 360-degree swivel capability and the smooth gliding motion of the recliner's base.

Massage and Heat Functions

The recliner features 8 vibrating points and 1 lumbar heating point, controlled by the included remote.

- **Vibration Massage:** Use the remote control to select different massage modes and intensity levels. The 8 points are distributed across the back, lumbar, thighs, and calves.
- **Lumbar Heating:** Activate the lumbar heating function via the remote control for soothing warmth in the lower back area.
- **Timer:** The remote control may include a timer function to set the duration of the massage and heat.



8 Vibration Points



1 Lumbar Heat

Image: Visual representation of the recliner highlighting the locations of the 8 vibration points and the central lumbar heating element.

USB Ports and Cup Holders

- **Dual USB Ports:** Two USB ports are integrated into the side of the chair, allowing you to conveniently charge your electronic devices while relaxing.
- **Cup Holders:** The chair includes two cup holders (8cm diameter, 9cm depth) on the armrests, suitable for most standard cups and beverages.
- **Storage Pockets:** Two side pockets and two front pockets provide convenient storage for remote controls, magazines, or other small items.

Expect More. Get More.

- 2 Cup Holders
- 2 USB Charge Ports
- 2 Side & Front Pockets



Image: Close-up view of the recliner's armrest area, indicating the location of the two cup holders, two USB charging ports, and the side and front storage pockets.

Official Product Video

Your browser does not support the video tag.

Video: An official MCombo product video demonstrating the features of the Manual Swivel Glider Rocker Recliner Chair, including its swivel, rocking, and recline functions, as well as the massage and heat capabilities.

MAINTENANCE AND CARE

Proper care will extend the life and appearance of your recliner.

- **Cleaning Faux Leather:** The high-quality faux leather upholstery is easy to maintain. Wipe gently once a week with a microfiber cloth dampened with a solution of water mixed with a small amount of mild dish soap. Avoid harsh chemicals or abrasive cleaners.
- **Spills:** Blot spills immediately with a clean, dry cloth. Do not rub.

- **Dusting:** Regularly dust the chair with a soft, dry cloth.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause the faux leather to fade or crack. Position the chair away from direct sunlight.
- **Moving the Chair:** When moving the chair, lift it rather than dragging it to prevent damage to the base or floor.



Image: A detailed close-up of the faux leather material, showing its texture and stitching, emphasizing its quality and ease of cleaning.

 
TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair does not recline or footrest does not raise.	Recline handle not fully pulled; mechanism obstructed.	Ensure the handle is pulled completely. Check for any objects blocking the reclining mechanism.

Problem	Possible Cause	Solution
Massage or heat functions are not working.	Power adapter unplugged; loose wire connection; remote control battery low (if applicable).	Verify the power adapter is securely plugged into the chair and a working outlet. Check all wire connections. Replace remote control batteries if necessary.
Chair makes creaking noises when rocking or swiveling.	Friction in the base mechanism; loose bolts.	Apply a silicone-based lubricant to the moving parts of the swivel/rocker mechanism. Check and tighten any visible bolts on the base.
USB ports are not charging devices.	Chair not powered on; device cable faulty; device requires more power than supplied.	Ensure the chair's power adapter is plugged in. Try a different USB cable or device. Note that USB ports are for charging small devices and may not support high-power devices.

SPECIFICATIONS

Feature	Detail
Model	8031
Color	Light Brown
Material	Faux Leather upholstery, Foam fill material
Product Dimensions (D x W x H)	30.7"D x 34.6"W x 41"H
Seat Height	18 inches
Seat Depth	20.5 inches
Maximum Weight Recommendation	320 Pounds
Recline Angle	Up to 140 degrees
Swivel	360-degree swivel
Massage Points	8 vibration points
Heating	1 lumbar heating point
USB Ports	2 (for charging devices)
Cup Holders	2 (8cm diameter, 9cm depth)
Pockets	2 side pockets, 2 front pockets
Item Weight	98 pounds

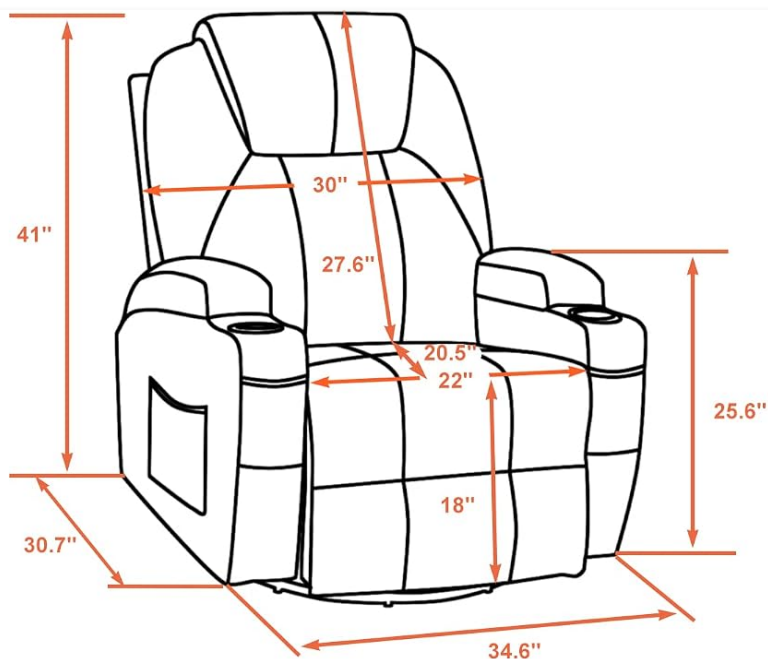

TV

Reclined

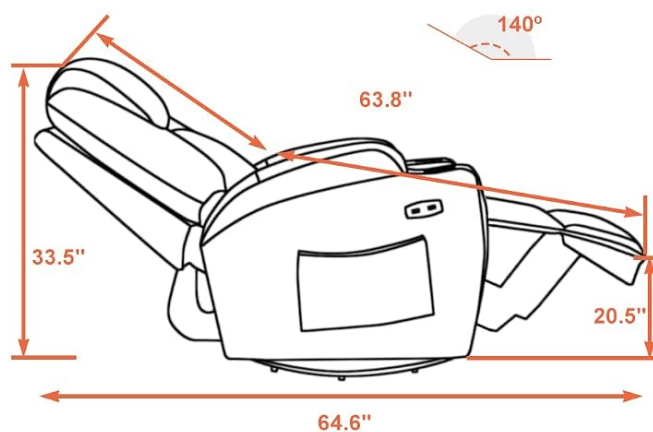 
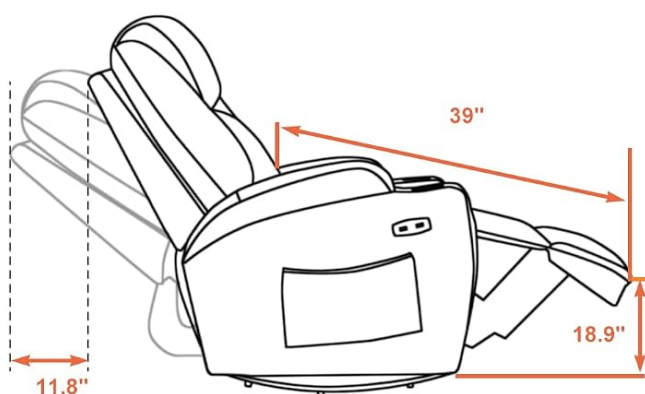 


Image: Technical drawing illustrating the detailed dimensions of the recliner in both its upright (TV) and fully reclined positions, including seat height, depth, and overall chair dimensions.

WARRANTY AND SUPPORT

MCombo stands behind the quality of its products. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your purchase or visit the official MCombo website. If you encounter any issues or require assistance, please contact MCombo customer support. Have your model number (8031) and purchase date ready when contacting support.

Contact Information: Please refer to the contact details provided on the MCombo official website or your purchase documentation for the most up-to-date support channels.

© 2024 MCombo. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question