

[Manuals.plus](#) /

› [Xtrasaver](#) /

› Xtrasaver OEM Replacement Remote Control for Westinghouse Roku Smart TV User Manual

Xtrasaver 0301636535226

Xtrasaver OEM Replacement Remote Control for Westinghouse Roku Smart TV User Manual

Model: 0301636535226

INTRODUCTION

This manual provides comprehensive instructions for the Xtrasaver OEM Replacement Remote Control, designed specifically for Westinghouse Roku Smart TVs. This remote offers a direct replacement solution, requiring no programming or pairing. Simply insert batteries to begin operation.

The remote control is compatible with a wide range of Westinghouse Roku TV models, ensuring seamless integration and functionality for your entertainment system.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open.
3. Insert two (2) 1.5V AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Note: Batteries are not included with the remote control.



Figure 1: Battery compartment showing correct AAA battery placement.

OPERATING THE REMOTE CONTROL

The Xtrasaver remote control provides intuitive access to all essential functions of your Westinghouse Roku Smart TV. Ensure a clear line of sight between the remote and the TV's infrared sensor for optimal performance.





Figure 2: Front view of the remote control.

Button Functions

- **Power Button** (⏻): Turns the TV on or off.
- **Back Button** (⏪): Returns to the previous screen or menu.
- **Home Button** (🏠): Navigates to the Roku home screen.
- **Navigation Pad (Up, Down, Left, Right)**: Moves cursor through menus and selections.
- **OK Button**: Confirms selections and opens items. This button has been updated for improved functionality.
- **Volume Up/Down Buttons**: Adjusts the TV's volume level.
- **Mute Button**: Mutes or unmutes the TV's audio.
- **Instant Replay Button** (⏮): Jumps back a few seconds in video playback.
- **Sleep Timer Button** (⌚): Accesses sleep timer settings.

- **Asterisk Button (*)**: Opens options menu for selected content or channel.
- **Rewind Button (⏮)**: Rewinds video playback.
- **Play/Pause Button (⏸)**: Plays or pauses video content.
- **Fast Forward Button (⏭)**: Fast forwards video playback.
- **Dedicated App Buttons (Netflix, Disney+, Hulu, Sling)**: Provides direct access to these streaming applications.



Figure 3: Dedicated streaming app buttons.

Quickly Jump to the APPS that you want

NOTE: If your TV no available these APPs, firstly please downloaed the apps from your account which you sign on.



Figure 4: Side view illustrating volume and mute buttons.

Note: If your TV does not have these applications installed, please download them from your Roku account before using the dedicated buttons.

COMPATIBILITY

This Xtrasaver replacement remote control is compatible with the following Westinghouse Roku Smart TV models:

- WR24HX2200
- WR32HB2200
- WR32HX2019
- WR43FX4019
- WR43UX4019
- WR50UX4019
- WR55UX4019
- WR65UX4019
- WR65UT4009
- WR55UT4009

- WR50UT4009
- WR43UT4009
- WR43FX2019
- WR43FT2019
- WR40FX2019
- WR40FT2019
- WR32HT2019
- And 2020 Models

Important Note:

- This remote control is **not** compatible with any Roku Stick or Roku Player Box.
- It does not feature a pairing button or a headphone jack.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes inconsistent or stops working. Always replace both batteries simultaneously with new 1.5V AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are correctly installed with proper polarity.
 - Replace old batteries with new 1.5V AAA batteries.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Confirm the remote is pointed directly at the TV's sensor.
- **Short operating range:**
 - This remote operates using infrared (IR) technology, which requires a direct line of sight to the TV's IR receiver.
 - Ensure there are no objects blocking the path between the remote and the TV.
 - Weak batteries can also reduce the effective range; replace them if necessary.
- **Specific buttons not working:**
 - For dedicated app buttons (Netflix, Disney+, Hulu, Sling), ensure the respective applications are installed and updated on your Roku TV.
 - The "OK" button has been updated for improved performance. If you experience issues, ensure batteries are fresh.

SPECIFICATIONS

Brand	Xtrasaver
Model Number	0301636535226
Compatible Devices	Westinghouse Roku Smart Televisions
Power Supply	2 x 1.5V AAA Batteries (not included)
Package Dimensions	5.67 x 2.17 x 0.83 inches
Item Weight	1.76 ounces
Special Feature	Ergonomic design

WARRANTY AND SUPPORT

Specific warranty information for this Xtrasaver replacement remote control is not provided in the product details. For any product-related inquiries or support, please refer to the retailer or manufacturer's customer service channels.

It is recommended to retain your purchase receipt for any potential warranty claims or support needs.