Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- JJC /
- > JJC TP-S1 Wireless Bluetooth Remote Control Shooting Grip Mini Tabletop Tripod User Manual

JJC TP-S1

JJC TP-S1 Wireless Bluetooth Remote Control Shooting Grip Mini Tabletop Tripod User Manual

1. Introduction

Thank you for purchasing the JJC TP-S1 Wireless Bluetooth Remote Control Shooting Grip Mini Tabletop Tripod. This versatile accessory is designed to enhance your photography and videography experience with compatible Sony cameras. It functions as both a comfortable shooting grip and a stable tabletop tripod, featuring a detachable Bluetooth remote for convenient wireless control.

2. PRODUCT OVERVIEW

The JJC TP-S1 is engineered for flexibility and ease of use, making it ideal for vlogging, live streaming, and self-portraits. Its compact design allows for easy portability, while robust construction ensures stability for your camera equipment.

- **Dual Functionality:** Seamlessly switches between a comfortable handheld shooting grip and a stable mini tabletop tripod.
- Detachable Bluetooth Remote: The built-in remote is removable and replaces the Sony RMT-P1BT remote commander, offering wireless control of your camera's shutter and video functions.
- Wide Operating Range: Control your camera wirelessly via Bluetooth within a 32 ft (10m) operating range in any direction.
- Flexible Head: The integrated head can be tilted 180 degrees and rotated 360 degrees, allowing for diverse shooting angles.
- Enhanced Grip: Non-slip pads on the grip provide a secure hold and improve stability, reducing camera shake during shooting.



The JJC TP-S1 functions as both a handheld grip and a tabletop tripod, with a detachable remote control.

3. COMPATIBILITY

This device is compatible with a wide range of Sony cameras, including but not limited to:

- Sony A1 Mark II, A7CR, A7CII, A6700
- Sony ZV-E10 II, ZV-1 II, ZV-E1, ZV-1F, FX30, ZV-E10, ZV-1
- Sony A1, A7C, A9, A9II, A9III
- Sony A7R V, A7R IV, A7R III, A7R II
- Sony A7S III, A7S II
- Sony A7 III, A7 II
- Sony A6600, A6500, A6400, A6300, A6100, A6000
- Sony RX100 Series cameras

4. COMPONENTS

4.1. Shooting Grip / Tripod

The main body of the device serves as both a comfortable grip and a stable tripod. It features a standard 1/4"-20 mounting screw for attaching your camera.



The grip features non-slip pads for a secure hold and a thumbwheel for easy camera attachment.

4.2. Detachable Bluetooth Remote

The remote control unit slides into the grip and can be easily detached for wireless operation. It is powered by a CR2032 battery (included).



Detailed view of the detachable Bluetooth remote control buttons and battery compartment.

5. SETUP

5.1. Attaching Your Camera

- 1. Locate the 1/4"-20 mounting screw on the top of the shooting grip.
- 2. Align your camera's tripod socket with the screw.
- 3. Rotate the camera clockwise to securely fasten it to the grip. Use the thumbwheel on the grip for extra tightening.

5.2. Pairing the Bluetooth Remote

To enable wireless control, you must pair the remote with your compatible Sony camera via Bluetooth. Refer to your camera's instruction manual for specific Bluetooth pairing steps if needed.

- 1. Ensure the remote control is inserted into the grip or held separately.
- 2. On the remote, slide the LOCK switch to the UNLOCK position.
- 3. Press and hold the Pairing button (often indicated by a Bluetooth symbol or 'Pair') on the remote for approximately 3 seconds until the indicator lamp starts flashing.
- 4. On your Sony camera, navigate to the 'Network' or 'Bluetooth' settings in the menu.
- 5. Select 'Bluetooth Function' and then 'Pairing'.
- 6. Confirm the pairing on your camera when the device name (e.g., 'BRD-DBB1') appears.
- 7. Once paired, the indicator lamp on the remote will stop flashing and remain lit, or turn off, indicating a successful connection.

6. OPERATING THE DEVICE

6.1. Using as a Shooting Grip

Hold the grip comfortably in your hand. The ergonomic design and non-slip pads ensure a steady hold for shooting photos or videos on the go.



The grip provides a comfortable and secure hold for handheld shooting.

6.2. Using as a Mini Tripod

To convert to a tripod, simply spread the legs of the grip outwards until they lock into a stable position. Place it on a flat surface for steady shots.







Serves as a shooting grip as well as a mini tripod

Deploy the legs to use the device as a stable mini tabletop tripod.

6.3. Adjusting Camera Angle

The integrated head allows for flexible camera positioning:

- **Tilt:** Press the button on the side of the ball head to adjust the camera's vertical tilt up to 180 degrees. Release the button to lock the angle.
- **Rotation:** The camera can be rotated 360 degrees horizontally for panoramic shots or quick changes in composition.



Full 360° pan range and 180° tilting head design

The integrated head offers 180-degree tilt and 360-degree rotation for versatile shooting angles.

6.4. Remote Control Functions

Once paired, the remote provides the following controls:

- Shutter Release / Video Recording Button: Press to take a photo or start/stop video recording.
- FOCUS/ZOOM Buttons (W/T): Use to zoom in/out or adjust focus, depending on the camera's mode
- AF-ON Button: Activates autofocus.
- C1 Button: Customizable function button (refer to your camera's manual for C1 function assignment).
- MOVIE/STILL Switch: Toggles between movie and still image shooting modes.
- LOCK Switch: Prevents accidental button presses.



The detachable wireless remote allows control over still image shooting, video recording, zooming, and focus adjustment.

7. MAINTENANCE

- Keep the device clean by wiping it with a soft, dry cloth.
- Avoid exposing the device to extreme temperatures, humidity, or direct sunlight.
- Store the device in a cool, dry place when not in use.
- If the remote control battery (CR2032) runs low, replace it promptly.

8. TROUBLESHOOTING

- Remote not responding: Ensure the remote is paired correctly with your camera and the LOCK switch is in the UNLOCK position. Check the CR2032 battery.
- **Intermittent connection:** Ensure there are no obstructions between the remote and the camera, and that you are within the 10m operating range.
- Camera not stable on tripod: Ensure the camera is securely mounted with the thumbwheel tightened. Verify the tripod legs are fully extended and locked.

9. SPECIFICATIONS

Feature	Specification
Model Number	TP-S1
Package Dimensions	8.5 x 3.27 x 2.05 inches
Item Weight	8.8 ounces (0.55 Pounds)
Batteries	1 Lithium Metal battery (CR2032, included)
Maximum Height	193.5 Millimeters (7.6 inches)
Folded Size	35*40*150mm
Tripod Head Type	Pan Heads
Special Feature	Adjustable, Flexible, Rotatable

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your product or visit the official JJC website. Keep your purchase receipt for warranty claims.

Related Documents - TP-S1



JJC BTR-S1 Wireless Remote Control User Manual

This document provides instructions for the JJC BTR-S1 Wireless Remote Control, a Bluetooth-enabled device compatible with select Sony cameras. It covers setup, operation, features like focus/zoom control and video recording, and safety precautions.



JJC MSG-P1 Series Magnetic Phone Grip with Wireless Remote - User Manual

User manual for the JJC MSG-P1 Series Magnetic Phone Grip, providing detailed instructions on its use as a phone grip, stand, and tripod mount, along with information on the detachable wireless remote control, specifications, and troubleshooting.



JJC TM-Series Multi-Function Timer Remote Control Manual

Official manual and instruction guide for the JJC TM-Series Multi-Function Timer Remote Control. Learn about its features, setup, operation, safety, and compatibility for various camera models.



JJC SPC-R1 Wireless Remote Control and Smartphone Video Rig User Manual

Comprehensive user manual for the JJC SPC-R1 Wireless Remote Control and Smartphone Video Rig, detailing assembly, pairing, shooting modes, specifications, and safety information.



JJC JF-U Series 3-in-1 Wireless Remote Control & Flash Trigger Kit User Manual

Comprehensive user manual for the JJC JF-U Series 3-in-1 Wireless Remote Control & Flash Trigger Kit, detailing setup, battery replacement, wireless flash triggering, wireless shutter release, and wired shutter release functions.





JJC WT-868 Wireless & Wired Timer Remote Control User Manual

Explore the JJC WT-868 Wireless & Wired Timer Remote Control with this comprehensive user manual. Learn about its advanced timer functions, wireless and wired operation, compatibility, and specifications for professional photography.