

[manuals.plus](#) /› [Ultimate Speed](#) /› [Ultimate Speed 13-Inch Hubcaps Instruction Manual](#)

Ultimate Speed B08LSFDWYQ

Ultimate Speed 13-Inch Hubcaps Instruction Manual

Model: B08LSFDWYQ

INTRODUCTION

This manual provides detailed instructions for the installation, maintenance, and care of your Ultimate Speed 13-inch hubcaps. Designed for all common steel rims, these high-quality plastic hubcaps are impact-resistant, unbreakable, and feature a corrosion and car wash resistant paint finish. They offer a simple, tool-free attachment system for a secure and durable fit.

SETUP AND INSTALLATION

Before installation, ensure your steel rims are clean and free from dirt or debris. The hubcaps are designed for a tool-free attachment process.

- 1. Prepare the Hubcap:** Locate the metal clamping ring. This ring needs to be inserted into the groove on the back of the hubcap.
- 2. Adjust the Clamping Ring:** The metal clamping ring is adjustable in 3 positions. Select the position that provides the tightest fit for your specific rim. A tighter fit ensures better security.
- 3. Align with Valve Stem:** Align the cutout on the hubcap with the valve stem of your tire.
- 4. Attach the Hubcap:** Starting from the valve stem, carefully press the hubcap onto the rim. Work your way around the hubcap, applying even pressure until all clips are securely engaged with the rim. You should hear a series of clicks as it locks into place.
- 5. Verify Security:** Gently pull on the edges of the installed hubcap to ensure it is firmly attached and does not wobble.



Image 1: Ultimate Speed hubcap securely installed on a vehicle wheel. The hubcap is black with a red accent ring, complementing the red car body.

OPERATING CONSIDERATIONS

Once installed, your Ultimate Speed hubcaps require no special operating procedures. However, it is recommended to periodically check their security, especially after driving on rough roads or after a car wash, to ensure they remain firmly attached.

MAINTENANCE AND CARE

To maintain the appearance and longevity of your hubcaps, follow these simple care instructions:

- **Cleaning:** The hubcaps feature a corrosion and car wash resistant paint. They can be cleaned with standard car wash soap and water. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Inspection:** Regularly inspect the hubcaps for any signs of damage or loose fitting. Address any issues promptly to prevent loss during driving.
- **Storage:** If removing hubcaps for seasonal tire changes, store them in a clean, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Hubcap feels loose after installation:**

Ensure the metal clamping ring is set to the tightest possible position. Re-press the hubcap firmly around the entire circumference to ensure all clips are engaged. If the issue persists, the hubcap may not be compatible with your specific rim design, or the rim may be damaged.

- **Hubcap falls off while driving:**

This indicates an improper or insecure installation. Re-install the hubcap, paying close attention to the clamping ring adjustment and ensuring all clips are fully engaged. If the hubcap is damaged, it may need replacement.

- **Difficulty installing the hubcap:**

Ensure the hubcap size matches your rim diameter (e.g., 13-inch hubcap for 13-inch rim). Check for any obstructions on the rim. Ensure the valve stem is correctly aligned with the hubcap's cutout.

SPECIFICATIONS

Brand	Ultimate Speed
Manufacturer	ULTIMATE SPEED®
Model Number	B08LSFDWYQ / 100263743001
Rim Diameter	13 Inches
Material	Polypropylene (PP) + Additives (Cover), Steel (Spring)
Exterior Finish	Plastic
Installation Type	Clip Attachment
Color Options	Silver, Black, Black/silver, Black/red

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available documentation. For any support inquiries, please refer to the retailer or manufacturer's official website for contact details.