

Yonanas 988 Deluxe

Yonanas 988 Deluxe Frozen Dessert Maker

INSTRUCTION MANUAL

Important Safety Information

Please read all instructions carefully before using your Yonanas 988 Deluxe Frozen Dessert Maker. Retain this manual for future reference.

- Always unplug the appliance from the power outlet before assembly, disassembly, or cleaning.
- Do not immerse the motor base in water or other liquids.
- Keep hands and utensils out of the chute during operation to prevent injury.
- Ensure all parts are correctly assembled before use.
- This appliance is for household use only.
- Supervise children when the appliance is in use.

Product Components

Your Yonanas 988 Deluxe Frozen Dessert Maker includes the following parts:

- Motor Base
- Chute Assembly
- Grinding Blade
- Pusher
- Recipe Book (75+ recipes)





Image: All components of the Yonanas 988 Deluxe Frozen Dessert Maker, including the motor base, chute, blade, and pusher.

Setup and Assembly

Follow these steps to assemble your Yonanas machine before first use:

1. Place the motor base on a clean, stable, and dry surface.
2. Insert the grinding blade into the chute assembly, ensuring it is seated correctly.
3. Attach the chute assembly to the motor base. Twist until it locks securely into place.
4. Ensure the pusher is readily available for use.




Image: The Yonanas 988 Deluxe Frozen Dessert Maker fully assembled, ready for use.

Operating Instructions

The Yonanas machine transforms frozen fruit into a soft-serve consistency. For best results, use ripe or over-ripe fruit.

1. **Prepare Fruit:** Peel and freeze ripe fruit for at least 24 hours. Bananas are a common base, but other fruits like berries, mangoes, and pineapples can be used. For larger fruits, cut them into pieces that fit easily into the chute.
2. **Thaw Slightly (Optional but Recommended):** For optimal texture, allow frozen fruit to thaw for 5-10 minutes before processing. This makes the fruit slightly softer and easier to process, resulting in a creamier consistency.
3. **Position Bowl:** Place a bowl directly under the chute to collect the frozen dessert.
4. **Turn On:** Plug in the appliance and turn it on.
5. **Insert Fruit:** Drop the prepared frozen fruit into the top of the chute.
6. **Use Pusher:** Gently use the pusher to guide the fruit down through the chute and onto the grinding blade. Do not force the fruit. Alternate between different types of fruit if making a mix.
7. **Serve Immediately:** Once processed, serve the fresh frozen dessert immediately for the best taste and texture.
8. **Turn Off and Unplug:** After use, turn off the appliance and unplug it from the power outlet.

HOW IT WORKS

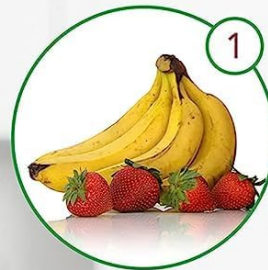

1

FREEZE

Peel & freeze over-ripe bananas and other fruit.



2

YO.

Insert FROZEN fruit into the chute.



3

ENJOY!

Yonanas tastes just like soft serve ice cream!

Image: A visual guide demonstrating the three simple steps: 1. Freeze fruit, 2. Insert frozen fruit into the chute, 3. Enjoy the soft-serve

dessert.

For additional recipe ideas, refer to the included 75+ recipe book.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and longevity of your Yonanas machine.

- Disassembly:** Ensure the appliance is unplugged. Disassemble the chute assembly from the motor base. Remove the grinding blade and pusher.
- Washing:** The chute assembly, grinding blade, and pusher are top-rack dishwasher safe. Alternatively, wash these parts by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly.
- Motor Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
- Drying and Storage:** Ensure all parts are completely dry before reassembling or storing the appliance. Store in a clean, dry place.

Troubleshooting

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; improper assembly.	Ensure the power cord is securely plugged into a working outlet. Check that the chute assembly is correctly locked onto the motor base.
Fruit is not processing smoothly or machine jams.	Fruit is too hard (over-frozen); too much fruit inserted at once; fruit pieces are too large.	Allow frozen fruit to thaw for 5-10 minutes before processing. Insert smaller quantities of fruit. Cut larger fruits into smaller pieces. Do not force the pusher.
Dessert consistency is too runny.	Fruit was not frozen enough or thawed too much.	Ensure fruit is thoroughly frozen for at least 24 hours. Reduce thawing time if necessary.
Machine stops during operation.	Overload protection activated.	Turn off and unplug the machine. Remove any jammed fruit. Wait 15-20 minutes for the motor to cool down before restarting.

Specifications

- Model:** 988 Deluxe
- Brand:** Yonanas
- Power:** 200 Watt
- Material:** BPA Free Plastic
- Color:** Black (with chrome accents)
- Operation Mode:** Automatic
- Product Care:** Dishwasher Safe (removable parts)
- Item Weight:** Approximately 3 Kilograms
- Dimensions:**
- Height: 13.75 inches
 - Depth: 7.5 inches

- Width: 6.25 inches



Image: The Yonanas 988 Deluxe Frozen Dessert Maker with its dimensions labeled: 13.75" H, 7.5" D, 6.25" W.

Warranty and Support

Warranty Information:

- The Yonanas 988 Deluxe Frozen Dessert Maker typically comes with a one-year warranty from the manufacturer.
- Please note that some renewed products may carry a 90-day limited warranty. Refer to your purchase documentation for specific warranty terms applicable to your product.

Customer Support:

For technical assistance, warranty claims, or general inquiries, please refer to the contact information provided with your product packaging or visit the official Yonanas website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question