

Smoby 7600740332

Smoby Be Move Pink Tricycle User Manual

Model: 7600740332

INTRODUCTION

Thank you for choosing the Smoby Be Move Pink Tricycle. This manual provides essential information for the safe assembly, operation, and maintenance of your tricycle. Please read these instructions carefully before use and retain them for future reference. This tricycle is designed for children aged 15 months and older.



Image: The Smoby Be Move Pink Tricycle shown alongside its retail packaging.

SAFETY INFORMATION

WARNING! Important information to be saved. To eliminate risks associated with packaging (attachment, plastic film, etc.), remove any items that are not part of the toy before giving it to a child.

- **NOTE:** Never let the child play without adult supervision.
- **WARNING!** Includes a cord. Chance of choking hazard.
- **WARNING!** Contains small parts. Choking hazard.
- Ensure all parts are securely fastened before each use.
- Always use the seat belt provided.
- Do not use near stairs, hills, roads, or swimming pools.
- Only one rider at a time.

WHAT'S IN THE BOX

The Smoby Be Move Pink Tricycle package includes:

- 1 x Tricycle (unassembled components)

Please check all components are present and undamaged before assembly.

SETUP AND ASSEMBLY

Assembly should be performed by an adult. Ensure all parts click into place securely.



Image: Overview of the tricycle's adjustable features, including parent handle, seat, steering lock, and pedal system.

1. Parent Handle Adjustment:

Insert the parent handle into the designated slot at the rear of the tricycle. Adjust the height to one of the three available positions (maximum 95cm) by pressing the release button and sliding the handle up or down until it locks into place. Ensure it is securely fastened before use.



Image: Detail of the parent handle's 3-level height adjustment.

2. Seat Adjustment:

The seat can be adjusted to two positions to accommodate your child's growth. Locate the adjustment mechanism under the seat, slide the seat forward or backward, and ensure it locks firmly into the desired position.



Image: Detail of the seat adjustment feature, allowing for two positions.

3. Steering Lock Mechanism:

To allow the parent to control the steering, engage the steering lock. This prevents the child from steering independently. To unlock, disengage the mechanism, allowing the child to steer.



Image: Detail of the steering lock, showing locked and unlocked positions.

4. Pedal Freewheel System:

The tricycle features a freewheel system for the pedals. When engaged, the pedals do not spin automatically when the tricycle is in motion, preventing injury to the child's feet. To allow the child to pedal, disengage the freewheel system.



Image: Detail of the pedal freewheel system, indicating how to engage/disengage.

OPERATING INSTRUCTIONS

The Smoby Be Move Tricycle is designed for ease of use and adaptability as your child grows.

- **For Younger Children (15+ months):** Use the parent handle to push and steer the tricycle. Ensure the seat belt is securely fastened and the steering lock is engaged for parental control. The freewheel pedal system should be engaged to prevent the child's feet from being caught by rotating pedals.
- **For Older Children:** Once the child is capable of independent pedaling and steering, the parent handle can be removed, and the steering lock and freewheel system can be disengaged. Always ensure the child is supervised.
- **Storage Basket:** The rear basket can be used to carry small items. Do not overload the basket.



Image: An adult pushing a child on the tricycle, demonstrating its use with the parent handle.



Image: A child riding the tricycle, demonstrating independent use.

MAINTENANCE

Regular maintenance ensures the longevity and safety of your Smoby Tricycle.

- **Cleaning:** Wipe the tricycle with a damp cloth and mild soap. Do not use abrasive cleaners or solvents.
- **Inspection:** Periodically check all screws, bolts, and fasteners to ensure they are tight. Inspect the wheels and pedals for any signs of wear or damage.
- **Storage:** Store the tricycle in a dry place, away from direct sunlight and extreme temperatures, to prevent material degradation.

TROUBLESHOOTING

If you encounter any issues with your tricycle, please refer to the following common solutions:

Problem	Possible Cause	Solution
Tricycle difficult to steer	Steering lock engaged.	Disengage the steering lock mechanism.
Pedals not turning with wheels	Freewheel system engaged.	Disengage the freewheel system if the child is ready to pedal.
Loose parts	Fasteners may have loosened during use.	Check and tighten all screws and bolts.

SPECIFICATIONS

Feature	Detail
Model Number	7600740332
Product Dimensions	18.31 x 9.06 x 15.75 inches (68 x 52 x 52 cm)
Item Weight	6.6 pounds
Recommended Age	15 months and up
Material	Metal frame, plastic components, rubber wheels
Parent Handle Height	Adjustable, up to 95 cm
Origin	Made in Spain

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Smoby customer service directly. Refer to the product packaging or the official Smoby website for contact details.