

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hisense](#) /

› [Hisense WSA1603P Semi-Automatic Twin Tub Washing Machine User Manual](#)

## Hisense WSA1603P

# Hisense WSA1603P Semi-Automatic Twin Tub Washing Machine User Manual

Model: WSA1603P

## INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your Hisense WSA1603P Semi-Automatic Twin Tub Washing Machine. Please read this manual thoroughly before using the appliance and retain it for future reference.

## SAFETY INFORMATION

- Ensure the appliance is properly grounded.
- Do not operate with a damaged power cord or plug.
- Keep children away from the appliance during operation.
- Do not wash waterproof materials.
- Unplug the machine before cleaning or maintenance.

## PRODUCT OVERVIEW

The Hisense WSA1603P is a semi-automatic twin tub washing machine designed for efficient laundry care. It features separate wash and spin tubs, allowing for simultaneous operation.



**Figure 1:** Front view of the Hisense WSA1603P washing machine. This image displays the control panel at the top, with the wash tub on the left and the spin tub on the right, both covered by transparent lids.



Figure 2: Angled front view of the Hisense WSA1603P washing machine, showing the overall design and the two distinct tubs.

## SETUP AND INSTALLATION

- Unpacking:** Carefully remove the washing machine from its packaging. Inspect for any damage.
- Placement:** Place the machine on a firm, level surface. Ensure there is adequate space around the unit for ventilation and operation. Avoid direct sunlight or damp environments.
- Water Supply:** Connect the water inlet hose to a cold water tap. Ensure connections are tight to prevent leaks.
- Drainage:** Position the drain hose to allow for proper water discharge. It should be placed in a sink or a drain pipe, ensuring it is not kinked or blocked.

5. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the appliance's requirements.

## OPERATING INSTRUCTIONS

### Washing Cycle

1. **Load Laundry:** Open the wash tub lid and place clothes loosely into the wash tub. Do not overload. The maximum wash capacity is 16 kg.
2. **Add Water:** Fill the wash tub with water to the desired level, considering the load size.
3. **Add Detergent:** Add the appropriate amount of detergent directly into the wash tub.
4. **Select Wash Time:** Turn the "Wash Timer" knob to select the desired wash duration.
5. **Select Wash Mode:** Use the "Wash Selector" knob to choose the wash mode (e.g., Gentle, Normal).
6. **Start Washing:** The machine will begin the wash cycle. The reversible impeller and "Storm Wash" system will ensure efficient cleaning.
7. **Drain Water:** Once the wash cycle is complete, turn the "Drain Selector" knob to drain the water from the wash tub.

### Spin Cycle

1. **Transfer Laundry:** Carefully transfer the washed clothes from the wash tub to the spin tub. Distribute them evenly. The maximum spin capacity is 8 kg.
2. **Secure Lid:** Close the spin tub lid securely.
3. **Select Spin Time:** Turn the "Spin Timer" knob to select the desired spin duration.
4. **Start Spinning:** The machine will begin the spin cycle to remove excess water.
5. **Remove Laundry:** Once the spin cycle is complete, open the lid and carefully remove the spun clothes.

**Note:** The two independent motors allow for washing and spinning to occur simultaneously, optimizing your laundry process.

## MAINTENANCE

- **Cleaning the Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners.
- **Cleaning the Lint Filter:** Regularly remove and clean the lint filter located in the wash tub to ensure efficient operation and prevent lint buildup on clothes.
- **Tub Cleaning:** Periodically clean the wash and spin tubs to prevent mold and odor. Run a short cycle with hot water and a cup of white vinegar or a washing machine cleaner.
- **Drain Hose:** Ensure the drain hose is clear of obstructions.
- **Storage:** If storing the machine for an extended period, drain all water, clean the tubs, and leave lids slightly ajar to allow for air circulation.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; power outage; lid not closed properly.	Check power connection; check circuit breaker; ensure lids are fully closed.

Problem	Possible Cause	Solution
Water does not drain	Drain hose kinked or blocked; drain selector not set correctly.	Straighten drain hose; clear any blockages; set drain selector to 'Drain'.
Excessive vibration/noise	Machine not level; clothes unevenly distributed in spin tub; foreign objects.	Adjust leveling feet; redistribute laundry evenly; check for and remove foreign objects.
Poor washing results	Overloading; insufficient detergent; incorrect wash mode.	Reduce load size; use correct amount of detergent; select appropriate wash mode.

## SPECIFICATIONS

Feature	Detail
Brand	Hisense
Model Number	WSA1603P
Type	Semi-Automatic Twin Tub
Wash Capacity	16 kg
Spin Capacity	8 kg
Motors	2 Independent Motors
Wash System	"Storm Wash" High Efficiency
Special Features	Reversible Impeller, Water Saver, Lint Filter
Access Type	Top Load
Color	White
Material	Plastic
Product Weight	29.33 kg
Dimensions (Approx.)	Height: 257.81 cm, Width: 226.06 cm, Depth: 130.81 cm <small>Note: Dimensions as provided in product data. Please verify physical measurements if precise fit is required.</small>



**Figure 3:** Diagram illustrating the dimensions of the Hisense WSA1603P washing machine. The image shows a height of 257.81 cm, a width of 226.06 cm, and a depth of 130.81 cm.

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Hisense website. Contact details for service and technical assistance can typically be found there.

Official Hisense Website: [www.hisense.com](http://www.hisense.com)

