

[manuals.plus](#) /

› [Hotpoint](#) /

› [Hotpoint HIC 3C41 CW Fully Integrated Dishwasher User Manual](#)

## **Hotpoint HIC 3C41 CW**

# **Hotpoint HIC 3C41 CW Fully Integrated Dishwasher User Manual**

Model: HIC 3C41 CW

## **1. INTRODUCTION**

---

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Hotpoint HIC 3C41 CW fully integrated dishwasher. Please read these instructions carefully before using the appliance and retain them for future reference.



Image 1.1: Front view of the Hotpoint HIC 3C41 CW dishwasher with the door open, revealing the upper and lower racks and control panel.

## 2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons. This appliance is intended for household use only.

- Ensure the appliance is properly grounded.
- Do not operate the dishwasher if it is damaged.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aid specifically designed for dishwashers.
- Avoid touching the heating element during or immediately after a wash cycle.

## 3. INSTALLATION AND INITIAL SETUP

### 3.1 Unpacking and Positioning

Carefully remove all packaging materials. Position the dishwasher in the desired location, ensuring it is level. This model is a fully integrated appliance, designed to be built into kitchen cabinetry.

### 3.2 Water and Electrical Connections

Connect the water inlet hose to a cold water supply and the drain hose to a suitable drain. Ensure all connections are secure to prevent leaks. Connect the power cord to a grounded electrical outlet. Refer to the detailed installation diagram provided with your appliance for specific connection points.

### 3.3 Salt and Rinse Aid

Before first use, fill the salt dispenser with dishwasher salt and the rinse aid dispenser with rinse aid. These are crucial for optimal washing and drying performance, especially in areas with hard water.

## 4. OPERATING INSTRUCTIONS

### 4.1 Control Panel Overview

The control panel is located on the top edge of the dishwasher door. It features program selection buttons, indicators, and a display.



Image 4.1: Detailed view of the control panel, showing program selection buttons, delay start, and other function indicators.

### 4.2 Loading the Dishwasher

Proper loading ensures effective cleaning. Scrape off large food particles before loading. Place larger items in the lower basket and delicate items in the upper basket. Ensure spray arms can rotate freely.

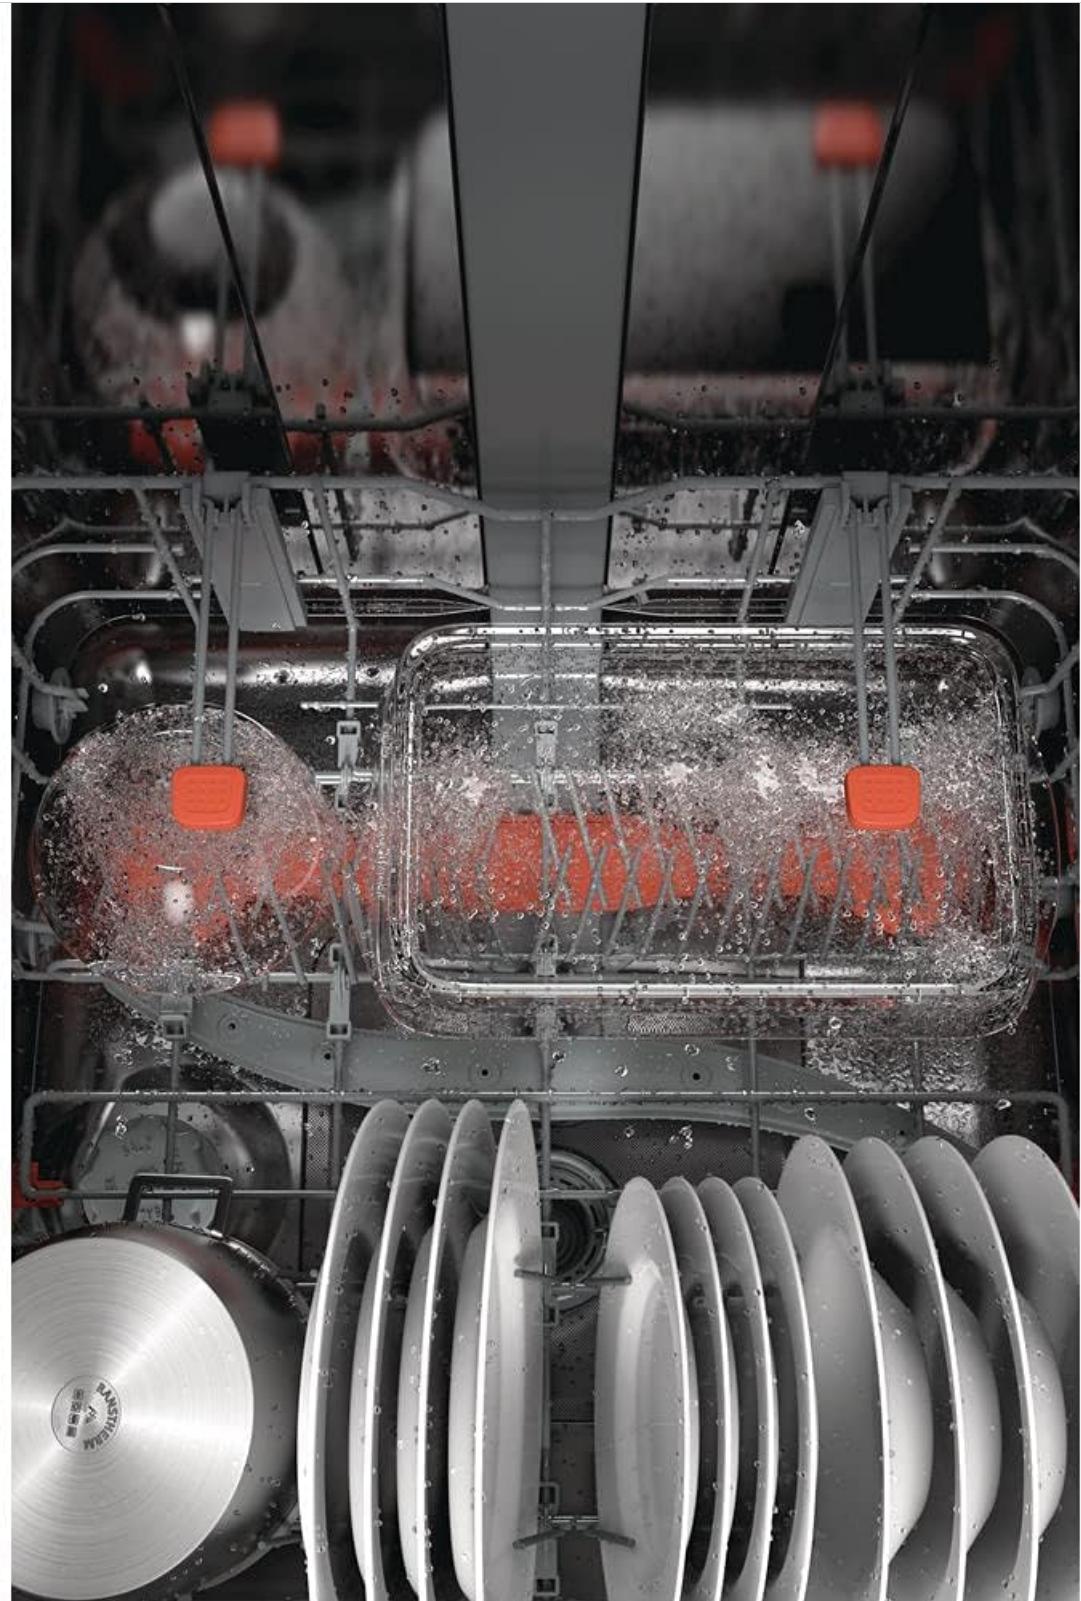


Image 4.2: Interior of the dishwasher with dishes loaded, demonstrating the flexible loading options of the Flexiload baskets.

### 4.3 Program Selection

Your dishwasher offers 8 optional wash cycles. Select the appropriate program based on the type and soil level of your dishes. Consult the program table in the full manual for detailed descriptions of each cycle.

### 4.4 Special Features

- **Active 3D Zone Wash:** This feature allows for concentrated washing power in specific areas, ideal for heavily soiled items.

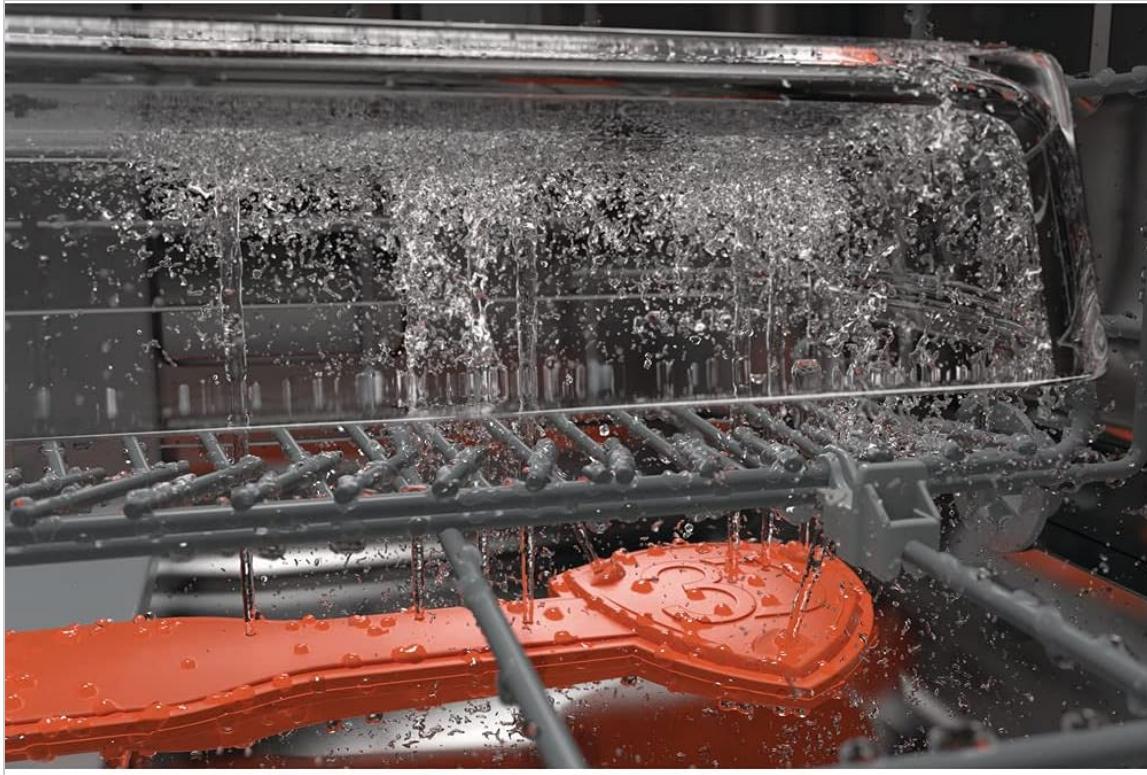


Image 4.3: Inside the dishwasher, showing water jets from the Active 3D Zone Wash system targeting dishes for intensive cleaning.

- **Flexiload Baskets:** The adjustable baskets provide flexibility to accommodate various dish sizes and shapes.
- **Automatic Door Opening:** At the end of certain cycles, the dishwasher door may automatically open to facilitate natural drying and improve energy efficiency.

## 5. MAINTENANCE AND CARE

---

### 5.1 Cleaning the Filters

Regularly clean the filter assembly located at the bottom of the dishwasher tub to prevent blockages and ensure optimal cleaning performance. Twist and remove the cylindrical filter, then separate and rinse all components under running water.

### 5.2 Cleaning the Spray Arms

Periodically check the spray arms for clogged nozzles. If necessary, remove the spray arms and clean the holes with a thin object like a toothpick. Ensure they can rotate freely after reinstallation.



Image 5.1: View of the lower spray arm, which should be checked for blockages and free rotation.

### 5.3 Exterior and Interior Cleaning

Wipe the exterior with a soft, damp cloth. For the interior, run a dishwasher cleaning cycle periodically or use a specialized dishwasher cleaner.

## 6. TROUBLESHOOTING

Before contacting service, check the following common issues:

- **Dishes not clean:** Ensure dishes are loaded correctly, spray arms are not blocked and can rotate, filters are clean, and sufficient detergent is used. Check water pressure.
- **Soap residue remaining:** This can occur if too much detergent is used, the rinse aid dispenser is empty, or the water temperature is too low. Try a different program or adjust rinse aid settings.
- **Lower spray arm not rotating:** Verify that the spray arm is correctly installed and not obstructed by dishes. Clean any clogged nozzles.
- **Dishwasher is noisy:** Check for items rattling against each other or against the spray arms. Ensure the dishwasher is level.
- **Water not draining:** Check the drain hose for kinks or blockages. Clean the filter assembly.

## 7. SPECIFICATIONS


Model Name	HIC 3C41 CW
Item Model Number	869991610630
Brand	Hotpoint
Installation Type	Fully Integrated (Built-in)


<b>Product Dimensions (DxWxH)</b>	55.5 cm x 59.8 cm x 82 cm
<b>Item Weight</b>	35.5 kg
<b>Place Settings</b>	14
<b>Optional Cycles</b>	8
<b>Noise Level</b>	41 dB
<b>Water Consumption per Cycle</b>	9.5 Liters
<b>Display Type</b>	LED
<b>Special Features</b>	Active 3D Zone Wash, Flexiload Baskets
<b>Material</b>	Stainless Steel
<b>Included Components</b>	Hotpoint HIC 3C41 CW Dishwasher Unit

## 8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official Hotpoint website. General return policies may vary based on the retailer. For specific details regarding product defects or returns, consult your point of purchase or the relevant help pages.

### Related Documents - HIC 3C41 CW

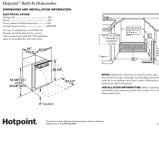	<p><a href="#">Hotpoint SDW60P Dishwasher Specifications and Features</a></p> <p>Detailed specifications for the Hotpoint SDW60P free-standing dishwasher, including energy rating, wash performance, dimensions, programmes, and key features like quick wash and glass care.</p>
	<p><a href="#">Hotpoint HDF310PGR Built-In Dishwasher: Dimensions, Installation &amp; Features</a></p> <p>Detailed specifications, dimensions, and features for the Hotpoint HDF310PGR Built-In Dishwasher, including electrical ratings, installation notes, and performance benefits.</p>
	<p><a href="#">Hotpoint Dishwasher Daily Reference Guide: Programs, Settings, and Troubleshooting</a></p> <p>Comprehensive daily reference guide for Hotpoint dishwashers, covering control panel functions, program selection, settings adjustment, loading tips, maintenance, and troubleshooting. Learn how to optimize your dishwasher's performance and energy efficiency.</p>

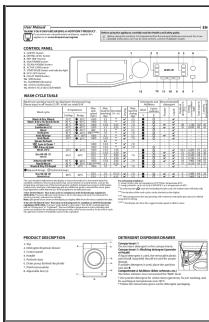

## [Hotpoint NDD 10748 DA UK Washer Dryer: User Manual, Wash Cycles, and Operation Guide](#)


Explore the Hotpoint NDD 10748 DA UK washer dryer with this comprehensive user manual.

Discover detailed wash cycles, operating instructions, energy-saving tips, troubleshooting advice, and maintenance procedures.



## [Hotpoint HSIC 3T127 UK Dishwasher Specifications](#)

Detailed technical specifications and performance data for the Hotpoint HSIC 3T127 UK dishwasher, including dimensions, features, and energy efficiency ratings.

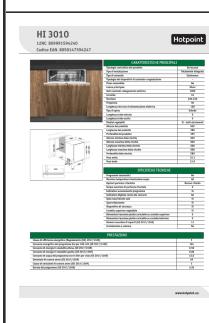

## [Hotpoint HI 3010 Fully Integrated Dishwasher Technical Specifications](#)

Comprehensive technical specifications and performance data for the Hotpoint HI 3010 fully integrated dishwasher, including detailed dimensions, energy efficiency ratings, program cycle information, and electrical requirements.