

[Manuals.plus](#) /

› [USARMT](#) /

› USARMT Replacement Remote Control for HITACHI Roku TVs User Manual

USARMT 5502-AKB-AIO-HITACHI

USARMT Replacement Remote Control for HITACHI Roku TVs User Manual

Model: 5502-AKB-AIO-HITACHI

1. INTRODUCTION

This manual provides comprehensive instructions for the USARMT Replacement Remote Control, designed specifically for use with HITACHI Roku TVs. This remote is pre-programmed and requires no setup or pairing. Simply insert batteries to begin use.



Image 1.1: Front view of the USARMT replacement remote control, showing the power button, navigation pad, and dedicated app keys.

2. COMPATIBILITY

This USARMT replacement remote control is exclusively compatible with **HITACHI Roku TVs**. It is not designed for use with Roku Streaming Boxes, Roku Sticks, or any other non-Roku TV devices.

- **Compatible with:** HITACHI Roku TVs.
- **Not compatible with:** Roku Streaming Boxes, Roku Sticks, or other non-Roku TV models.

Compatibility

For **RokuTV** ONLY



NOT for Roku Box



NOT for Roku Stick



Image 2.1: Visual compatibility guide illustrating that the remote works only with Roku TVs and not with Roku streaming boxes or sticks.

3. SETUP: BATTERY INSTALLATION

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for immediate use with your compatible HITACHI Roku TV.

4. OPERATING INSTRUCTIONS

This remote control features standard navigation and playback buttons, along with dedicated application keys for quick access to popular streaming services. Refer to the diagram below for button functions.



TV POWER: Turn on/off the TV.



BACK: Goes back to previous menu/screen.
Home screen tile: Moves highlight back to the Home screen option.
Watching Antenna TV or a TV input: Returns to Home screen.
Playing streaming content: Stops playing stream and returns to the previous menu or screen.
Browsing streaming content: Goes to the previous level in the content tree.



HOME: Immediately returns to the Home screen.



INSTANT/REPLAY: Select models Streaming programs that support this feature and broadcast TV if Live TV Pause is enabled ,jumps back a few seconds with each press and resumes playing.
Broadcast TV if live tv pause is disabled ,jumps to previous channel.
When using an on-screen keyboard, backspaces in the text you are entering.



OPTIONS: Displays additional options when available.



Accesses to "NETFLIX"



Accesses to "sling"



Accesses to "rdio"



Accesses to "amazon"

Image 4.1: Detailed diagram illustrating the function of each button on the remote control.

- **Power Button (⏻):** Turns the TV on or off.
- **Back Button (←):** Returns to the previous menu or screen.
- **Home Button (🏠):** Immediately returns to the Home screen.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and select items. The **OK** button confirms selections.
- **Instant Replay (↺):** Jumps back a few seconds in streaming content or broadcast TV (if Live TV Pause is enabled).
- **Sleep Timer (🌙):** Accesses sleep timer settings (functionality may vary by TV model).
- **Asterisk/Options (*):** Displays additional options or settings relevant to the current screen.

- **Rewind (), Play/Pause (), Fast Forward ():** Control media playback.
- **Dedicated App Keys (Netflix, Sling, Rdio, Amazon):** Provide direct access to these streaming applications.





Image 4.2: Side view of the remote control, highlighting the volume up, volume down, and mute buttons.

- **Volume Up ():** Increases TV volume.
- **Volume Down ():** Decreases TV volume.
- **Mute ():** Mutes or unmutes TV audio.

5. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases. Always replace both batteries at the same time with new ones.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

6. TROUBLESHOOTING

If you encounter issues with your remote control, try the following solutions:

Problem	Solution
Remote is not responding.	◦ Ensure batteries are inserted correctly with correct polarity. ◦ Replace old batteries with new AAA batteries. ◦ Check for any obstructions between the remote and the TV's infrared sensor. ◦ Confirm the remote is pointed directly at the TV.
Certain buttons do not work.	◦ Verify that the remote is compatible with your specific HITACHI Roku TV model (refer to Section 2). ◦ Clean the remote's surface, especially around the unresponsive buttons, to remove any debris.
Remote works intermittently.	◦ Replace batteries. Low battery power can cause intermittent functionality. ◦ Ensure there are no strong light sources (e.g., direct sunlight, fluorescent lights) interfering with the IR signal.

7. SPECIFICATIONS

- **Model Number:** 5502-AKB-AIO-HITACHI
- **Brand:** USARMT
- **Compatibility:** HITACHI Roku TVs ONLY
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Dimensions:** Approximately 6 x 1.5 x 0.5 inches (15.24 x 3.81 x 1.27 cm)

- **Item Weight:** Approximately 15 ounces (425 grams)
- **Special Features:** Ergonomic design, dedicated app keys (Netflix, Sling, Rdio, Amazon)

8. WARRANTY AND SUPPORT

USARMT is committed to providing premium customer service. This product includes a **30-day hassle-free return policy** from the date of purchase. If you experience any issues or have questions regarding your remote control, please contact USARMT customer support through your purchase platform for assistance.

For further support, please refer to the contact information provided by your retailer or the USARMT official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08LZVF8MT>

More documents and user manuals: <https://manuals.plus/>