

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [PUPPY KITTY](#) /
- › [PUPPY KITTY M80 Automatic Pet Feeder User Manual](#)

## PUPPY KITTY M80

# PUPPY KITTY M80 Automatic Pet Feeder

## USER MANUAL

### 1. Product Overview

---

The PUPPY KITTY M80 Automatic Pet Feeder is designed to provide convenient and consistent feeding for your cats and dogs. Featuring a 4-liter capacity and an intuitive touchscreen control panel, this feeder allows you to schedule up to 5 meals per day with precise portion control. It includes a durable stainless steel bowl for hygiene and an anti-stuck design to ensure smooth food dispensing.



Image 1: The PUPPY KITTY M80 Automatic Pet Feeder, showcasing its design and the included stainless steel bowl, with a cat and dog nearby.

## 2. Key Features

- **Flexible Meal Scheduling:** Program up to 5 meals per day with adjustable portion sizes (1-40 portions, approx. 3-8 grams per serving).
- **4L Large Capacity:** Suitable for small to medium pets, reducing the frequency of refills.
- **Touchscreen Control Panel:** Ergonomic design for easy and quick programming.
- **10-Second Voice Recorder:** Record a personalized message to call your pet at meal times. The message repeats 3 times per meal.
- **Anti-Stuck Design:** Utilizes auto-reversal technology to prevent food blockages.
- **Dual Power Supply:** Operates via AC power adapter or 3 x D batteries (not included) for uninterrupted feeding during power outages.
- **Food Freshness:** Includes a desiccant bag and a secure screw-cap lid to keep dry food fresh and prevent pet access.
- **Easy to Clean:** Made from high-quality food-grade material with detachable components for simple cleaning.

- **Safety Certified:** CE, FCC, and RoHS certified for safe operation.

### 3. Package Contents

---

Please check the package contents upon unboxing:

- PUPPY KITTY M80 Automatic Pet Feeder Unit
- Stainless Steel Food Bowl
- Power Adapter
- Desiccant Bag (pre-installed or separate)
- User Manual (this document)

### 4. Setup Guide

---

1. **Unpack the Feeder:** Carefully remove all components from the packaging.
2. **Assemble the Bowl:** Place the stainless steel bowl into the designated slot at the base of the feeder.
3. **Power Supply:**
  - **AC Power:** Connect the power adapter to the feeder's power input port and plug it into a standard wall outlet.
  - **Battery Power (Backup):** Open the battery compartment at the bottom of the feeder and insert 3 x D-size batteries (not included). Ensure correct polarity.



Image 2: Internal view illustrating the anti-stuck food dispensing mechanism and the battery compartment at the base of the unit.

4. **Fill the Food Hopper:** Open the top lid and pour dry pet food into the transparent hopper. Ensure the food kibble size is between 5-15mm for optimal dispensing.
5. **Insert Desiccant Bag:** If not pre-installed, place the desiccant bag into its designated slot under the lid to maintain food freshness. Replace every 1-2 months.



Image 3: Details of the touchscreen control panel, the removable stainless steel bowl, and the desiccant bag placement for food preservation.

6. **Secure the Lid:** Close the lid firmly to prevent spills and maintain food freshness.

## 5. Operating Instructions

The feeder features an intuitive touchscreen display for programming. Refer to the icons on the display for navigation.

### 1. Setting Current Time:

Press the 'Set' button (often represented by a gear icon) to enter time setting mode. Use the '+' and '-' buttons to adjust hours and minutes. Press 'Set' again to confirm and move to the next setting.

### 2. Programming Meal Times:

The feeder supports up to 5 meals per day. Press 'Set' until you reach the meal programming interface (e.g., 'Meal 1').

- Use '+' and '-' to set the desired feeding time for each meal.
- Press 'Set' to confirm the time and move to portion size setting for that meal.

### 3. Setting Portion Sizes:

After setting the meal time, the display will show the portion setting. Use '+' and '-' to select the number of portions

(1-40) for that specific meal.

- Each portion is approximately 3-8 grams, depending on kibble density and size.
- Press 'Set' to confirm the portion size and proceed to the next meal setting or exit programming.



Image 4: The feeder's display showing options for custom meal plans, including up to 5 meals a day and 1-40 portion control, with a cat observing the feeder.

#### 4. **Recording Voice Message:**

Locate the microphone icon on the control panel. Press and hold the 'Record' button (often a microphone symbol) for about 2 seconds until you hear a beep. Speak your 10-second message clearly. Release the button to save. The message will play 3 times during each scheduled meal.

#### 5. **Manual Feeding:**

To dispense food manually, press the 'Manual Feed' button (often a paw print or food dispensing icon). Each press will dispense one portion.

## 6. **Maintenance and Cleaning**

Regular cleaning ensures the longevity and hygiene of your pet feeder.

### 1. **Disassembly for Cleaning:**

Unplug the feeder from power. Remove the food hopper and the stainless steel bowl. These parts are detachable for thorough washing.



Image 5: Illustration of the detachable feeding bucket and food tray, highlighting their ease of removal for cleaning to prevent food residue buildup.

### 2. **Washing Components:**

Wash the stainless steel bowl and the food hopper with mild soap and water. Rinse thoroughly and allow them to air dry completely before reassembling.

### 3. **Cleaning the Main Unit:**

Wipe the main body of the feeder with a soft, damp cloth. Do not submerge the main unit in water or expose it to excessive moisture, as this can damage electronic components.

### 4. **Desiccant Bag Replacement:**

Replace the desiccant bag every 1-2 months to ensure optimal food freshness and prevent moisture buildup.

### 5. **Battery Replacement:**

If using battery backup, replace the D-size batteries when the low battery indicator appears or if the feeder stops functioning during a power outage. Ensure proper disposal of old batteries.

## 7. Troubleshooting

Problem	Possible Cause	Solution
Feeder not powering on.	No power connection; Batteries are dead or incorrectly installed.	Check AC adapter connection. Replace batteries and ensure correct polarity.
Food not dispensing.	Hopper empty; Food jammed; Dispensing mechanism blocked; Incorrect programming.	Refill hopper. Clear any food blockages. Check programming for meal times and portions.
Voice message not playing.	Message not recorded; Volume too low.	Re-record the voice message. Ensure the feeder's volume is not muted or too low (if adjustable).
Display not responding.	Temporary software glitch; Power issue.	Unplug and re-plug the power adapter (or remove/reinsert batteries) to reset the unit.

## 8. Specifications

<b>Model</b>	M80
<b>Brand</b>	PUPPY KITTY
<b>Product Dimensions</b>	21 x 21 x 26.8 cm
<b>Item Weight</b>	1.5 kg
<b>Capacity</b>	4 Liters
<b>Material</b>	Acrylonitrile Butadiene Styrene (ABS)
<b>Target Species</b>	Dog, Cat
<b>Recommended Food Type</b>	Dry Food (kibble size 5-15mm)
<b>Power Supply</b>	AC Adapter, 3 x D Batteries (backup)
<b>Max Meals/Day</b>	5
<b>Max Portions/Meal</b>	40



Image 6: Detailed dimensions of the 4L automatic pet feeder, showing height, width, and depth measurements.

## 9. Safety Information

- Do not use with wet food, canned food, or treats. This feeder is designed for dry kibble only.
- Keep out of reach of children and pets when not in use or during assembly/disassembly.
- Ensure the feeder is placed on a stable, level surface to prevent tipping.
- Do not immerse the main unit in water or any other liquid.
- Only use the provided power adapter. If damaged, contact customer support for a replacement.
- Regularly inspect the power cord for any damage.
- Do not attempt to repair or modify the feeder yourself. Refer to qualified personnel for service.

## 10. Warranty and Support

For warranty information or technical support, please refer to the contact details provided on the product packaging or the official PUPPY KITTY website. Keep your purchase receipt as proof of purchase.

© 2024 PUPPY KITTY. All rights reserved.

## Related Documents - M80

	<p><a href="#">Puppy Kitty Automatic Pet Feeder Quick Guide</a></p> <p>A concise guide to setting up and using the Puppy Kitty Automatic Pet Feeder, including manual feeding, meal plans, and app connectivity.</p>
	<p><a href="#">Puppy Kitty Automatic Cat Food Dispenser User Manual</a></p> <p>Comprehensive user manual for the Puppy Kitty Automatic Cat Food Dispenser with HD Camera, 2.4G Wi-Fi, app control, video, and night vision. Includes setup, operation, and troubleshooting.</p>
	<p><a href="#">Puppy Kitty Automatic Pet Feeder and Water Fountain User Manual</a></p> <p>Comprehensive user manual for the Puppy Kitty Automatic Pet Feeder and Water Fountain, covering installation, programming, maintenance, and troubleshooting in multiple languages.</p>
	<p><a href="#">DU4L-VS Automatic Pet Feeder - Product Information</a></p> <p>Product details for the DU4L-VS automatic pet feeder, including manufacturer, EC representative, and compliance information. Features include voice recording capability.</p>