

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PHI VILLA](#) /

› [PHI VILLA 40-inch Electric Fireplace Insert User Manual](#)

PHI VILLA B08M3S47KT

PHI VILLA 40-inch Electric Fireplace Insert User Manual

Model: B08M3S47KT

1. INTRODUCTION

Thank you for choosing the PHI VILLA 40-inch Electric Fireplace Insert. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new electric fireplace. Please read all instructions carefully before installation and use, and retain this manual for future reference.

2. SAFETY INFORMATION

- Read all instructions before using this fireplace.
- This fireplace is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains, at least 3 feet (0.9 m) from the front of the fireplace.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the fireplace is left operating and unattended.
- Do not operate any fireplace with a damaged cord or plug or after the fireplace malfunctions, has been dropped, or damaged in any manner.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect the fireplace, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fireplace.
- Always plug fireplaces directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This fireplace is safe for use in North America and includes a safety thermal cut-off device to ensure safe operation.

3. PACKAGE CONTENTS

Before beginning installation, ensure all parts are present. If any part is missing or damaged, do not attempt to assemble or install the product. Contact customer service for assistance.



Image showing the included components: Electric Fireplace, Remote Control, Metal Bracket, Screw Kits, and Decorative Crystals. It also illustrates the two installation modes: Wall-mounted and Inserted.

- Electric Fireplace Insert
- Remote Control
- Metal Bracket (for wall mounting)
- Screw Kits
- Decorative Crystals
- User Manual (this document)

4. INSTALLATION

This electric fireplace offers versatile installation options: it can be recessed into a wall or wall-mounted. Choose the method that best suits your space.

 
300 COLOR COMBINATIONS

3 Flame Color & 10 backlight & 10 carbon bed color



▼ 6 Adjustable Flame Brightness


▼ 6 Adjustable Carbon Bed Brightness



This image illustrates the flexibility of the PHI VILLA electric fireplace, suitable for both recessed and wall-mounted installations.

4.1. Recessed Installation

For recessed installation, a wall opening must be prepared according to the specified dimensions. Ensure there is adequate clearance around the unit for ventilation.

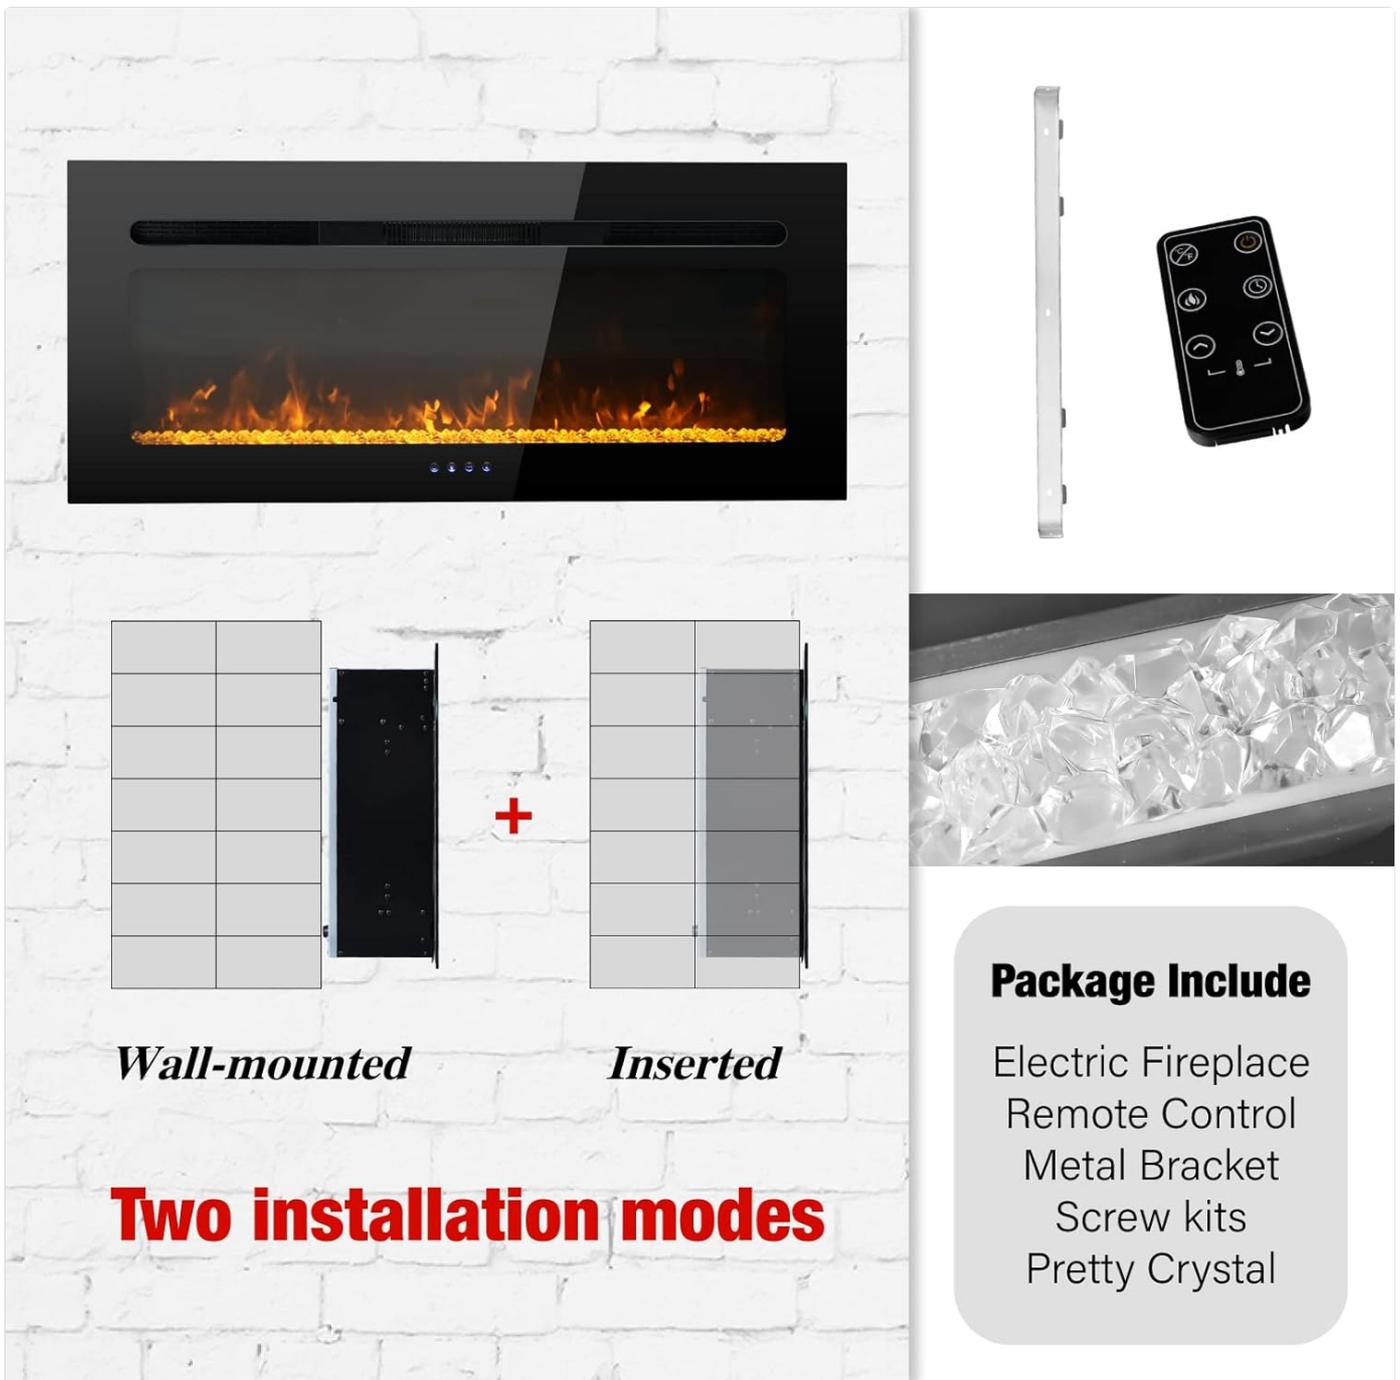

Detailed diagram showing the overall unit dimensions (40"W x 6.2"D x 17.7"H) and the required wall opening cutout dimensions (36.7"W x 6.3"D x 17.1"H) for recessed installation.

Cutout Dimensions: 36.8" W x 6.3" D x 17.1" H

1. Carefully measure and cut the wall opening to the specified dimensions.
2. Ensure the opening is structurally sound and can support the weight of the fireplace.
3. Insert the fireplace into the prepared opening.
4. Secure the fireplace using the provided screw kits, ensuring it is flush with the wall.

4.2. Wall Mounted Installation

For wall-mounted installation, use the provided metal bracket to secure the fireplace to a sturdy wall.

1. Locate a suitable wall stud for mounting the metal bracket.
2. Attach the metal bracket to the wall using the provided screws, ensuring it is level and securely fastened.
3. Carefully lift the fireplace and hook it onto the metal bracket.

4. Secure the bottom of the fireplace to the wall, if necessary, to prevent movement.

4.3. Electrical Connection

This electric fireplace is designed for simple plug-and-play operation. No hardwiring is involved.

- Ensure the power cord is easily accessible after installation.
- Plug the fireplace directly into a standard 120V AC wall outlet. Do not use extension cords or power strips.

5. OPERATION

Your PHI VILLA electric fireplace can be operated using either the touch screen controls on the unit or the included remote control.

Your browser does not support the video tag.


Official product video demonstrating the features and operation of the PHI VILLA Electric Fireplace Insert, including flame effects and controls.

5.1. Power On/Off

Press the power button on the control panel or remote control to turn the fireplace on or off.

5.2. Flame Color Adjustment

The fireplace features 3 switchable flame color effects.

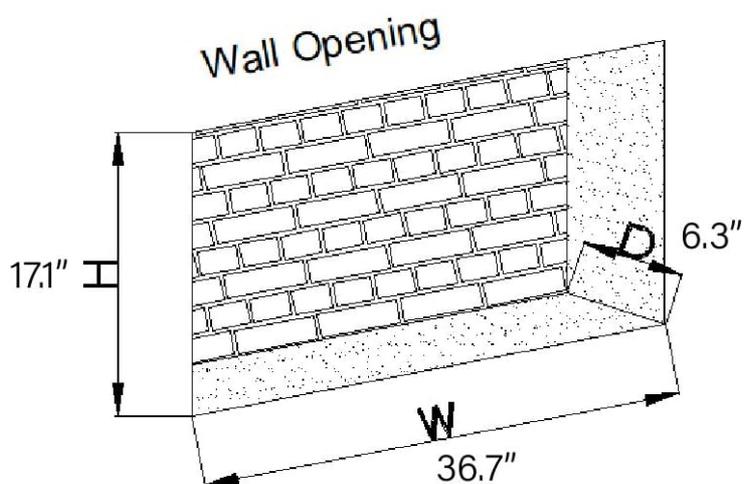

Model	Unit Overall Dimensions	Cutout Dimensions(W*D*H)
AH-FP-30F	30" x 6.2" x 17.7"	26.75"x 6.313"x 17.125"
AH-FP-36F	36" x 6.2" x 17.7"	32.75"x 6.313"x 17.125"
AH-FP-40F	40" x 6.2" x 17.7"	36.75"x 6.313"x 17.125"
AH-FP-48F	48" x 6.2" x 17.7"	44.75"x 6.313"x 17.125"

This image displays the three available realistic flame effects: classic orange, cool blue, and a vibrant combination of orange and blue.

- Press the flame color button to cycle through the available colors: Orange, Blue, and Orange & Blue.
- The flame effect can be operated independently of the heating function.

5.3. Flame Brightness Control

Adjust the intensity of the flame effect with 6 adjustable brightness levels.



This image shows a visual representation of the six adjustable flame brightness levels, from dim to bright.

- Use the brightness control button to cycle through the 6 levels of flame brightness.

5.4. Temperature Control

The fireplace features a digital temperature adjustment function and a safety thermal cut-off device.

- Set your desired ambient temperature using the temperature control buttons.
- When the room reaches the set temperature, the heater will automatically stop heating.
- If the ambient temperature drops 2°C below the desired setting, the heater will resume heating.

5.5. Timer Function

An 8-hour timer allows for automatic shut-off.

- Activate the timer function to set the fireplace to turn off automatically after up to 8 hours.

5.6. Backlight and Carbon Bed Color

Enhance the ambiance with 10 backlight and 10 carbon bed color options.



This image showcases the wide range of 300 color combinations possible with 3 flame colors, 10 backlight colors, and 10 carbon bed colors, along with adjustable brightness for both flame and carbon bed.

- Use the dedicated buttons on the control panel or remote to cycle through the 10 backlight and 10 carbon bed color options.
- Adjust the brightness of the carbon bed independently.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your electric fireplace.

- **Cleaning:** Always disconnect the power before cleaning. Use a soft, damp cloth to clean the exterior surfaces. Do not use abrasive cleaners or sprays.
- **Glass Panel:** Clean the glass panel with a soft cloth and glass cleaner. Do not scratch the surface.
- **Ventilation:** Ensure the air intake and exhaust vents are clear of dust and debris to maintain proper airflow.
- **Storage:** If storing the fireplace for an extended period, unplug it and store it in a dry, dust-free location.

7. TROUBLESHOOTING

If you encounter issues with your fireplace, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, power cord loose, or main power switch off.	Check if the unit is plugged in securely. Ensure the wall outlet is functional. Verify the main power switch is on.
No heat output.	Heater function not activated, or desired temperature reached.	Activate the heater function. Adjust the desired temperature higher than the current room temperature.

Problem	Possible Cause	Solution
Flame effect not working.	Flame effect function not activated.	Press the flame effect button to turn on the flames.
Remote control not working.	Batteries dead or incorrect orientation.	Replace batteries. Ensure batteries are inserted with correct polarity.
Unit overheats and shuts off.	Safety thermal cut-off activated.	Unplug the unit, wait 10-15 minutes for it to cool down, then plug it back in. Ensure vents are not blocked.

8. SPECIFICATIONS

Feature	Specification
Brand	PHI VILLA
Model	B08M3S47KT
Product Dimensions	40"W x 6.2"D x 17.75"H
Power Source	AC
Heat Output	5100 British Thermal Units (BTU) / 1500W
Installation Type	Recessed, Wall Mount
Material	Tempered Glass
Special Feature	Corded, Timer, Remote Control, Touch Screen, Adjustable Flame Color/Brightness
Weight	42.9 pounds

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official PHI VILLA website. Keep your purchase receipt as proof of purchase.

