



Manuals.plus /

› WOHOMO /

› WOHOMO Folding Desk Instruction Manual

WOHOMO ASCOLI-OAK-DH-WOM

WOHOMO Folding Desk Instruction Manual

Model: ASCOLI-OAK-DH-WOM

Brand: WOHOMO

1. INTRODUCTION

Thank you for choosing the WOHOMO Folding Desk. This compact and versatile desk is designed for small spaces, offering a convenient workstation for home offices, bedrooms, or any area where space-saving is essential. Its easy assembly and foldable design make it highly portable and simple to store when not in use.



Figure 1.1: WOHOMO Folding Desk in use.

2. SAFETY INFORMATION

- Ensure all parts are securely fastened before use.
- Do not exceed the maximum weight recommendation of 200 pounds (90.7 kg).
- Keep fingers clear of folding mechanisms when folding or unfolding the desk.
- Place the desk on a flat, stable surface to prevent tipping.
- Keep away from open flames and excessive moisture.

3. PARTS LIST

Before beginning assembly, ensure all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

Part	Description	Quantity
Tabletop	Main desk surface (Beige wood grain)	1
Leg Frames	White alloy steel frames with folding mechanism	2
Nylon Buckles	For securing the tabletop to the leg frames	2
Hardware Pack	Screws, wrench, and other small parts for assembly	1 set
Assembly Instruction	Detailed manual for setup	1
Accessory Hook	Optional hook for hanging bags/headphones	1

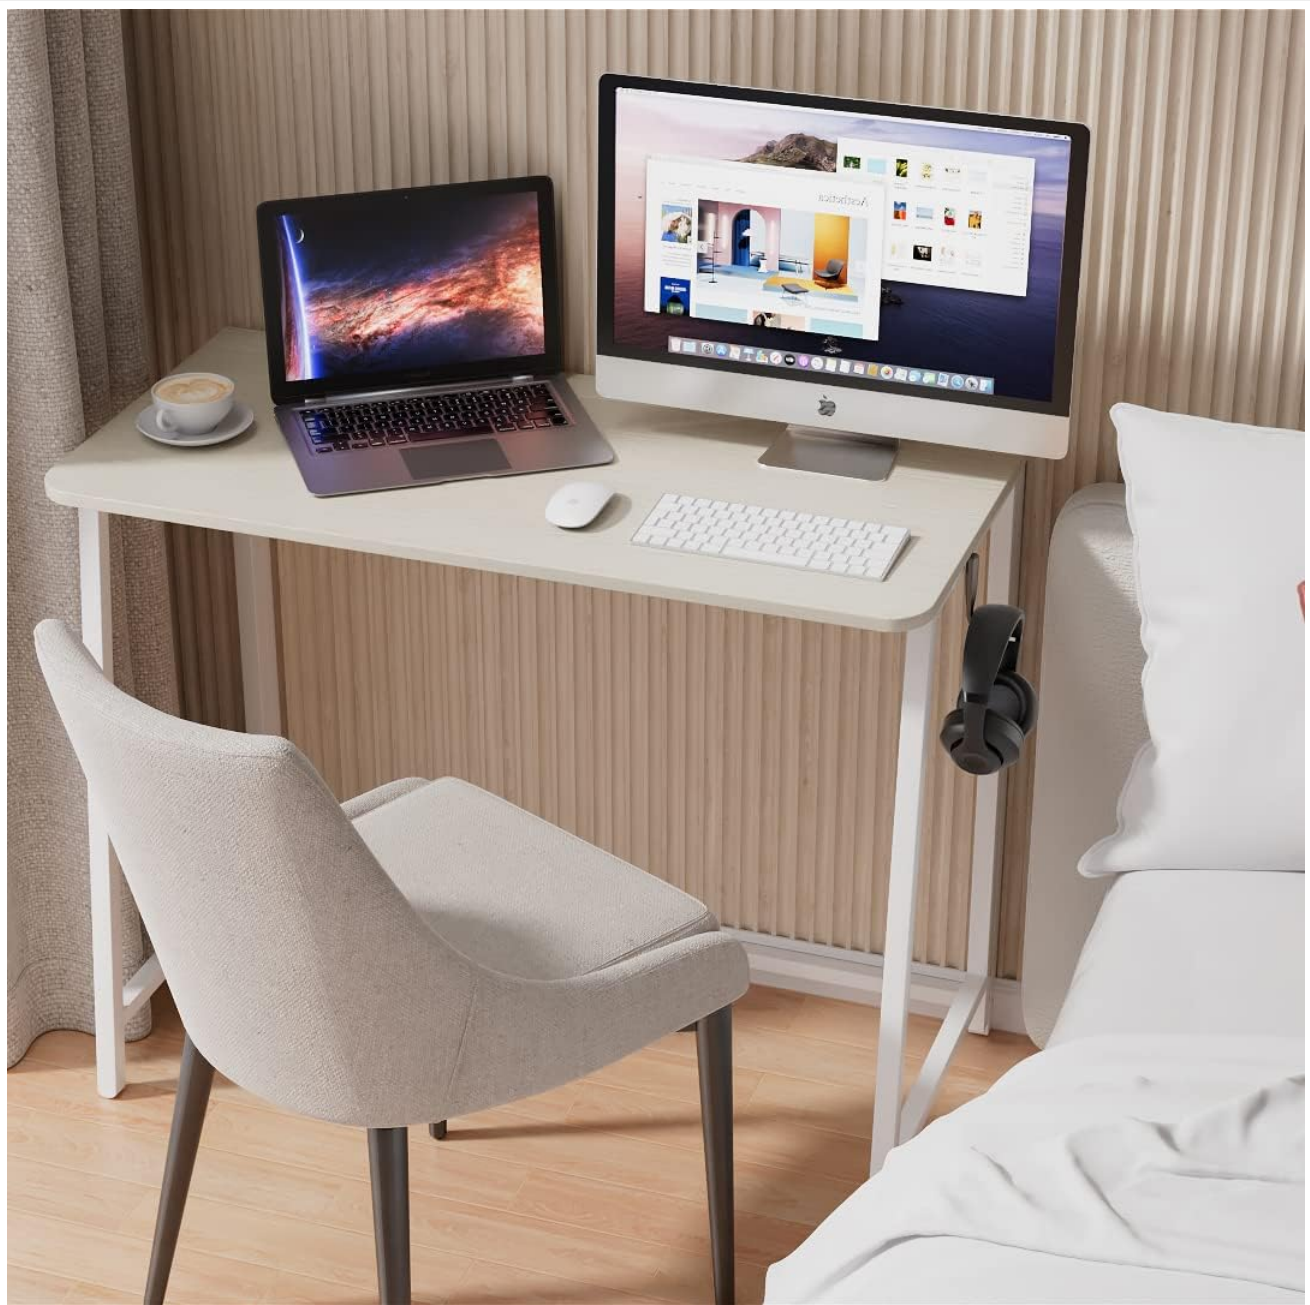


Figure 3.1: Desk dimensions and folded thickness.

4. SETUP & ASSEMBLY

The WOHOME Folding Desk is designed for easy assembly. Follow these steps to set up your desk:

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, flat surface to

ensure nothing is missing.

2. **Assemble Leg Frames:** The leg frames come in separate pieces. Connect the horizontal bars to the vertical supports using the provided screws and wrench. Ensure all connections are tight and stable.
3. **Attach Nylon Buckles:** Locate the pre-drilled holes on the underside of the tabletop. Screw in the two nylon buckles to these positions. These buckles will secure the tabletop to the leg frames.
4. **Connect Tabletop to Frames:** Align the assembled leg frames with the tabletop. The nylon buckles should slide into corresponding slots on the leg frames. Gently press down until the tabletop clicks securely into place.
5. **Install Accessory Hook (Optional):** If desired, attach the accessory hook to the side of the desk frame for hanging items like headphones or bags.



Smooth Curved Edge

Protect and cherish you every day

Extra 2 Triangle Support

Enhance the stability,max. load up to 300lbs



Foot Pad

Protect your floor,move smoothly and quiet

Figure 4.1: Assembly steps for the WOHOMO Folding Desk.

Your browser does not support the video tag.

Video 4.1: Official WOHOMO video demonstrating the folding and unfolding of the desk, highlighting its space-saving features and ease of use.

5. OPERATING INSTRUCTIONS

5.1 Unfolding the Desk

1. Place the folded desk on a flat surface.
2. Gently pull the two leg frames outwards until they are fully extended and form a stable rectangular base.
3. Ensure the nylon buckles on the underside of the tabletop are securely engaged with the top bar of the leg frames. This provides stability and prevents wobbling.

5.2 Folding the Desk for Storage

1. Clear all items from the desk surface.
2. Locate the nylon buckles on the underside of the tabletop. Gently disengage them from the leg frames by lifting the tabletop slightly.
3. Fold the leg frames inwards towards the center of the tabletop. The desk will collapse into a slim, compact form.
4. Once folded, the desk is only 2.76 inches (7 cm) thick, making it easy to store behind a door, under a bed, or in a small corner.



Figure 5.1: Examples of compact storage for the WOHOME Folding Desk.

6. MAINTENANCE

- **Cleaning:** Wipe the desk surface with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Tighten if necessary.
- **Storage:** Store the desk in a dry, cool place away from direct sunlight and extreme temperatures to prevent warping or damage to the wood finish.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Desk wobbles after assembly.	Screws are loose or nylon buckles are not fully engaged.	Tighten all screws. Ensure nylon buckles are securely clicked into place.
Difficulty folding/unfolding.	Mechanism might be stiff or obstructed.	Ensure no objects are obstructing the folding mechanism. Apply a small amount of silicone lubricant to hinges if necessary.
Surface scratches or marks.	Sharp objects or abrasive cleaning.	Use soft cloths for cleaning. Avoid dragging sharp objects across the surface. Minor scratches may be concealed with furniture polish.

8. SPECIFICATIONS

Brand:	WOHOMO
Model Number:	ASCOLI-OAK-DH-WOM
Product Dimensions (Unfolded):	15.75"D x 31.5"W x 29.52"H (40cm D x 80cm W x 75cm H)
Product Dimensions (Folded):	Approx. 2.76"D x 31.5"W x 29.52"H (7cm D x 80cm W x 75cm H)
Color:	Beige (Oak finish) with White frame
Base Material:	Engineered Wood + Alloy Steel
Top Material Type:	Melamine faced chipboard
Item Weight:	14.9 Pounds (6.76 kg)
Maximum Weight Recommendation:	200 Pounds (90.7 kg)
Special Features:	Portable, Lightweight, Foldable

9. WARRANTY & SUPPORT

The WOHOMO Folding Desk comes with a **Limited Warranty**. For specific details regarding warranty coverage, please refer to the warranty card included in your product packaging or contact WOHOMO customer support directly.

For any questions, assistance with assembly, or troubleshooting, please visit the official WOHOMO website or contact their customer service team:

WOHOMO Store: Visit WOHOMO Store on Amazon

General Support: Refer to the contact information provided in your product's assembly instruction manual.