

Braun 7-71 N1200s

Braun Series 7-71 N1200s Men's Shaver User Manual

Model: 7-71 N1200s | Brand: Braun

1. INTRODUCTION

Welcome to the user manual for your new Braun Series 7 electric shaver. This manual provides essential information on how to set up, operate, maintain, and troubleshoot your shaver to ensure optimal performance and longevity. Please read these instructions thoroughly before using the appliance. Keep this manual for future reference.

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, injury, or damage to the appliance, always observe the following safety precautions:

- Your appliance is provided with a Safety Extra Low Voltage plug-in power supply. To avoid risk of electric shock, do not exchange or tamper with any part of it.
- Only use Braun power supply type.
- This appliance is suitable for cleaning under running water and use in a bathtub or shower. For safety reasons, it can only be operated cordless.
- Do not shave with a damaged foil or cord.
- When the distance comb is removed, the cutting system should not be pressed into the skin. **Risk of injury!**
- Do not open the appliance! The built-in rechargeable batteries can only be replaced by an authorized Braun Service center.
- Only at the end of the product's useful life, disassemble the rechargeable battery for disposal reasons: Disassemble the housing as shown in the battery removal pictures, remove the rechargeable battery and recycle or dispose of properly, according to local guidelines. Disassembling the appliance will destroy it and invalidate the warranty.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the safe use of the appliance and understand the hazards involved. Children shall not play with the appliance and user maintenance shall not be made by children.

- Keep power supply and charging stand dry.
- Do not expose the appliance to temperatures higher than 50 °C / 122 °F for extended periods of time.
- The brush (03-BR) must not be used on damaged or irritated skin or on wounds. If skin irritation occurs, discontinue use.
- Avoid direct contact with eyes and hairline.
- The body trimmer (06-BDT) must only be used with comb attachment in delicate areas.

3. WHAT'S IN THE BOX

Your Braun Series 7 shaver package includes the following items:

- 1x Series 7 Electric razor for men - Noir
- 1x Precision Trimmer attachment
- 1x Travel case
- 1x Soft Pouch
- 1x Smart plug for automatic 100-240 voltage adjustment
- 1x Cleaning Brush



Image: All components included in the Braun Series 7 shaver package.

4. PRODUCT OVERVIEW AND SETUP

4.1. Components and Features

Familiarize yourself with the main components of your Braun Series 7 shaver:

- **Shaver Head with 360° Flex:** Adapts to every curve for maximum skin contact.
- **AutoSense Technology:** Reads and adapts motor power to your beard density.
- **Power Button:** Turns the shaver on/off.
- **LED Display:** Shows battery level and cleaning indicators.
- **EasyClick System:** Allows for quick attachment changes.
- **Precision Trimmer Attachment:** For detailing and shaping.

BRUNN

Series 7



360°
FLEX

Smooth Shave in

Tricky Areas



360°
Adaptive
System

AutoSense
Technology



+



Precision Trimmer

50 min

Li-Ion⁺
Battery



Wet or Dry
Use



Made in
Germany

SHAVER KIT

7018s

Image: Key features of the Braun Series 7 shaver, including its flexible head and adaptive technology.

4.2. Charging the Shaver

Before first use, fully charge your shaver. A full charge provides up to 3 weeks of shaving (50 minutes of cordless operation). A 5-minute quick charge is sufficient for one full shave.

1. Ensure the shaver is dry before charging.
2. Connect the smart plug to the shaver and then to a power outlet.
3. The LED display will indicate charging progress. Once fully charged, the battery indicator will show full.

The shaver can be used cordless only, especially when used in wet conditions.

5. OPERATING THE SHAVER

5.1. General Shaving Tips

- For best results, shave before washing your face.
- Hold the shaver at a right angle (90°) to your skin.
- Stretch your skin and shave against the direction of beard growth.
- Apply gentle, even pressure.



Image: Demonstrating the correct way to hold and use the shaver for an effective shave.

5.2. AutoSense Technology

The Braun Series 7 features AutoSense technology, which reads your beard density and adapts the shaver's motor power accordingly. This ensures efficient shaving even on tough beards, capturing and cutting more hair in every stroke.



Image: Visual representation of AutoSense Technology detecting and adjusting to beard density.

5.3. 360° Flex Head

The shaver's 360° Flex head adapts to the contours of your face, ensuring maximum skin contact and a smooth shave even in tricky areas like the jawline and neck.



Image: The flexible shaver head pivots to maintain contact with facial contours.

5.4. Wet & Dry Use

Your Braun Series 7 shaver is 100% waterproof, allowing for convenient Wet & Dry use. You can shave dry, with foam or gel, or even in the shower.



Image: The shaver is shown under water, emphasizing its suitability for wet and dry use.

5.5. Using EasyClick Attachments

The EasyClick system allows you to quickly change attachments for different grooming needs.

1. To remove the shaver head, press the release buttons on the sides of the head and pull it upwards.
2. To attach the Precision Trimmer, align it with the shaver body and press down until it clicks into place.
3. Use the Precision Trimmer for shaping sideburns, moustaches, or for pre-trimming longer hairs.



Image: The EasyClick system allows for simple attachment of the precision trimmer.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal shaving performance and extends the life of your shaver.

6.1. Quick Cleaning (After Each Shave)

- Turn off the shaver.
- Remove the shaver head.
- Rinse the shaver head and the shaver under hot running water until all residue is removed.
- You can also use liquid soap for a more thorough clean.
- Shake off excess water and let the shaver head air dry.

6.2. Deep Cleaning (Weekly)

- In addition to rinsing, use the provided cleaning brush to remove stubborn hair particles from the shaver head and the inner parts of the shaver.
- Do not use the brush on the foil itself, as this can damage it.

6.3. Replacing Shaver Parts

To maintain 100% shaving performance, replace the shaver head (foil and cutter block) every 18 months, or when worn. Replacement parts are available from authorized Braun retailers.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver fully.
Poor shaving performance.	Shaver head is dirty or worn.	Clean the shaver head thoroughly. Replace the shaver head if it's older than 18 months or visibly damaged.
Skin irritation after shaving.	Incorrect shaving technique or sensitive skin.	Ensure you are shaving against the grain with light pressure. Consider using shaving foam/gel for sensitive skin. If irritation persists, consult a dermatologist.
Shaver makes unusual noise.	Hair trapped in the mechanism or damaged part.	Clean the shaver thoroughly. If the noise persists, contact an authorized Braun Service center.

8. TECHNICAL SPECIFICATIONS

Model: Braun Series 7-71 N1200s

Power Source: Battery Powered (Li-Ion)

Battery Life: Up to 50 minutes (approx. 3 weeks of shaving)

Quick Charge: 5 minutes for one shave

Waterproof: 100% (Wet & Dry use)

Product Dimensions: 6.7 x 25.2 x 13.7 cm

Item Weight: 467 g

Country of Origin: Germany

Manufacturer: Procter & Gamble

9. DISPOSAL

This product contains rechargeable batteries. To protect the environment, do not dispose of the product in household waste at the end of its useful life. Disposal can take place at appropriate collection points provided in your country. The built-in rechargeable battery can only be replaced by an authorized Braun Service center. For proper disposal of the battery at the end of the product's life, please follow local guidelines for battery recycling.

10. WARRANTY AND SUPPORT

Your Braun Series 7 shaver comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, replacement parts, or service, please contact Braun Customer Service or visit the official Braun website.

Online Support: www.braun.com



© 2024 Braun. All rights reserved.