

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SteamOne](#) /

› [SteamOne S-Nomad Plus 300 Travel Garment Steamer User Manual](#)

SteamOne SN300SB

SteamOne S-Nomad Plus 300 Travel Garment Steamer User Manual

Model: SN300SB

INTRODUCTION

Thank you for choosing the SteamOne S-Nomad Plus 300 Travel Garment Steamer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your device. Please read it thoroughly before first use and keep it for future reference.

The S-Nomad Plus 300 is designed for quick and effective garment care, offering powerful steam in a compact, travel-friendly design. It is ready for use in just 40 seconds and features a 300ml water tank for extended steaming sessions.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Always unplug the steamer from the electrical outlet when filling with water, emptying, or when not in use.
- Use only distilled or demineralized water to prevent mineral buildup.
- Do not direct steam at people, pets, or electrical appliances. Steam is hot and can cause burns.
- Keep the appliance out of reach of children.
- Do not operate the steamer with a damaged cord or plug, or if the appliance has been dropped or damaged.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage.

PRODUCT OVERVIEW

Familiarize yourself with the components of your SteamOne S-Nomad Plus 300.



Figure 1: Front view of the SteamOne S-Nomad Plus 300 garment steamer, showcasing its sleek black design with a transparent water tank and a silver steam plate.



Figure 2: Close-up view of the steamer's water tank, clearly showing the MAX and MIN fill lines, along with volume markings in milliliters (100ml, 200ml, 300ml).



Figure 3: A hand gripping the ergonomic handle of the steamer, highlighting the power button with an illuminated indicator, suggesting ease of use.

Included Accessories:

- Suction cup with hook for hanging garments.
- Fabric brush for effective steaming on various materials.
- Universal bottle connector for using standard water bottles during travel.
- Practical satin storage bag for the steamer and accessories.

SETUP

1. Filling the Water Tank:

1. Ensure the steamer is unplugged from the power outlet.
2. Remove the water tank from the main unit.
3. Open the filling cap and fill the tank with distilled or demineralized water up to the 'MAX' line (300ml capacity). Do not overfill.
4. Close the filling cap securely and reattach the water tank to the steamer until it clicks into place.
5. *For travel:* The removable water reservoir can be replaced by a standard water bottle using the provided universal bottle connector. Ensure the bottle is securely attached and upright.

2. Preparing the Garment:

For best results, hang the garment on a hanger. You can use the included suction cup with hook to hang garments on smooth surfaces.

OPERATING INSTRUCTIONS

1. Powering On:

1. Plug the steamer into a 220-240V, 50-60Hz electrical outlet.
2. The steamer will be ready for use in approximately 40 seconds. The indicator light on the handle will signal readiness.

2. Steaming:

1. Hold the steamer upright, ensuring the steam plate is facing away from you.
2. Press the steam button on the handle to release steam. For continuous steam, engage the manual lock on the handle. This is particularly useful for thicker fabrics or larger areas.
3. Gently glide the steam plate over the fabric, moving from top to bottom. For stubborn wrinkles, hold the steamer closer to the fabric.
4. Use the included fabric brush attachment for deeper penetration of steam and to help smooth out wrinkles on heavier fabrics.
5. The steamer offers two steam settings (Max & Eco) for different fabric types. Adjust as needed. Use Eco mode for delicate garments like silk and lace.

6. The hot steam is effective in removing wrinkles and can also help eliminate bacteria and dust mites from fabrics.



Figure 4: A person using the SteamOne S-Nomad Plus 300 to steam a patterned dress on a mannequin, demonstrating the active steam output and ease of use.

3. Automatic Shut-off:

The steamer features an automatic shut-off function that activates when the water reservoir is empty, ensuring safety and preventing damage to the unit.

MAINTENANCE

1. Emptying and Cleaning the Water Tank:

1. After each use, unplug the steamer and allow it to cool completely.
2. Remove the water tank and empty any remaining water.
3. Rinse the water tank with clean water. Do not use detergents or abrasive cleaners.
4. Wipe the exterior of the steamer with a soft, damp cloth.

2. Descaling:

To maintain optimal performance and extend the life of your steamer, regular descaling is recommended, especially if using tap water (though distilled water is preferred). Frequency depends on water hardness and usage.

- Prepare a descaling solution according to the instructions of a suitable descaling product for steam appliances, or use a mixture of white vinegar and water (1 part vinegar to 2 parts water).
- Pour the solution into the water tank.
- Plug in the steamer and allow it to heat up. Run the steamer until half of the solution has been used.
- Unplug and let it cool for 30 minutes.
- Repeat the steaming process with the remaining solution.
- Empty the tank and rinse thoroughly with clean water. Run the steamer with a full tank of clean water to flush out any residue.

3. Storage:

When not in use, store the steamer and its accessories in the provided satin storage bag in a cool, dry place, away from direct sunlight and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or very little steam.	Water tank is empty or low. Steamer not heated up. Mineral buildup (scaling).	Fill water tank. Wait 40 seconds for heating. Perform descaling procedure.

Problem	Possible Cause	Solution
Water leaking from steam plate.	Overfilled water tank. Steamer not fully heated. Mineral buildup.	Do not fill past MAX line. Wait until indicator light shows readiness. Perform descaling procedure.
Steamer not turning on.	Not plugged in correctly. Power outlet issue. Automatic shut-off activated.	Ensure plug is fully inserted. Test with another outlet. Check water level; refill if empty.

SPECIFICATIONS

Model: SN300SB

Power: 2000 Watts

Voltage: 220-240V / 50-60Hz

Water Tank Capacity: 300 ml

Steam Output: 30 g/min

Heat-up Time: Approximately 40 seconds

Cable Length: 3 meters

Dimensions (approx.): 22.8 x 17.8 x 15.5 cm

Weight (approx.): 1.1 kg

Features: 2 Steam Settings (Max & Eco), Continuous Steam Lock, Automatic Shut-off, Universal Bottle Connector

WARRANTY AND SUPPORT

Information regarding product warranty and customer support is not available in this manual. Please refer to the product packaging or the manufacturer's official website for details on warranty coverage and how to contact customer service for support.