

[Manuals.plus](#) /

› [ELIVED](#) /

› ELIVED Tilting TV Wall Mount Instruction Manual

ELIVED YD3004

ELIVED Tilting TV Wall Mount Instruction Manual

Model: YD3004 (ASIN: B08M5C9P1F)

PRODUCT OVERVIEW

The ELIVED UL Listed Tilting TV Wall Mount Bracket (Model YD3004) is designed for most 26-55 inch flat screen TVs, supporting weights up to 99 lbs (45kg). It features a low-profile design for space-saving and a tilting knob for easy angle adjustment to reduce glare. This mount is compatible with VESA patterns from 75x75mm to 400x400mm and is suitable for installation on 12-inch or 16-inch wood studs, as well as concrete and brick walls.



Image: Main components of the ELIVED Tilting TV Wall Mount.

SAFETY INFORMATION AND PRECAUTIONS

- Always ensure the TV mount is installed into appropriate wall structures (wood studs, concrete, or brick). **Do NOT install into drywall alone.**
- Verify your TV's size, weight, and VESA pattern are within the mount's specifications (26-55 inches, max 99 lbs/45kg, VESA 75x75mm to 400x400mm).
- Check for any potential blocked inputs or cables on the back of your TV before installation.

- Use a stud finder to accurately locate wood studs.
- Wear appropriate safety gear, such as eye protection, during drilling and installation.
- It is recommended to have assistance when lifting and hanging the TV.

MOUNTING OPTIONS

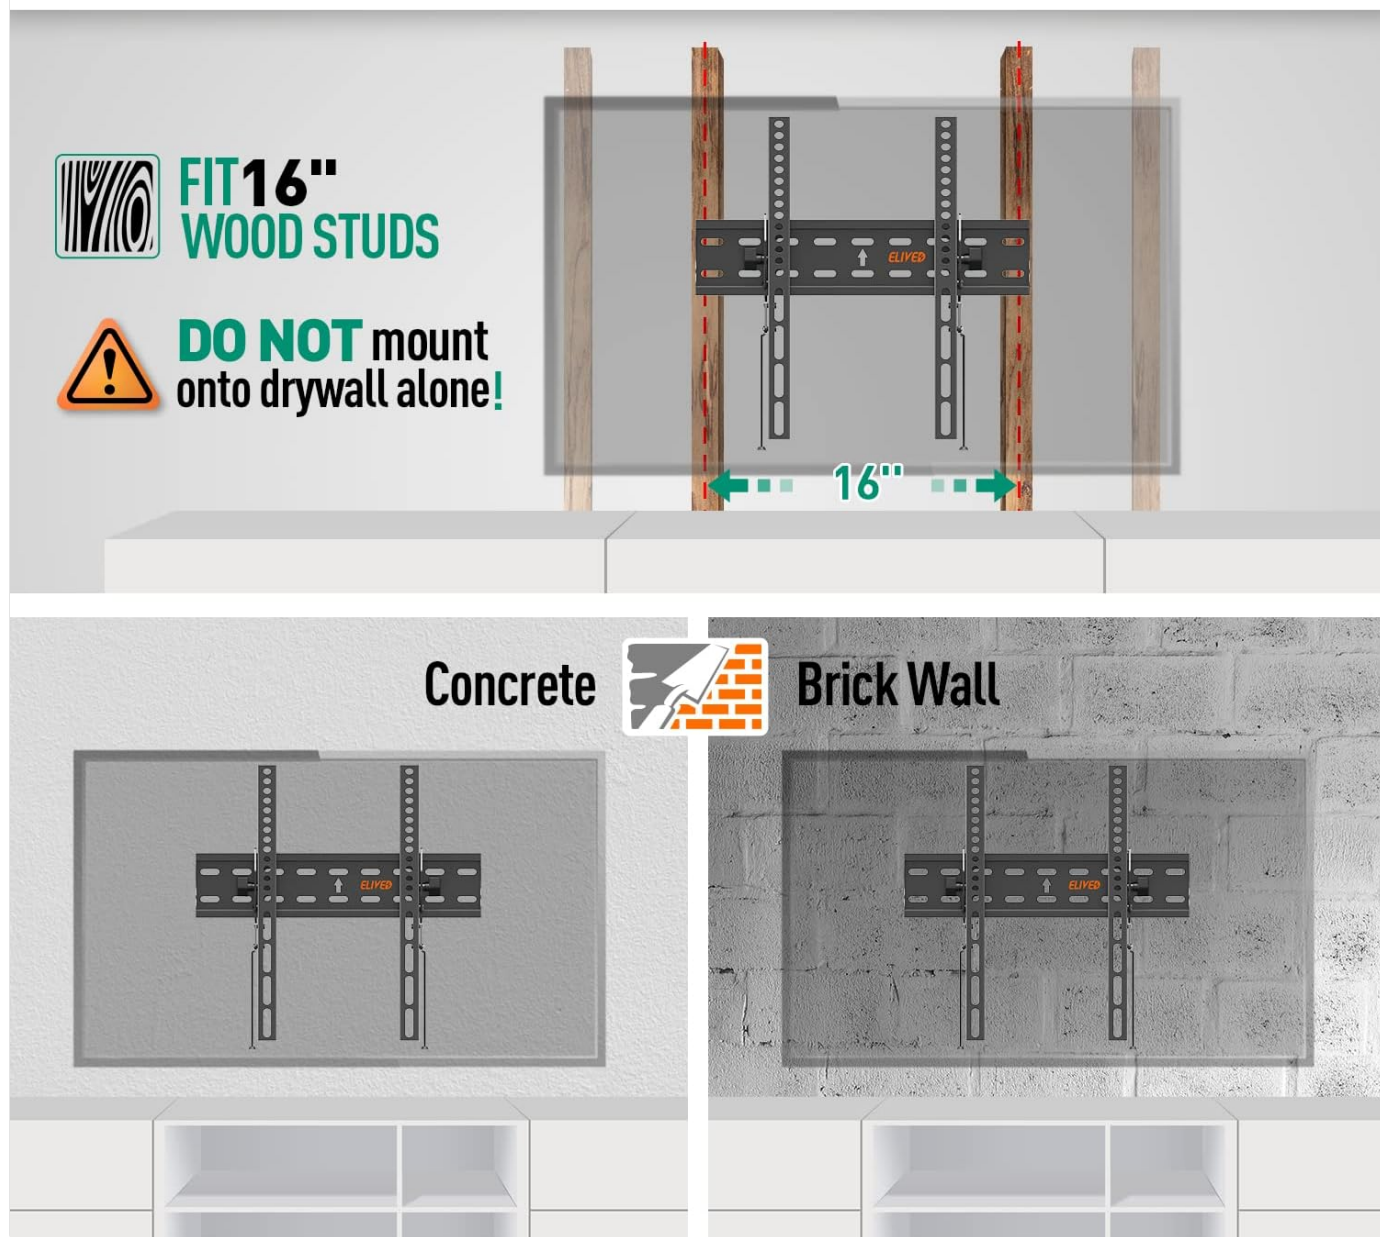 


Image: Important mounting options and safety warning regarding drywall installation.

PARTS LIST

Before beginning installation, ensure all parts are present and undamaged. The package includes:

- Wall Plate (Main horizontal bracket)
- TV Brackets (Two vertical brackets that attach to the TV)
- Hardware Kit (Various screws, washers, spacers for TV and wall attachment)
- Small Bubble Level

- Installation Instructions (This manual)
- Pulling Straps (for locking/releasing TV)

SAFE & FRIENDLY DESIGN

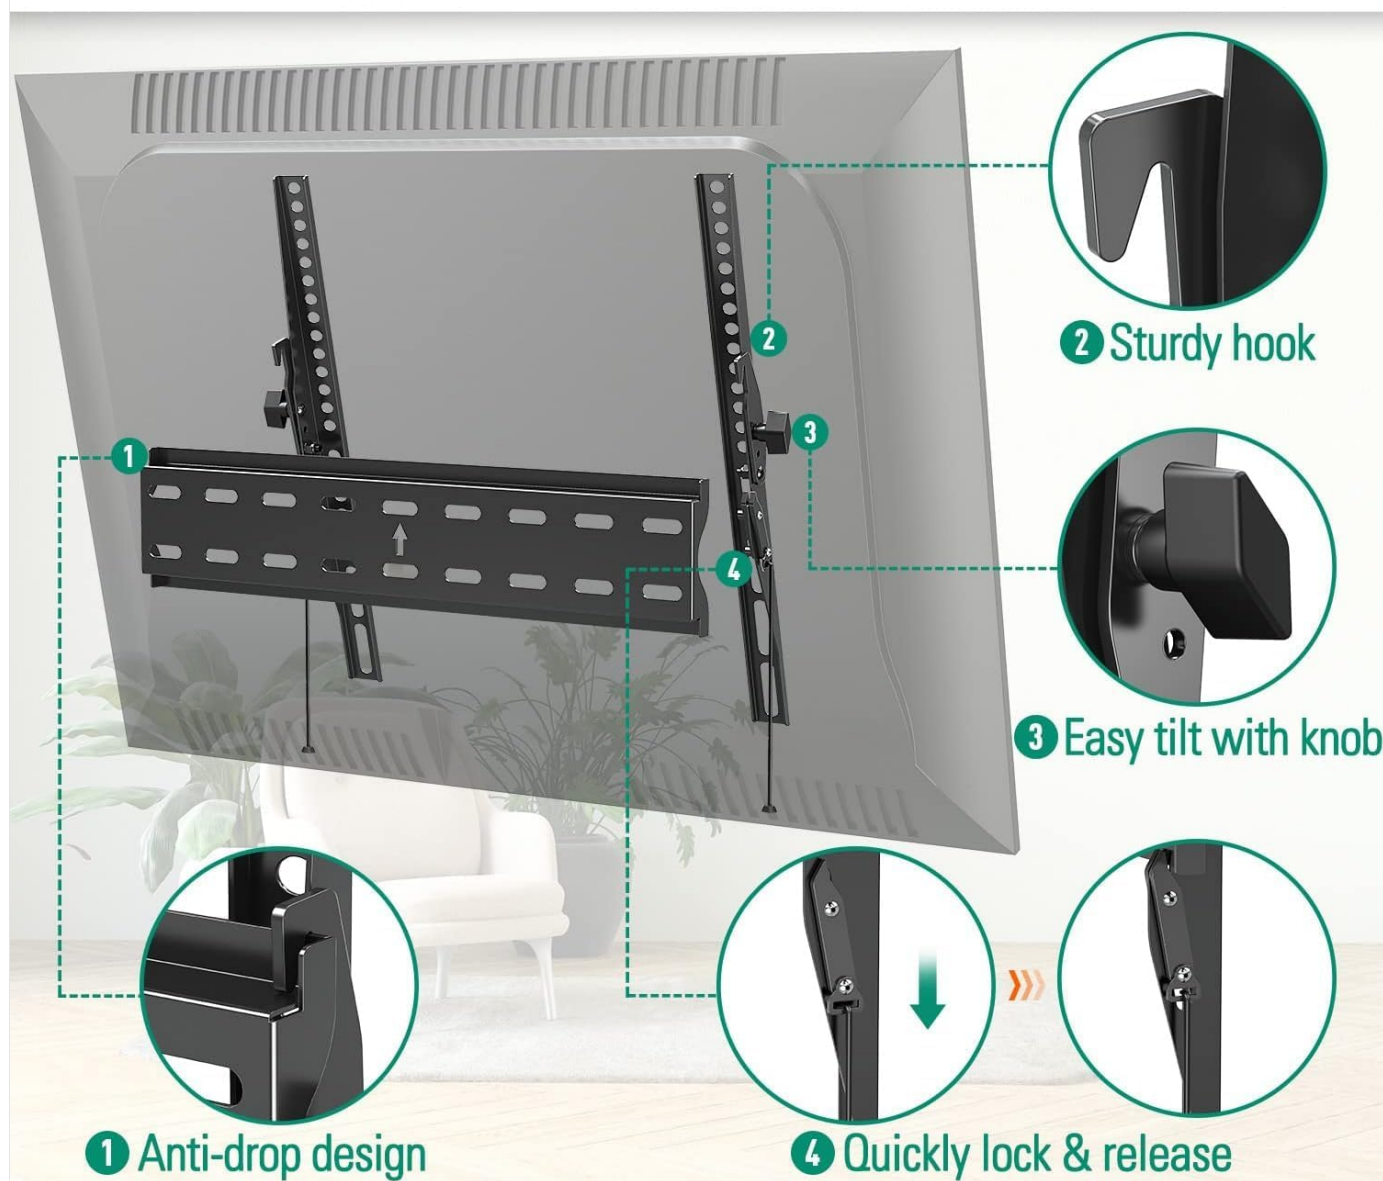 


Image: Key design features of the mount, including the anti-drop and quick lock/release mechanisms.

INSTALLATION GUIDE

Follow these steps for a secure installation. It is highly recommended to watch the official installation video for visual guidance.

Official Installation Video

Your browser does not support the video tag.

Video: How to Install ELIVED Tool-free Tilting TV Mount (Model YD3004). This video demonstrates the complete installation process from attaching brackets to the TV to mounting it on the wall.

Step-by-Step Instructions

1. Step 1: Attach TV Brackets to the Back of the TV

Carefully place your TV face down on a soft, clean surface. Align the two vertical TV brackets with the VESA mounting holes on the back of your TV. Select the appropriate screws, washers, and spacers from the hardware kit that fit your TV's mounting holes. Securely fasten the brackets to the TV using a screwdriver. Ensure the brackets are centered and level.

EASY 3-STEP INSTALLATION

Step 1: Attach brackets to the back of TV


Step 2: Install wall plate



Step 3: Hang TV on wall plate

Image: Visual representation of the 3-step installation process.

AVAILABLE VESA PATTERN

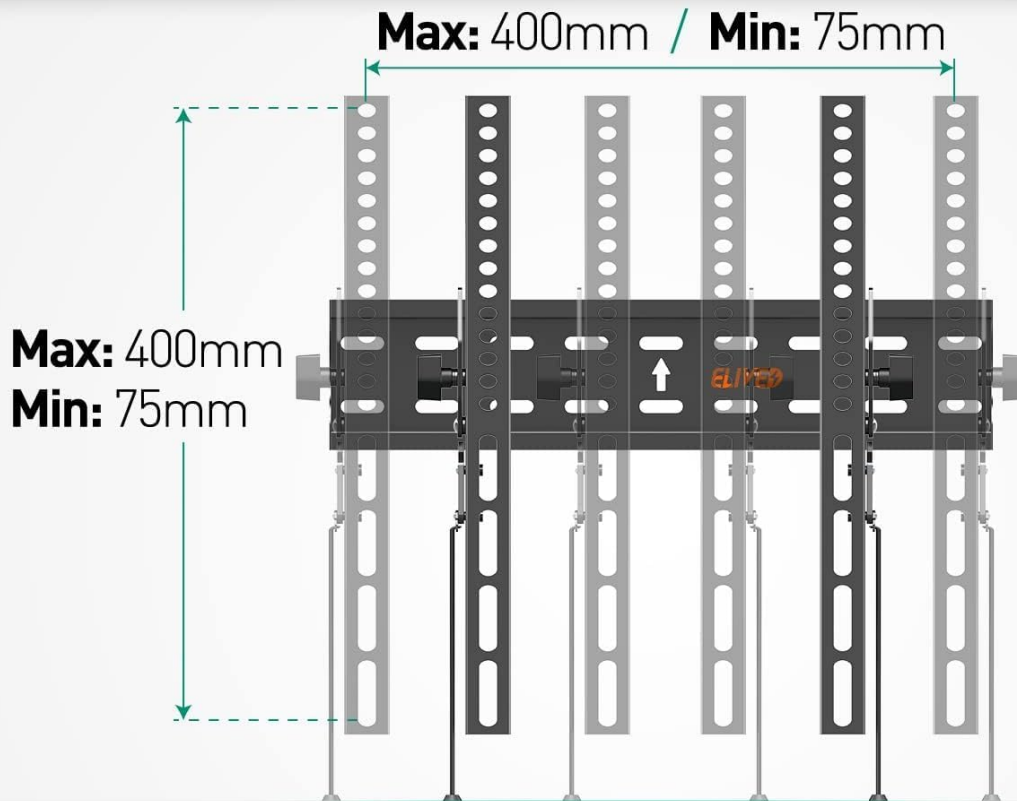

VESA = Horizontal x Vertical

400x400	400x300	400x200
300x300	300x200	200x200
200x100	100x100	75x75

Image: Available VESA patterns supported by the mount.

2. Step 2: Install Wall Plate

For Wood Stud Installation: Use a stud finder to locate the edges and center of two adjacent wood studs. Mark the drilling points on the wall, ensuring they are level and align with the holes on the wall plate. Drill pilot holes (5/32" diameter, 2.75" deep) at the marked locations. Attach the wall plate to the wall using the provided lag bolts and tighten them securely.

For Concrete/Brick Wall Installation: Mark the drilling points on the wall, ensuring they are level and align with the holes on the wall plate. Drill pilot holes (3/8" diameter, 2.75" deep) at the marked locations. Insert the concrete anchors into the drilled holes. Attach the wall plate to the wall using the provided lag bolts and tighten them securely.

3. Step 3: Hang TV on Wall Plate and Secure

With assistance, carefully lift the TV with the attached brackets and hook them onto the top edge of the installed wall plate. Gently lower the TV until the brackets engage with the wall plate. The mount features an auto-lock mechanism for secure attachment. Pull the release straps to ensure the TV is fully seated and locked. You can slide the TV left or right on the wall plate to center it as needed.

OPERATING INSTRUCTIONS

Tilting Feature

The ELIVED Tilting TV Wall Mount allows for easy angle adjustment to optimize your viewing experience and reduce glare. Locate the tilt knobs on the side of the TV brackets. Loosen the knobs to adjust the TV's tilt angle (0° to -8°). Once the desired angle is achieved, tighten the knobs firmly to secure the TV in place.

SAVE SPACE & ANTI-GLARING



Low Profile for Space-saving



Tilting for Anti-glaring



Image: Demonstrates the low-profile design and the tilting feature for glare reduction.

MAINTENANCE

To ensure the longevity and safe operation of your ELIVED TV wall mount, follow these simple maintenance guidelines:

- Periodically check all screws and bolts to ensure they remain tight. Loose connections can compromise safety.

- Clean the mount with a soft, dry cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- Do not hang additional items or excessive weight on the TV or the mount.

TROUBLESHOOTING

Problem	Possible Cause	Solution
TV is not level after installation.	Wall plate not level during installation.	Remove TV, loosen wall plate bolts, adjust level using the bubble level, and re-tighten. Re-hang TV.
TV cannot be tilted.	Tilt knobs are too tight.	Loosen the tilt knobs on the TV brackets to allow for adjustment. Re-tighten once desired angle is set.
TV feels unstable on the mount.	Lag bolts not fully tightened or TV not properly seated.	Ensure all lag bolts securing the wall plate are fully tightened. Verify the TV brackets are correctly hooked and locked onto the wall plate.
Cannot find wood studs.	Stud finder malfunction or wall type is not drywall over studs.	Try scanning the wall multiple times. If still unsuccessful, consider professional installation or confirm if the wall is concrete/brick and use appropriate installation methods.

SPECIFICATIONS

Brand: ELIVED

Model: YD3004 (ASIN: B08M5C9P1F)

Compatible TV Sizes: 26 - 55 inches

Maximum Weight Capacity: 99 lbs (45 kg)

VESA Compatibility: 75x75mm, 100x100mm, 200x100mm, 200x200mm, 300x200mm, 300x300mm, 400x200mm, 400x300mm, 400x400mm

Wall Distance (Low Profile): 1.57 inches (40mm)

Tilt Angle: 0° to -8°

Material: Alloy Steel

Color: Black

Stud Spacing: Fits 12"/16" wood studs

PRODUCT DIMENSIONS

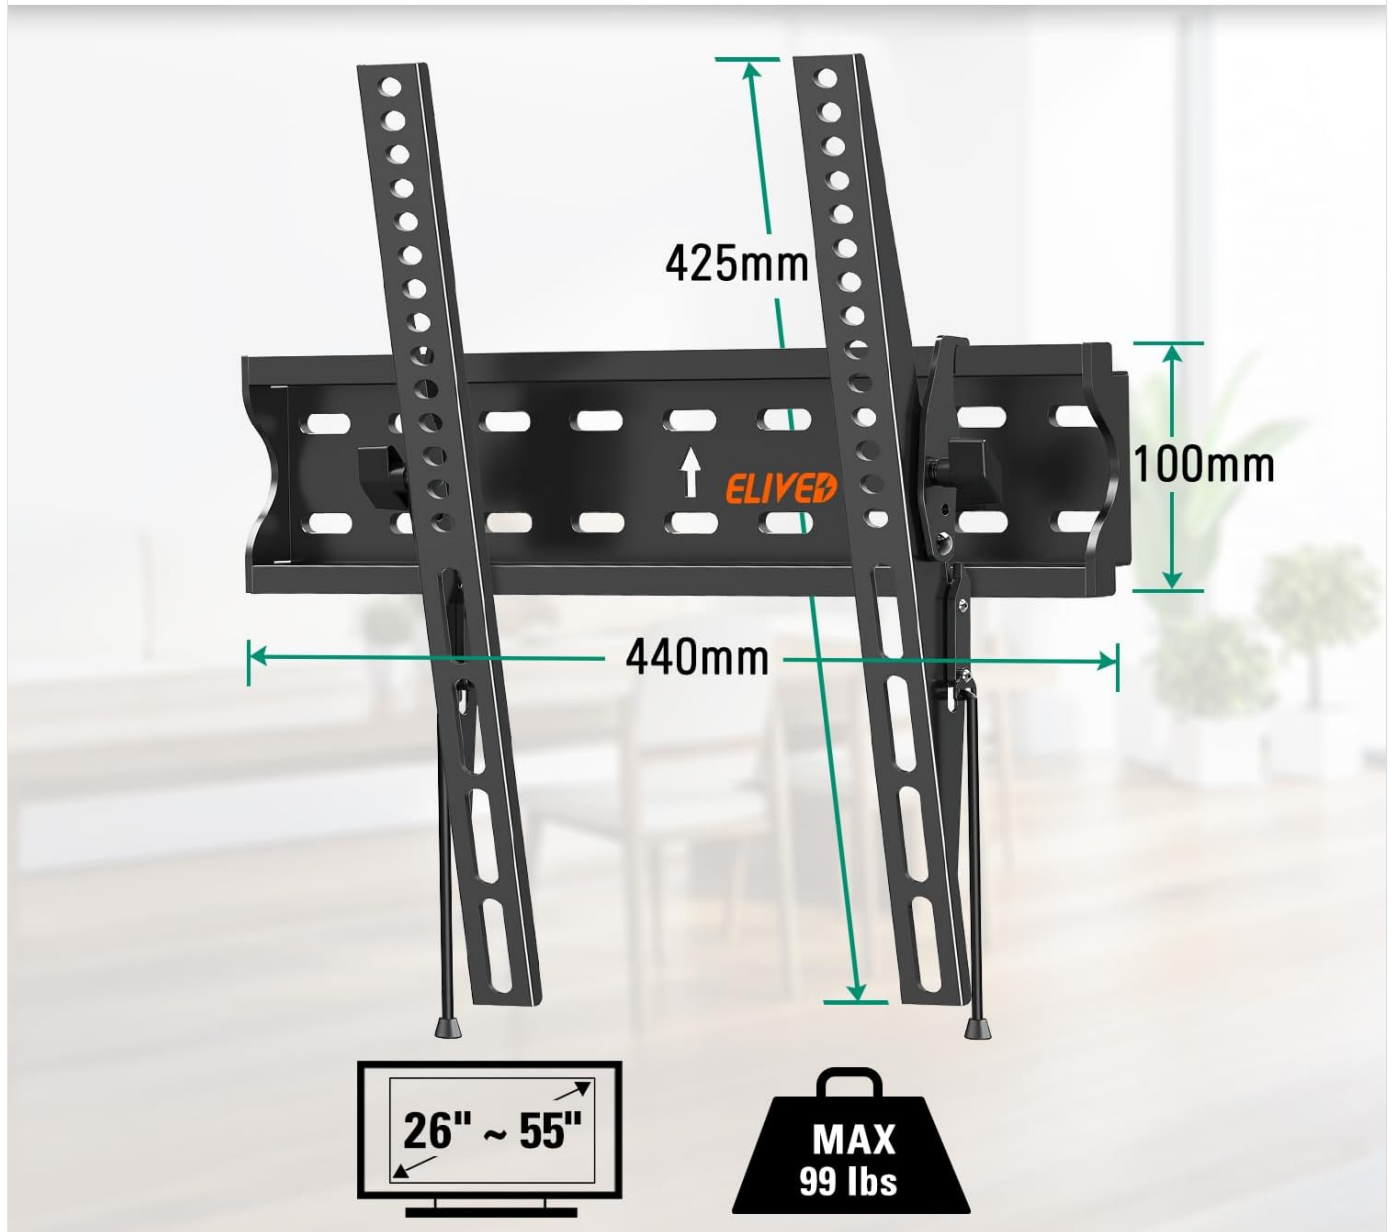 


Image: Key dimensions and specifications of the ELIVED TV mount.

CUSTOMER SUPPORT

For further assistance, questions, or to request concrete wall anchors if not included, please contact ELIVED customer support. Refer to the official ELIVED store or product listing for contact details.

You can also refer to the official User Manual (PDF) available online [ELIVED TV Mount User Manual PDF](#)

© 2024 ELIVED. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question