

Newmowa SG SR1-UK

Newmowa SG SR1-UK Mini Portable Shooting Grip Tripod

Instruction Manual

1. INTRODUCTION

The Newmowa SG SR1-UK is a versatile mini portable shooting grip that also functions as a tripod, designed to enhance your photography and videography experience with compatible Sony cameras. Its compact and lightweight design makes it ideal for travel, vlogging, macro photography, and stable low-angle shots. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Dual Functionality:** Serves as a comfortable handheld shooting grip and a stable mini tripod.
- **Compact & Lightweight:** Constructed from high-quality aluminum alloy and ABS plastic, weighing only 145g for easy portability.
- **Flexible Angle Adjustment:** Features a 360-degree swivel mini ball head and 180-degree neck rotation for multi-angle shooting, including vertical video.
- **Enhanced Stability:** Equipped with non-slip feet for secure placement in tripod mode.
- **Remote Control:** Integrated buttons for power, photo capture, video recording, and lens zoom control (if supported by camera).
- **Universal Compatibility:** Standard 1/4-inch screw thread for wide camera compatibility.

2.2 Components Diagram

Refer to the diagram below for an identification of the main components and controls of your Newmowa SG SR1-UK shooting grip.



- | | | |
|--|-----------------------------|-----------------------------|
| 1 Camera and equipment connection port | 2 1/4 screw | 3 Transfer turntable |
| 4 Transfer push button | 5 Power on and off buttons | 6 Lens shrink button |
| 7 Video button | 8 Button of taking pictures | 9 Main support stent button |

This diagram illustrates the various parts of the shooting grip, including the camera connection port, 1/4-inch screw, rotational head, control buttons for power, photo, video, and zoom, and the main support mechanism.

1. Camera and Equipment Connection Port
2. 1/4-inch Screw
3. Transfer Turntable (Rotational Head)
4. Transfer Push Button (Head Release)
5. Power On and Off Buttons
6. Lens Shrink Button (Zoom Out)
7. Video Button (Record)
8. Button for Taking Pictures (Shutter)
9. Main Support Stent Button (Leg Release)

3. SETUP

3.1 Attaching Your Camera

1. Locate the 1/4-inch screw (2) on the top of the grip.
2. Align the camera's tripod mount with the 1/4-inch screw.
3. Rotate the camera clockwise until it is securely fastened to the grip. Ensure it is tight but do not overtighten.



Small and portable, shooting more freely

Multi-function tripod shooting handle

The Newmowa SG SR1-UK functions as both a portable shooting grip and a mini tripod, designed for enhanced camera stability and flexible shooting.

3.2 Connecting the Remote Cable

1. Identify the camera and equipment connection port (1) on the side of the grip.
2. Connect the provided multi-interface cable from this port to your compatible Sony camera's multi-terminal port.
3. Ensure the connection is firm to enable remote control functionality.

3.3 Switching Between Grip and Tripod Mode

- **Grip Mode:** Keep the legs folded together. The grip provides a comfortable handle for handheld shooting.
- **Tripod Mode:** Press the main support stent button (9) to release the legs. Spread the legs outwards until they are fully extended and stable on a flat surface.

Integrated Design

Perfect connection camera. Stabilize the lens.
Take beautiful pictures



The integrated design ensures a secure connection with your camera, providing stability for clear photos and videos, even in tripod mode.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

- To power on the grip's remote functions, press and hold the Power On/Off button (5) until the indicator light illuminates.
- To power off, press and hold the Power On/Off button (5) again until the indicator light turns off.

4.2 Taking Photos and Recording Videos

- **For Photos:** Press the Button for Taking Pictures (8) once to capture a still image.
- **For Videos:** Press the Video Button (7) once to start recording. Press it again to stop recording.

4.3 Adjusting Camera Angle

- To adjust the camera's horizontal angle, rotate the Transfer Turntable (3) as needed.
- To adjust the camera's vertical tilt, press the Transfer Push Button (4) to unlock the head, adjust the angle, and then release the button to lock it in place. The head supports 180-degree vertical rotation.

Support video vertical shooting

180 ° rotation adjustment



The grip supports 180-degree rotation, allowing for easy switching between horizontal and vertical shooting orientations, ideal for social media content.

4.4 Zoom Control

If your camera supports remote zoom control via the multi-interface, you can use the Lens Shrink button (6) to zoom out. The corresponding zoom-in button is not explicitly labeled but typically functions with the other zoom control on the grip.

Good choice for travel shooting

Connect the camera through the Multi interface, good choice for travel, video and selfies



Connect your camera via the multi-interface cable for convenient travel shooting, vlogging, and selfies, offering flexibility and control on the go.

5. MAINTENANCE

- Keep the grip clean by wiping it with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the grip in a cool, dry place away from direct sunlight and extreme temperatures.
- Ensure the 1/4-inch screw and connection ports are free from dust and debris.
- Do not attempt to disassemble the grip, as this may void the warranty and cause damage.

6. TROUBLESHOOTING

6.1 Remote Control Not Responding

- **Check Cable Connection:** Ensure the multi-interface cable is securely connected to both the grip and the camera.
- **Power On Grip:** Verify that the grip's remote functions are powered on (indicator light should be illuminated).
- **Camera Compatibility:** Confirm your camera model is listed as compatible.

- **Camera Settings:** Check your camera's settings to ensure remote control is enabled.

6.2 Instability in Tripod Mode

- **Surface:** Ensure the tripod is placed on a flat, stable surface.
- **Legs Fully Extended:** Make sure the tripod legs are fully spread out.
- **Weight Limit:** Do not exceed the maximum load capacity of 1 kg (2.2 lb).

7. SPECIFICATIONS

Brand	Newmowa
Model Number	SG SR1-UK
Color	Black
Material	ABS Plastic, Aluminum Alloy
Item Weight	145 Grams (0.32 lb)
Maximum Load Capacity	1000 Grams (1 kg / 2.2 lb)
Folded Height	17.23 cm (6.78 inches)
Tripod Height (Max/Min)	13.1 cm (5.15 inches)
Tripod Head Type	Swivel Head (360° rotation, 180° tilt)
Standard Screw	1/4 inch
Compatible Devices	Sony Cameras with Multi-Terminal Port



The grip measures 6.7 inches (17.23 cm) when folded and provides a stable height of 5.1 inches (13.1 cm) when used as a tripod, making it highly portable.

7.1 Compatible Sony Camera Models

The Newmowa SG SR1-UK is compatible with a wide range of Sony cameras, including but not limited to:

- Sony ZV1
- Sony RX100 series (M1, M2, M3, M4, M5, M5A, M6, M7)
- Sony RX10 series (M2, M3, M4, M5, M6)
- Sony Alpha A6000, A6100, A6300, A6400, A6500, A6600
- Sony Alpha A7, A7R II, A7R III, A7R IV, A7R M3, A7R M4, A7 III, A7S, A7S II, A7R, A9, A9II, A99II
- Sony SLT-A58, ILCE-QX1, ILCE-5000, ILCE-5100
- Sony DSC-HX series (HX3500, HX60, HX400, HX90, HX99)
- Sony DSC-WX series (WX500, WX700)
- Sony DSC-RX0, DSC-RX0M2G, DSC-RX1RM2
- Sony DSC-QX series (QX30, QX300, QX50)

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Newmowa website. Please note that specific warranty terms may vary by region and retailer.