

Legami GUAC0001

Legami Bang Bang Target Alarm Clock

Model: GUAC0001

INTRODUCTION

Thank you for purchasing the Legami Bang Bang Target Alarm Clock. This unique device combines the functionality of an alarm clock with an interactive shooting game, designed to make waking up more engaging. Please read this manual carefully to ensure proper setup and operation.

SAFETY WARNINGS

There are no specific safety warnings provided for this product. However, please observe general safety practices:

- Keep out of reach of small children to prevent choking hazards from small parts.
- Do not expose the device to water or excessive moisture.
- Do not attempt to disassemble or modify the product.
- Dispose of batteries responsibly according to local regulations.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Legami Bang Bang Target Alarm Clock Unit
- 1 x Infrared Gun



Image: The Legami Bang Bang Target Alarm Clock, showing the main clock unit with its target and the accompanying infrared gun.

SETUP

1. Battery Installation

The alarm clock and gun require 6 AA batteries (not included).

1. **Alarm Clock Unit:** Locate the battery compartment on the bottom of the alarm clock. Insert 3 AA batteries, ensuring correct polarity (+/-). Close the compartment cover securely.
2. **Infrared Gun:** Locate the battery compartment on the handle of the gun. Insert 3 AA batteries, ensuring correct polarity (+/-). Close the compartment cover securely.

2. Initial Power-On

Once batteries are installed, the clock display should light up. If not, check battery placement or replace with fresh batteries.

OPERATING INSTRUCTIONS

1. Setting the Time

Refer to the buttons on the alarm clock unit. Typically, there are buttons labeled 'SET', 'MODE', 'UP', and 'DOWN'.

- Press the 'SET' or 'MODE' button until the time display flashes.
- Use the 'UP' and 'DOWN' buttons to adjust the hours and minutes.
- Press 'SET' or 'MODE' again to confirm each setting and move to the next (e.g., 12/24-hour format).

2. Setting the Alarm

The alarm clock features a dual function: standard alarm and game mode alarm.

- Press the 'ALARM' or 'MODE' button until the alarm time display flashes.
- Use 'UP' and 'DOWN' buttons to set the desired alarm time.
- Confirm with 'ALARM' or 'MODE'.
- **Activating Game Mode:** Some models allow you to select a game mode for the alarm. This typically involves pressing a specific button (e.g., 'GAME' or 'MODE' repeatedly) after setting the alarm time. When the alarm sounds in game mode, the target will pop up.

3. Disabling the Alarm (Game Mode)

When the alarm sounds in game mode, the target on the alarm clock unit will rise. To disable the alarm:

- Grab the infrared gun.
- Aim at the target on the alarm clock unit.
- Fire the gun. The alarm will stop once the target is successfully hit. The clock features red LEDs and realistic shooting sounds during this process.

4. Game Mode (Non-Alarm)

The alarm clock can also be used as a standalone shooting game.

- Press the 'GAME' button (if available) to activate the game mode.
- The target will pop up, and you can practice your shooting skills.
- The clock may track hits or provide feedback.

MAINTENANCE

Cleaning

Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.

Battery Replacement

When the display dims, sounds become weak, or the gun's response is slow, it's time to replace the batteries. Follow the battery installation steps in the Setup section.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Alarm clock does not power on.	Batteries are dead or incorrectly installed.	Check battery polarity or replace with new AA batteries.

Problem	Possible Cause	Solution
Gun does not register shots.	Gun batteries are low, gun is too far, or target is obstructed.	Replace gun batteries. Ensure clear line of sight to the target. Move closer to the alarm clock.
Alarm sounds but target does not pop up.	Mechanism obstruction or low clock batteries.	Ensure nothing is blocking the target mechanism. Replace alarm clock batteries.
Time/Alarm settings are lost.	Batteries were removed or completely drained.	Re-enter time and alarm settings after replacing batteries.

SPECIFICATIONS

- **Brand:** Legami
- **Model Number:** GUAC0001
- **Product Dimensions (L x W x H):** 19.7 x 10 x 18 cm
- **Weight:** 530 grams
- **Material:** Plastic
- **Power Source:** Battery Powered
- **Batteries Required:** 6 x AA (3 for clock, 3 for gun - not included)
- **Special Feature:** Alarm, Shooting Game
- **Display Type:** Digital

WARRANTY AND SUPPORT

Information regarding warranty and customer support for the Legami Bang Bang Target Alarm Clock is not available in this manual. Please refer to the product packaging or the retailer where the product was purchased for details on warranty coverage and how to contact customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question