

## Anne Klein AK/3830

# Anne Klein Women's Leather Strap Watch AK/3830 Instruction Manual

Model: AK/3830

## INTRODUCTION

---

This manual provides detailed instructions for the proper use, care, and maintenance of your Anne Klein Women's Leather Strap Watch, model AK/3830. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

The Anne Klein AK/3830 watch features a scratch-resistant mineral crystal lens, Japanese quartz movement, and a comfortable black leather strap. It is designed for everyday wear with a classic aesthetic.

## PRODUCT FEATURES

---

- Domed mineral crystal lens for enhanced durability.
- Japanese quartz movement for accurate timekeeping.
- Silver-tone textured center zone with gold-tone hands.
- Glossy white outer zone with black Roman numerals and printed minute track.
- Black leather strap with a secure buckle closure.
- Water resistant to 100 feet (30 meters).
- Round case shape.

## SETUP: SETTING THE TIME

---

To set the time on your Anne Klein AK/3830 watch, follow these steps:

1. Locate the crown on the right side of the watch case.
2. Gently pull the crown outwards to the time-setting position. You may feel a small click.
3. Turn the crown clockwise or counter-clockwise to move the hour and minute hands to the correct time.

4. Once the time is set, push the crown back into its original position against the watch case. This will start the watch movement.





Image: The Anne Klein AK/3830 watch worn on a wrist, showing the watch face and leather strap. The crown is visible on the right side of the watch case.

## OPERATING: WEARING AND WATER RESISTANCE

### Wearing the Watch

To wear your watch, simply adjust the black leather strap to fit comfortably around your wrist. Insert the pin of the buckle into one of the holes on the strap and secure it. Ensure the watch is not too tight or too loose for optimal comfort and to prevent skin irritation.

### Water Resistance

Your Anne Klein AK/3830 watch is water resistant to 30 meters (100 feet). This means it is suitable for accidental splashes or brief immersion in water, such as washing hands or light rain. It is **not** suitable for swimming, bathing, showering, or diving. Prolonged exposure to water or submersion can damage the watch.

Always ensure the crown is fully pushed in before any contact with water to maintain water resistance.



Image: A chart illustrating different levels of watch water resistance. It shows that 30M (100FT) is suitable for accidental splashes but not for swimming or bathing.

## CARE AND MAINTENANCE

### Cleaning

To keep your watch looking its best, wipe the case and crystal with a soft, dry cloth regularly. For the leather strap, avoid excessive moisture and harsh chemicals. If the strap becomes dirty, gently wipe it with a slightly damp cloth and allow it to air dry completely before wearing.

### Battery Replacement

The watch is powered by a quartz movement, which requires a battery. When the watch stops or the second hand begins to skip, it indicates that the battery needs replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Watch stops or runs intermittently.	Low or dead battery.	Replace the battery (recommended by a professional).
Time is incorrect.	Crown is not fully pushed in, or time was not set correctly.	Ensure the crown is fully pushed in. Re-set the time as per "Setting the Time" instructions.
Moisture under the crystal.	Water resistance compromised due to open crown or excessive water exposure.	Immediately take the watch to a professional for inspection and repair to prevent further damage. Avoid further contact with water.
Strap irritation.	Strap too tight, or allergic reaction to material.	Adjust strap for a looser fit. If irritation persists, consult a doctor and consider an alternative strap material.

## PRODUCT SPECIFICATIONS

---

**Brand:** Anne Klein

**Model Number:** AK/3830

**Movement:** Japanese Quartz

**Case Material:** Not specified, typically alloy or stainless steel.

**Crystal:** Domed Mineral Crystal

**Strap Material:** Leather

**Clasp Type:** Tang Buckle

**Water Resistance:** 30 meters (100 feet)

**Item Weight:** 22.68 g

**Package Dimensions:** 9.6 x 8.41 x 7.39 cm

**ASIN:** B08KHQMT4Z



Image: An open white Anne Klein watch box with the brand logo, designed for presenting and storing the watch.

## **WARRANTY AND SUPPORT**

---

Your Anne Klein watch is covered by a limited warranty against manufacturing defects. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of

purchase for warranty claims.

For technical support, service, or warranty inquiries, please contact Anne Klein customer service through their official website or the retailer from whom the watch was purchased. Do not attempt to open or repair the watch yourself, as this may void the warranty.