

Best Choice Products SKY6001

Best Choice Products Heated Shiatsu Foot Massager Instruction Manual

Model: SKY6001

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Best Choice Products Heated Shiatsu Foot Massager. Designed to offer targeted relief and relaxation, this device combines kneading, rolling, warming, and pressing functionalities. Please read this manual thoroughly before operation and retain it for future reference.

SAFETY INFORMATION

To ensure safe operation and prevent injury or damage, please observe the following precautions:

- Keep out of reach of children.
- Do not use with pacemakers or other electronic medical devices. Consult a physician before use if you have any medical conditions.
- Avoid contact with skin and eyes.
- If ingested (referring to any internal components or liquids, though not explicitly stated for this product, it's a general safety warning from the ingredients list), seek medical help immediately.
- Do not use the massager in wet or damp environments.
- Always unplug the device when not in use or before cleaning.
- Do not attempt to repair or modify the device yourself. Contact customer support for service.

PRODUCT FEATURES

Your foot massager is equipped with several features designed for a comprehensive massage experience:

- **Four Massage Types:** Enjoy kneading, rolling, warming, and pressing functionalities for targeted

relief to the arches, heels, toes, and sides of your feet.

- **360-Degree Handle:** A versatile handle allows for easy carrying and serves as a stand to adjust the massage angle, targeting feet, calves, or arms.
- **Built-in Heat Therapy:** Adjustable heated massage nodes can reach up to 122 degrees Fahrenheit (50 degrees Celsius) to stimulate stress points, improve circulation, and promote relaxation.
- **Screen and Remote Control:** Operate the massager using the intuitive touch screen display or the included remote control to adjust time, heating, direction, and speed settings. An Auto mode provides pre-programmed massages.
- **Additional Features:** Includes a designated space for power cord storage, non-slip pads for stability, and a removable cover for machine washing.



Figure 1: Versatile use for feet, arms, and calves, highlighting the 360-degree adjustable handle.

BUILT-IN-HEAT THERAPY

Adjustable heated massage nodes target the sensitive points of your feet while helping to improve blood flow and relax your leg muscles



Figure 2: Built-in heat therapy with adjustable temperature up to 122°F.

SCREEN AND REMOTE FUNCTIONALITY

Operate the massager manually on its LCD touch panel, or use the handy remote control



Figure 3: Control panel and remote for easy operation.

SETUP

1. **Unpack:** Carefully remove the foot massager from its packaging. Retain all packaging materials for future storage or transport.
2. **Placement:** Place the massager on a flat, stable surface. Ensure there is enough space around the device for comfortable use and proper ventilation.
3. **Power Connection:** Plug the power cord into a standard electrical outlet. The device is hardwired, so the cable will not detach.
4. **Adjust Angle (Optional):** Use the 360-degree handle to adjust the angle of the massager to suit your preferred position for feet, calves, or arms.

OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and remote control for optimal use.

Control Panel / Remote Functions:

- **ON/OFF:** Press to power the unit on or off.

- **Auto:** Activates a pre-programmed massage cycle with varying intensity and modes.
- **Time:** Adjusts the duration of the massage session.
- **Speed:** Controls the intensity and speed of the massage rollers.
- **Heating:** Turns the heat therapy function on or off.
- **Direction:** Changes the rotation direction of the massage nodes.

Using the Massager:

1. Plug in the massager.
2. Place your feet, calves, or arms into the designated openings.
3. Press the **ON/OFF** button on the control panel or remote.
4. Select your desired massage mode (e.g., **Auto**) or customize settings using **Time**, **Speed**, **Heating**, and **Direction** buttons.
5. Adjust the intensity and heat to your comfort level.
6. After your session, press **ON/OFF** to turn off the unit and unplug it from the power source.

Your browser does not support the video tag.

Video 1: Official product overview demonstrating the Reflexology Shiatsu Foot Massager in use.

MAINTENANCE

- **Cleaning:** Always unplug the massager before cleaning. The removable fabric covers can be machine washed for hygiene. Wipe the main unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** Store the massager in a cool, dry place away from direct sunlight. Utilize the designated space for power cord storage to prevent damage.
- **Inspection:** Regularly inspect the power cord and the device for any signs of damage. If damage is found, discontinue use and contact customer support.

ADDITIONAL FEATURES

This foot massager is designed to help provide both physical pain relief and peace of mind in the form of convenience

REMOVABLE &
WASHABLE SLEEVE

BRIGHT
LCD SCREEN

NON-SLIP
BOTTOM

ANTI-SKID
PAD



Figure 4: Removable and washable sleeves for easy cleaning.

TROUBLESHOOTING

If you encounter any issues with your foot massager, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Not properly plugged in; power outlet issue; device malfunction.	Ensure the power cord is securely plugged into a working outlet. Try a different outlet. If the issue persists, contact customer support.
No heat or insufficient heat.	Heat function not activated; low heat setting; device malfunction.	Press the "Heating" button to activate. Increase the heat setting if adjustable. Allow a few minutes for the heat to build up. If still no heat, contact customer support.
Massage feels too intense or uncomfortable.	High speed setting; sensitive feet; incorrect positioning.	Decrease the speed setting. Wear thicker socks for cushioning. Adjust your foot position within the massager.
Rollers are not moving.	Device not powered on; mode not selected; internal malfunction.	Ensure the device is powered on and a massage mode (e.g., Auto) is selected. If the problem continues, contact customer support.

Problem	Possible Cause	Solution
---------	----------------	----------

SPECIFICATIONS

- **Product Dimensions:** 18.5" (L) x 12.25" (W) x 8.6" (H)
- **Item Weight:** 14 Pounds
- **Model Number:** SKY6001
- **Power Source:** Corded Electric
- **Material Type:** Acrylonitrile Butadiene Styrene, PMMA
- **Heat Temperature:** Up to 122°F (50°C)
- **Target Use Body Part:** Feet, Calves, Arms
- **Massage Therapy Technique:** Rolling, Kneading, Shiatsu, Pressing
- **Batteries:** 1 Lithium Metal battery required (included for remote control).



Figure 5: Product dimensions for reference.

WARRANTY AND SUPPORT

60 DAY WARRANTY: All returns are shipped back to a Best Choice Products Return Center at the customer's expense within 60 days of delivery; however, a pre-paid return shipping label will be sent via email if the return is a result of our error. Please note that it is at the company's discretion to decide if the item may be returned to a Best Choice Products Return Center. Unauthorized returns may not be accepted. Once your claim is processed and approved, please allow 5-7 business days for the request to be completed. If a replacement unit or replacement parts are requested, please be aware that the fulfillment time-frame is based on product availability.

For further assistance or to submit a warranty claim, please visit the Best Choice Products website or contact their customer service directly.