

Best Choice Products SKY6002

Best Choice Products Heated Shiatsu Foot Massager (Model SKY6002)

Instruction Manual

PRODUCT OVERVIEW

The Best Choice Products Heated Shiatsu Foot Massager (Model SKY6002) is designed to provide targeted relief and relaxation for your feet, calves, and arms. This versatile device incorporates kneading, rolling, warming, and pressing functionalities to enhance circulation, alleviate tension, and promote overall wellness. Its compact design and adjustable features make it suitable for various body parts and user preferences.

Key Features

- **Four Massage Techniques:** Enjoy kneading, rolling, warming, and pressing for comprehensive relief targeting arches, heels, toes, and sides of your feet.
- **360-Degree Adjustable Handle:** A built-in handle allows for easy carrying and serves as a stand to position the massager for feet, calves, or arms.
- **Built-In Heat Therapy:** Manually adjustable heated massage nodes reach up to 122°F (50°C) to stimulate stress points, boost flexibility, relieve tension, and improve circulation.
- **Intuitive Controls:** Operate the massager using the touch screen panel or the included remote control to adjust time, heating, direction, and speed settings. An 'Auto' mode provides pre-programmed massage sessions.
- **Convenient Design:** Features include a designated space for power cord storage, non-slip pads for stability, and a removable, machine-washable cover for hygiene.

SETUP

1. **Unpack the Device:** Carefully remove the foot massager from its packaging. Ensure all components, including the remote control and power adapter, are present.
2. **Position the Massager:** Place the massager on a flat, stable surface. The 360-degree handle can be adjusted to achieve the desired angle for massaging feet, calves, or arms. Press the buttons on both sides of the handle to adjust its position.
3. **Connect Power:** Plug the power adapter into the designated port on the massager. Then, plug the adapter into a standard 100-240V AC electrical outlet.
4. **Prepare Remote Control:** If using the remote, ensure the battery tab is removed to activate it. The remote uses a CR2025 battery.

OPERATING INSTRUCTIONS

Controls

The massager can be operated using the touch screen control panel on the device or the included remote control. Both offer similar functionalities.

- **ON/OFF:** Powers the device on or off.
- **Auto:** Activates a pre-programmed massage mode.
- **Time:** Adjusts the massage duration (e.g., 5, 10, 15, 20, 25, 30 minutes). Default is 15 minutes.
- **Speed:** Controls the intensity/speed of the massage rollers.
- **Heating:** Turns the heat therapy on or off. Heated nodes reach up to 122°F (50°C).
- **Direction:** Changes the rotation direction of the massage rollers.

Usage for Different Body Parts

The massager is designed for versatile use on feet, calves, and arms.



Image: The foot massager is shown in three configurations: for feet, for calves, and for arms. The 360-degree handle is highlighted, demonstrating its adjustability for different massage positions.

- **For Feet:** Place the massager on the floor with the handle folded down. Insert your bare feet or feet with thin socks into the massage chambers. Select your desired mode, speed, and heat settings.
- **For Calves:** Adjust the 360-degree handle to prop the massager at an angle that allows you to comfortably insert your calves into the chambers. This is ideal for relieving tension in leg muscles.
- **For Arms:** Place the massager on a table or other elevated surface. Adjust the handle to a suitable angle and insert your forearms into the massage chambers.

Heat Therapy

The built-in heat function can be activated independently. The red lights indicate active heating nodes. The heat helps to relax muscles and improve blood flow.

BUILT-IN-HEAT THERAPY

Adjustable heated massage nodes target the sensitive points of your feet while helping to improve blood flow and relax your leg muscles



Image: A close-up view of the massager's control panel and foot chambers. The display shows '15' minutes and 'P1' mode. The 'Heating' button is illuminated, and red lights are visible within the foot chambers, indicating active heat therapy.

Automatic Modes

The massager offers various automatic modes that combine different massage techniques and intensities. Refer to the user manual for detailed descriptions of each pre-programmed mode.



Image: The massager's control panel with an LCD screen displaying '15' minutes and 'P1' mode. Below it are buttons for ON/OFF, Auto, Time, Speed, Heating, and Direction. A remote control with similar buttons is shown next to the device.

MAINTENANCE

- **Cleaning the Cover:** The fabric covers inside the massage chambers are removable and machine-washable. Unzip the covers, remove them, and wash according to fabric care instructions. Allow to air dry completely before reattaching.
- **Cleaning the Device:** Wipe the exterior of the massager with a soft, damp cloth. Do not use abrasive cleaners or immerse the device in water.
- **Storage:** Store the massager in a cool, dry place away from direct sunlight when not in use. The power cord can be neatly stored in its designated compartment.

ADDITIONAL FEATURES

This foot massager is designed to help provide both physical pain relief and peace of mind in the form of convenience



Image: A detailed view of the massager's features, including the zipper for the removable and washable sleeve, the bright LCD screen, non-slip pads on the bottom, and an anti-skid pad for stability.

TROUBLESHOOTING

- **Device Not Turning On:** Ensure the power adapter is securely plugged into both the massager and a working electrical outlet. Check if the power button is pressed firmly.
- **No Heat:** Verify that the heating function is activated on the control panel or remote. Allow a few minutes for the heating elements to warm up.
- **Massage Feels Too Strong/Weak:** Adjust the speed settings using the control panel or remote. For air compression, adjust the intensity levels.
- **Unusual Noises:** If the device makes unusual noises, turn it off immediately and unplug it. Contact customer support if the issue persists.

SPECIFICATIONS

- **Product Dimensions:** 18.5"(L) x 12.25"(W) x 8.6"(H)
- **Item Model Number:** SKY6002
- **Item Weight:** 14 Pounds
- **Power Source:** Corded Electric
- **Material:** Acrylonitrile Butadiene Styrene, PMMA
- **Manufacturer:** Best Choice Products

PRODUCT DIMENSIONS



Image: A clear diagram illustrating the overall dimensions of the foot massager, indicating its length (18.5"), width (12.25"), and

height (8.6").

Safety Information

- Do not use on open wounds.
- Avoid use if pregnant.
- Ensure the device is used on a flat surface to prevent tipping.

Warranty and Support

For warranty information, product support, or any inquiries, please refer to the contact details provided in your product packaging or visit the official Best Choice Products website. Keep your purchase receipt for warranty claims.

Official Product Videos

Your browser does not support the video tag.

Video: A user demonstrates the foot massager, highlighting its effectiveness for flat feet, calves, and forearms. The video shows the device being used in various positions to target different muscle groups.

Your browser does not support the video tag.

Video: A user reviews the foot massager, emphasizing its best features and ease of use. The video provides a general overview of the product's capabilities and benefits.

Your browser does not support the video tag.

Video: A user demonstrates the foot massager, focusing on its use for foot massage in the comfort of one's home. The video highlights the convenience and relaxation aspects of the device.

Your browser does not support the video tag.

Video: A user provides a detailed review of the foot massager, advising potential buyers on what to consider before purchasing. The video covers various aspects of the product's performance and features.