

[Manuals.plus](#) /

› [ZdalaMit](#) /

› ZdalaMit CT-RC1US-19 Voice Remote Control User Manual

ZdalaMit CT-RC1US-19

ZdalaMit CT-RC1US-19 Voice Remote Control User Manual

Model: CT-RC1US-19

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your ZdalaMit CT-RC1US-19 Voice Remote Control. This remote is designed as a replacement for various Toshiba TV models, offering seamless control and voice command capabilities.

Compatible Toshiba TV Models include:

- 43LF621U19, 50LF621U19, 55LF621U19
- 43LF421U19, 32LF221U19
- 43LF711U20, 50LF711U20, 55LF711U20
- TF-50A810U19
- 55LED2160P, 43LED2160P, 50LED2160P

PRODUCT OVERVIEW





Figure 1: Front view of the ZdalaMit CT-RC1US-19 Voice Remote Control, showing all buttons including power, voice, navigation, playback, volume, and dedicated app buttons.



Figure 2: Angled view of the ZdalaMit CT-RC1US-19 Voice Remote Control, highlighting its ergonomic design and slim profile.

The CT-RC1US-19 remote features a standard button layout for TV control, including a central navigation pad, volume controls, channel controls, and dedicated buttons for popular streaming services. It also includes a microphone button for voice commands.

SETUP

1. Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.

4. Slide the battery cover back into place until it clicks securely.

Note: Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

2. Initial Pairing (for Voice Control)

For basic TV control (power, volume, channel), the remote may work immediately after battery installation without pairing. However, to utilize the voice control feature, pairing with your Toshiba TV is required.

1. Ensure your Toshiba TV is powered on.
2. Point the remote control towards the TV.
3. Press and hold the **Home** button (usually depicted as a house icon) for approximately 10-15 seconds.
4. A pairing confirmation message should appear on your TV screen. Follow any on-screen prompts to complete the pairing process.

Tip: If pairing fails, ensure there are no obstructions between the remote and the TV, and that the batteries are correctly installed and charged. You may need to try pairing again closer to the TV.

OPERATING INSTRUCTIONS

Basic Functions

- **Power Button:** (Usually marked with a circle and a vertical line) Press to turn the TV on or off.
- **Navigation Pad:** (Circular buttons with Up, Down, Left, Right arrows and a central button) Use the directional arrows to navigate menus and select items. Press the central button to confirm selections.
- **Back Button:** (Usually marked with a curved arrow pointing left) Returns to the previous screen or menu.
- **Home Button:** (Usually marked with a house icon) Returns to the TV's home screen or main menu.
- **Menu Button:** (Usually marked with three horizontal lines) Opens the TV's settings or options menu.
- **Volume Buttons (+/-):** Adjusts the TV volume.
- **Mute Button:** (Usually marked with a speaker icon with a cross through it) Mutes or unmutes the TV audio.
- **Playback Controls:** (Play/Pause, Rewind, Fast Forward icons) Controls media playback.

Voice Control

Once paired, you can use voice commands to control your TV and search for content.

1. Press and hold the **Microphone Button:** (Usually marked with a microphone icon) located at the top of the remote.
2. Speak clearly into the microphone at the top of the remote.
3. Release the button when you have finished speaking.

Examples of Voice Commands:

- "Open Netflix"
- "Search for action movies"
- "Go to HDMI 2"
- "Volume up"

Dedicated App Buttons

The remote features dedicated buttons for quick access to popular streaming applications:

- **Prime Video**
- **Netflix**

- [HBOo](#)
- [PS Vue](#)

Pressing these buttons will directly launch the corresponding application on your TV, provided the app is installed and configured.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or if the voice control feature stops working. Always replace both AAA batteries simultaneously.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding to TV.	Dead or incorrectly installed batteries. Obstruction between remote and TV. Remote not paired (for voice).	Check and replace batteries. Ensure clear line of sight to TV's IR receiver. Re-pair the remote (see Setup section).
Voice control not working.	Remote not paired for voice. Microphone blocked. Internet connection issue (for TV's voice service).	Ensure remote is paired for voice control. Check for debris blocking the microphone. Verify TV's internet connection.
Buttons are stiff or unresponsive.	Dirt or debris under buttons. Internal component issue.	Clean the remote surface. If problem persists, contact customer support.
Dedicated app buttons not launching apps.	App not installed or updated on TV. TV not connected to internet.	Ensure the app is installed and updated on your TV. Check TV's internet connection.

SPECIFICATIONS

- **Model Name:** CT-RC1US-19
- **Brand:** ZdalaMit
- **Connectivity Technology:** Infrared
- **Compatible Devices:** Toshiba Televisions (specific models listed in Introduction)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 5.2 x 1.5 x 0.5 inches (approximately)
- **Item Weight:** 1.76 ounces (approximately)
- **Manufacturer:** ZdalaMit Factory

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the seller directly. ZdalaMit products typically come with a standard manufacturer's warranty covering defects in materials and workmanship.

For further assistance, you may also visit the ZdalaMit official website or contact their customer service department.

© 2024 ZdalaMit. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08M8TH6P4>

More documents and user manuals: <https://manuals.plus/>