

Denon Denon Home 150

Denon Home 150 Wireless Speaker Instruction Manual

INTRODUCTION

The Denon Home 150 Wireless Speaker delivers high-resolution audio and versatile connectivity for a seamless listening experience. Featuring HEOS Built-in, AirPlay 2, and Bluetooth, this compact speaker integrates effortlessly into your home audio system. It supports popular streaming services and offers voice control compatibility with Amazon Alexa. This manual provides essential information for setting up, operating, and maintaining your Denon Home 150 speaker.

PRODUCT FEATURES

- **HEOS Built-in:** Enjoy multi-room audio by grouping multiple Denon Home speakers or other HEOS-enabled devices. Stream different music in each room or the same song throughout your home.
- **High-Resolution Audio:** Equipped with a dynamic 1-inch tweeter and a 3.5-inch mid-bass driver, the speaker reproduces accurate sound with clear highs and deep lows.
- **Versatile Streaming:** Stream music from Spotify, Apple Music, Amazon Music HD, Pandora, TIDAL, TuneIn, and more via Wi-Fi, AirPlay 2, HEOS, or Bluetooth.
- **Voice Control:** Compatible with Amazon Alexa voice commands from any Echo device (sold separately).
- **Multiple Connectivity Options:** Includes USB, Ethernet (Network), and Aux-in ports for various audio sources.
- **Intuitive Controls:** Features a proximity-sensing, light-up top control panel with volume buttons, play/pause, and three quick select buttons for favorite internet radio stations.

SETUP GUIDE

1. **Unpacking and Placement:** Carefully remove the speaker from its packaging. Place the speaker on a stable, flat surface. Consider speaker placement for optimal bass response (e.g., away from walls, near one wall, or near two walls) as this can be adjusted in the HEOS app.
2. **Power Connection:** Connect the power cord to the AC inlet on the back of the speaker and then plug it into a wall outlet. The status light on the front will illuminate.
3. **HEOS App Installation:** Download the HEOS app from your device's app store (available for iOS and Android).
4. **Network Connection:** Open the HEOS app and follow the on-screen instructions to add your Denon Home 150 speaker. You can connect via Wi-Fi or by plugging an Ethernet cable into the Network port on the back of the speaker.

5. **Bluetooth Pairing:** To pair via Bluetooth, press the Bluetooth button on the back of the speaker. The status light will blink. Go to your device's Bluetooth settings and select "Denon Home 150" to pair.

6. **Voice Assistant Setup:** If desired, enable Amazon Alexa through the HEOS app settings.

FITS EVERY SPACE OR ROOM




Image: Rear view of the Denon Home 150 speaker showing the power input, USB, Aux-in, Ethernet, and Connect/Bluetooth buttons.

OPERATING INSTRUCTIONS

Top Panel Controls

The Denon Home 150 features a proximity-sensing top panel that illuminates when your hand approaches. This panel provides quick access to essential functions:

- **Volume Buttons:** Adjust the playback volume.
- **Play/Pause Button:** Start or pause audio playback.
- **Quick Select Buttons (1, 2, 3):** Store and recall your favorite internet radio stations or playlists for instant access.

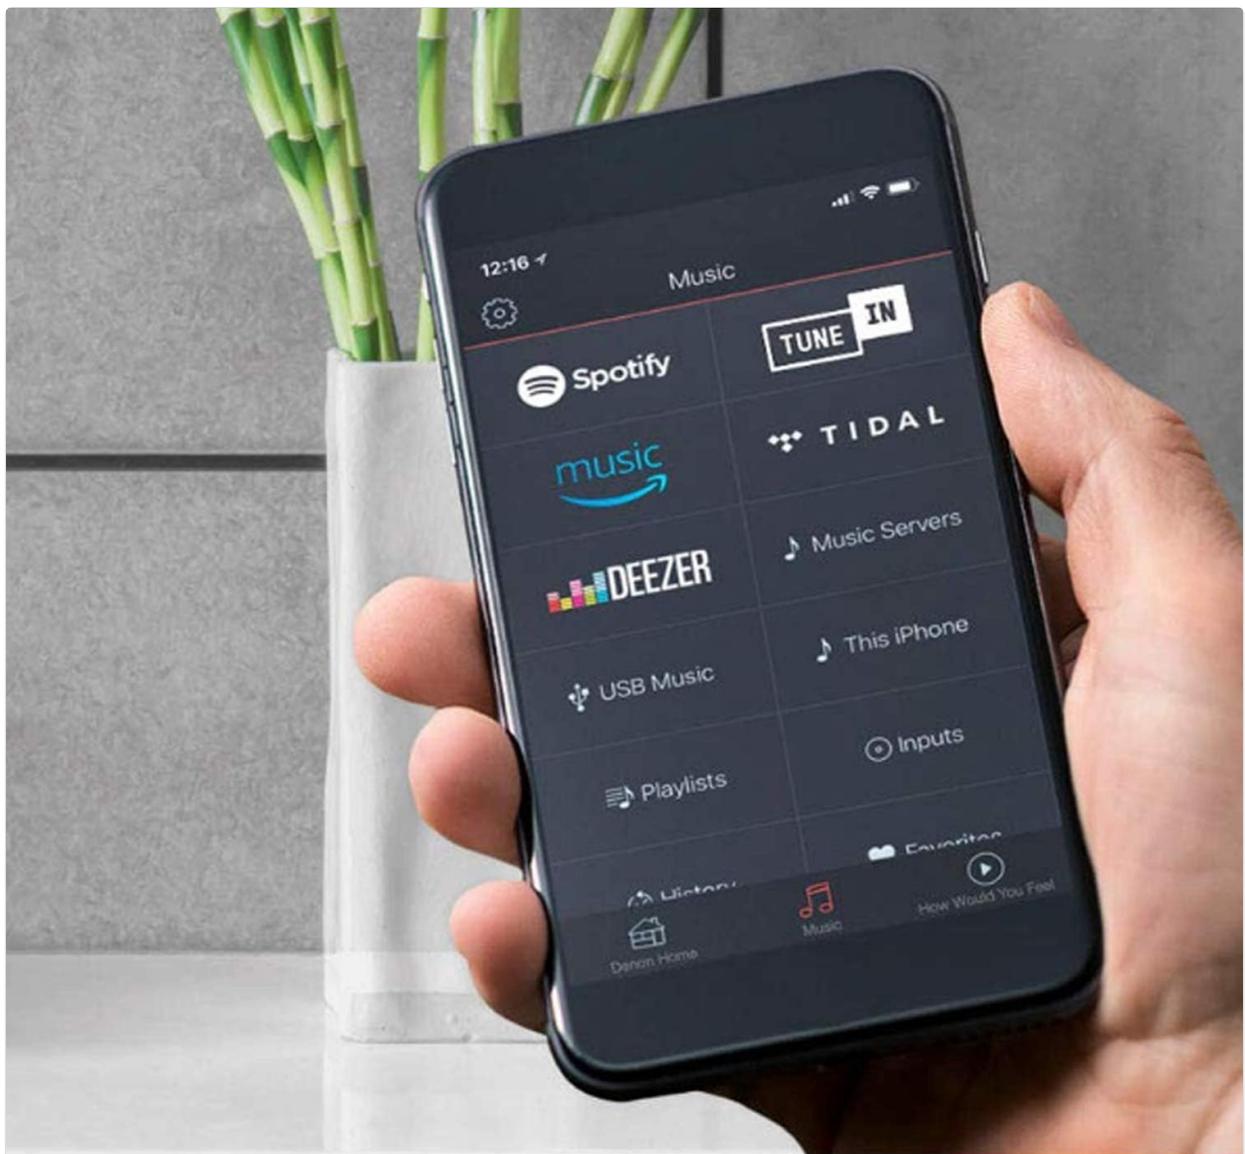

Wirelessly stream fully integrated music services via Bluetooth, Wi-Fi or Airplay 2

Image: Top and rear view of the Denon Home 150 speaker, highlighting the touch-sensitive controls and various input/output ports.

Using the HEOS App

The HEOS app is your central control for the Denon Home 150. It allows you to:

- **Browse and Play Music:** Access and control music from various streaming services, local network shares, or your phone.
- **Multi-Room Audio:** Group multiple HEOS devices to play synchronized audio across different rooms or individual audio in each zone.
- **Adjust Audio Settings:** Fine-tune bass and treble levels, and optimize sound based on speaker placement.
- **Manage Quick Selects:** Program and edit your favorite stations for the top panel buttons.



Image: A smartphone screen showing the HEOS app, displaying various music streaming services and control options.

MAINTENANCE

To ensure the longevity and optimal performance of your Denon Home 150 speaker, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Avoid using abrasive cleaners, solvents, or chemical sprays, as these can damage the finish.
- **Avoid Liquids:** Do not expose the speaker to water or excessive moisture. While robust, it is not waterproof.
- **Ventilation:** Ensure proper ventilation around the speaker to prevent overheating. Do not block any ventilation openings.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Denon Home 150 speaker, try the following steps:

- **No Power:** Ensure the power cord is securely connected to both the speaker and a working wall outlet.
- **No Sound:** Check the volume levels on both the speaker and your source device. Verify that the correct input source is selected in the HEOS app.
- **Connectivity Issues:** For Wi-Fi, ensure your router is on and the speaker is within range. For Bluetooth,

ensure the speaker is in pairing mode and your device's Bluetooth is enabled. Try restarting both the speaker and your source device.

- **App Not Responding:** Close and reopen the HEOS app. If the issue persists, restart your mobile device.
- **Factory Reset:** If problems persist, consult the Denon support website for instructions on performing a factory reset. This will erase all settings and return the speaker to its default state.

SPECIFICATIONS

Brand	Denon
Model Name	Denon Home 150
Speaker Type	Multi Room, Subwoofer
Connectivity Technology	Bluetooth, USB, Wi-Fi
Special Feature	Radio
Recommended Uses	Music
Compatible Devices	Smartphone, Laptop, Desktop, Television
Audio Output Mode	Stereo
Mounting Type	Tabletop Mount
Item Weight	5.39 pounds
Product Dimensions	7.09 x 11.81 x 7.09 inches
Woofer Diameter	3.5 Inches
Tweeter Diameter	25 Millimeters



Image: The Denon Home 150 speaker with its height and depth dimensions clearly indicated.

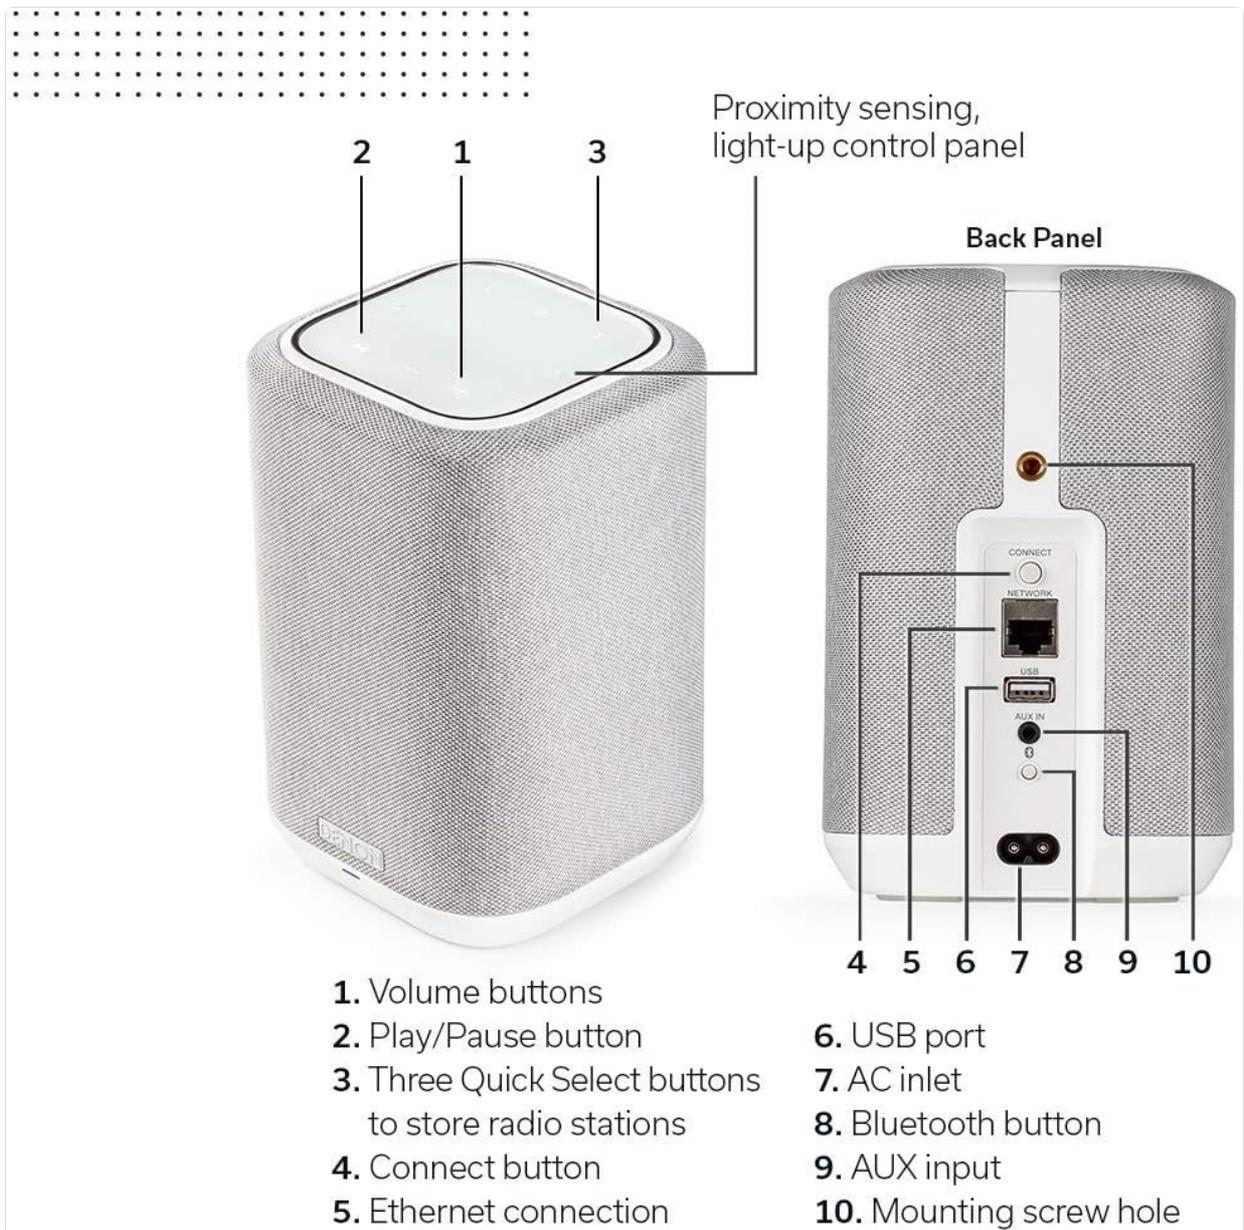


Image: An exploded diagram of the Denon Home 150 speaker, illustrating its internal 1-inch tweeter and 3.5-inch mid-bass driver for high-quality audio reproduction.

WARRANTY AND SUPPORT

The Denon Home 150 Wireless Speaker comes with a **Limited Warranty**. For detailed information regarding warranty terms, coverage, and how to make a claim, please refer to the warranty card included with your product or visit the official Denon support website.

For technical support, troubleshooting assistance beyond this manual, or service inquiries, please contact Denon Customer Support through their official website or the contact information provided in your product documentation.