

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [VOCOO](#) /

› [VOCOO Digital Kitchen Timer User Manual](#)

VOCOO 5260

VOCOO Digital Kitchen Timer

Model: 5260

User Instruction Manual

INTRODUCTION

Thank you for choosing the VOCOO Digital Kitchen Timer. This device is designed for precise time management in various settings, including cooking, studying, fitness, and more. Featuring a large LED display, adjustable volume, and magnetic backing, it offers ease of use and versatility for all ages.



Image: Front view of the VOCOO Digital Kitchen Timer, displaying "08:24" on its large LED screen. The timer is white with a black display area.

SAFETY INFORMATION

- Keep the device away from water and excessive moisture to prevent damage.
- Do not expose the timer to extreme temperatures or direct sunlight for prolonged periods.
- Handle with care; avoid dropping or subjecting the device to strong impacts.
- Ensure batteries are inserted correctly according to polarity markings.
- Keep batteries out of reach of children.

PACKAGE CONTENTS

Upon opening the package, please verify that all items are present and in good condition:

- 1 x VOCOO Digital Kitchen Timer (Model 5260)
- 3 x AAA Batteries (pre-installed or included separately)
- 1 x User Manual (this document)

PRODUCT OVERVIEW

The VOCOO Digital Kitchen Timer features a sleek design with intuitive controls. Key components include:

- **Large LED Display:** Shows time clearly.
- **Rotary Dial:** Used for setting minutes and seconds.
- **Start/Stop Button:** Integrated into the display, press to start or pause.
- **Magnetic Backing:** Allows attachment to metal surfaces.
- **Non-slip Pads:** Provide stability on flat surfaces.
- **Volume Switch:** Located on the back, for adjusting alarm volume (Loud, Soft, Mute).
- **Brightness Switch:** Located on the back, for adjusting display brightness (Bright, ECO).



Easy To Use

Turn the dial to set time

Make your timing more efficient & easier

Image: A person's hands holding the VOCOO Digital Kitchen Timer, highlighting its compact and ergonomic design for easy handling.

SETUP

1. Battery Installation

The timer requires three AAA batteries. These are typically included. If not, or if replacing, follow these steps:

1. Locate the battery compartment cover on the back of the timer.
2. Slide the cover open.
3. Insert three AAA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

2. Initial Power-On

Once batteries are installed, the timer should automatically power on and display "00:00". If not, check battery installation.

3. Magnetic Attachment

The timer features powerful magnets on its back, allowing it to be securely attached to any iron surface, such as a refrigerator or oven. Ensure the transparent film on the silicone pads is removed for stronger magnetic adhesion.



Image: The VOCOO Digital Kitchen Timer magnetically attached to the side of a refrigerator, demonstrating its convenient placement.

Two Counting Modes



Countup
00:00--99:55



Count Down
99:55-00:00



Image: A detailed view of the back of the timer, illustrating the two strong magnets and two non-slip silicone pads designed for secure attachment.

OPERATING INSTRUCTIONS

1. Setting Time (Countdown Mode)

To set a countdown time:

1. Ensure the display shows "00:00". If not, press and hold the front button to reset it.
2. Rotate the outer dial clockwise to increase the time.
 - Rotate slowly to adjust seconds.
 - Rotate quickly to adjust minutes.
3. The maximum countdown time is 99 minutes and 55 seconds.

2. Starting and Pausing the Timer

Once the desired time is set, press the front button (the large circular area on the display) once to start the countdown. To pause the timer, press the button again. Pressing it a third time will resume the countdown.

3. Resetting the Timer

To reset the timer to "00:00" at any point, press and hold the front button for approximately 3 seconds.

4. Count-Up Mode (Stopwatch)

To use the timer as a stopwatch:

1. Ensure the display shows "00:00". If not, press and hold the front button to reset it.
2. Press the front button once to start counting up from "00:00".
3. Press the button again to pause the count-up.
4. Press and hold the button to reset the stopwatch to "00:00".



Clear LED Display

Easy to read even at a glance



Image: Illustration of the two counting modes: Count-up (stopwatch) from 00:00 to 99:55, and Countdown from 99:55 to 00:00. Examples show the timer used during exercise and baking.

5. Adjusting Alarm Volume

On the back of the timer, locate the volume switch. You can select from three alarm levels:

- **Loud:** Approximately 80-90dB, suitable for noisy environments.
- **Soft:** Approximately 60-75dB, for quieter settings.
- **Mute:** The numbers will blink on the display to indicate time is up without an audible alarm, ideal for silent environments like libraries or meetings.



2-Level Volume and Mute



Image: The timer's volume settings are illustrated, showing a loud setting (80-90dB) for a kitchen environment, a soft setting (60-75dB) for a quiet home, and a mute setting where numbers blink, suitable for an office or classroom.

6. Adjusting Display Brightness

Also on the back of the timer, there is a switch to adjust the display brightness:

- **Bright:** For optimal visibility in well-lit conditions.
- **ECO:** A dimmer setting to conserve battery life, suitable for low-light conditions.

The timer automatically enters power-saving mode 5 seconds after being paused or stopped. Press the front button to reactivate the display.

MAINTENANCE

Cleaning

To clean the timer, wipe it gently with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners or immerse the device in water.

Battery Replacement

When the display dims significantly or the timer stops responding, it's time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section.

Storage

If storing the timer for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Timer does not turn on.	Batteries are dead or incorrectly installed.	Replace batteries or ensure correct polarity.
Display is dim.	ECO brightness mode is selected or batteries are low.	Switch to "Bright" mode on the back. Replace batteries if still dim.
Alarm is not sounding.	Mute volume mode is selected.	Switch to "Loud" or "Soft" mode on the back.
Timer does not stick to surface.	Transparent film on silicone pads not removed or surface is not iron.	Remove the transparent film. Ensure the surface is magnetic (iron/steel).
Time setting is too sensitive.	Rapid rotation of the dial.	Rotate the dial more slowly for precise second adjustments. Rotate quickly for minute adjustments.

SPECIFICATIONS

Feature	Detail
Model Number	5260
Dimensions	3.07"D x 3.07"W x 1.06"H (7.8 x 7.8 x 2.7 CM)
Weight	4.2 ounces (120 Grams)
Material	Acrylonitrile Butadiene Styrene (ABS)
Max Count Time	99 Minutes 55 Seconds
Power Source	3 x AAA Batteries (included)
Alarm Volume Levels	Loud (80-90dB), Soft (60-75dB), Mute (blinking digits)
Display Brightness	Bright, ECO
Features	Magnetic Backing, Non-slip Pads, Memory Function

WARRANTY AND SUPPORT

Warranty Information

VOCOO products are manufactured with high-quality materials and undergo strict quality control. For specific warranty details, please refer to the product packaging or contact VOCOO customer support. Typically, electronic devices come with a limited warranty covering manufacturing defects.

Customer Support

If you encounter any issues or have questions regarding your VOCOO Digital Kitchen Timer, please contact our customer support team. You can usually find contact information on the product packaging, the official VOCOO website, or through your purchase platform.

When contacting support, please have your product model number (5260) and purchase details ready to assist in a quicker resolution.