

Tengsen X15

Tengsen X15 MP3 Player User Manual

Model: X15

1. INTRODUCTION

Welcome to the user manual for your new Tengsen X15 MP3 Player. This guide provides detailed instructions on how to set up, operate, and maintain your device. Please read this manual thoroughly to ensure optimal performance and longevity of your MP3 player.

The Tengsen X15 MP3 Player is a versatile device designed for music enthusiasts, offering a range of features:

- **8GB Internal Memory:** Store thousands of lossless music files.
- **Expandable Storage:** Supports TF card expansion up to 128GB.
- **Bluetooth 4.2:** Stable and high-quality wireless audio connection.
- **Lossless HiFi Sound:** Professional intelligent digital noise reduction chip for superior audio.
- **2.4-inch Screen:** Large and clear display for easy navigation.
- **Metal Body:** Durable and premium feel.
- **High-Sensitivity Touch Buttons:** Backlit for easy operation in low light.
- **Built-in HD Speaker:** Share your music without headphones.
- **Multi-functional:** Includes FM radio, voice recorder, e-book reader (TXT), photo viewer (JPG, BMP, GIF), and custom alarm.



Image: Front and side view of the Tengsen X15 MP3 Player, showcasing its sleek design and screen.

2. PACKAGE CONTENTS

Please check the box for the following items:

- 1 x Tengsen X15 MP3 Player

- 1 x Music Headset
- 1 x Micro USB Cable
- 1 x User Manual

Note: An SD card is NOT included and must be purchased separately for memory expansion.

3. PRODUCT OVERVIEW

Controls and Ports

Familiarize yourself with the buttons and ports on your MP3 player for easy operation.

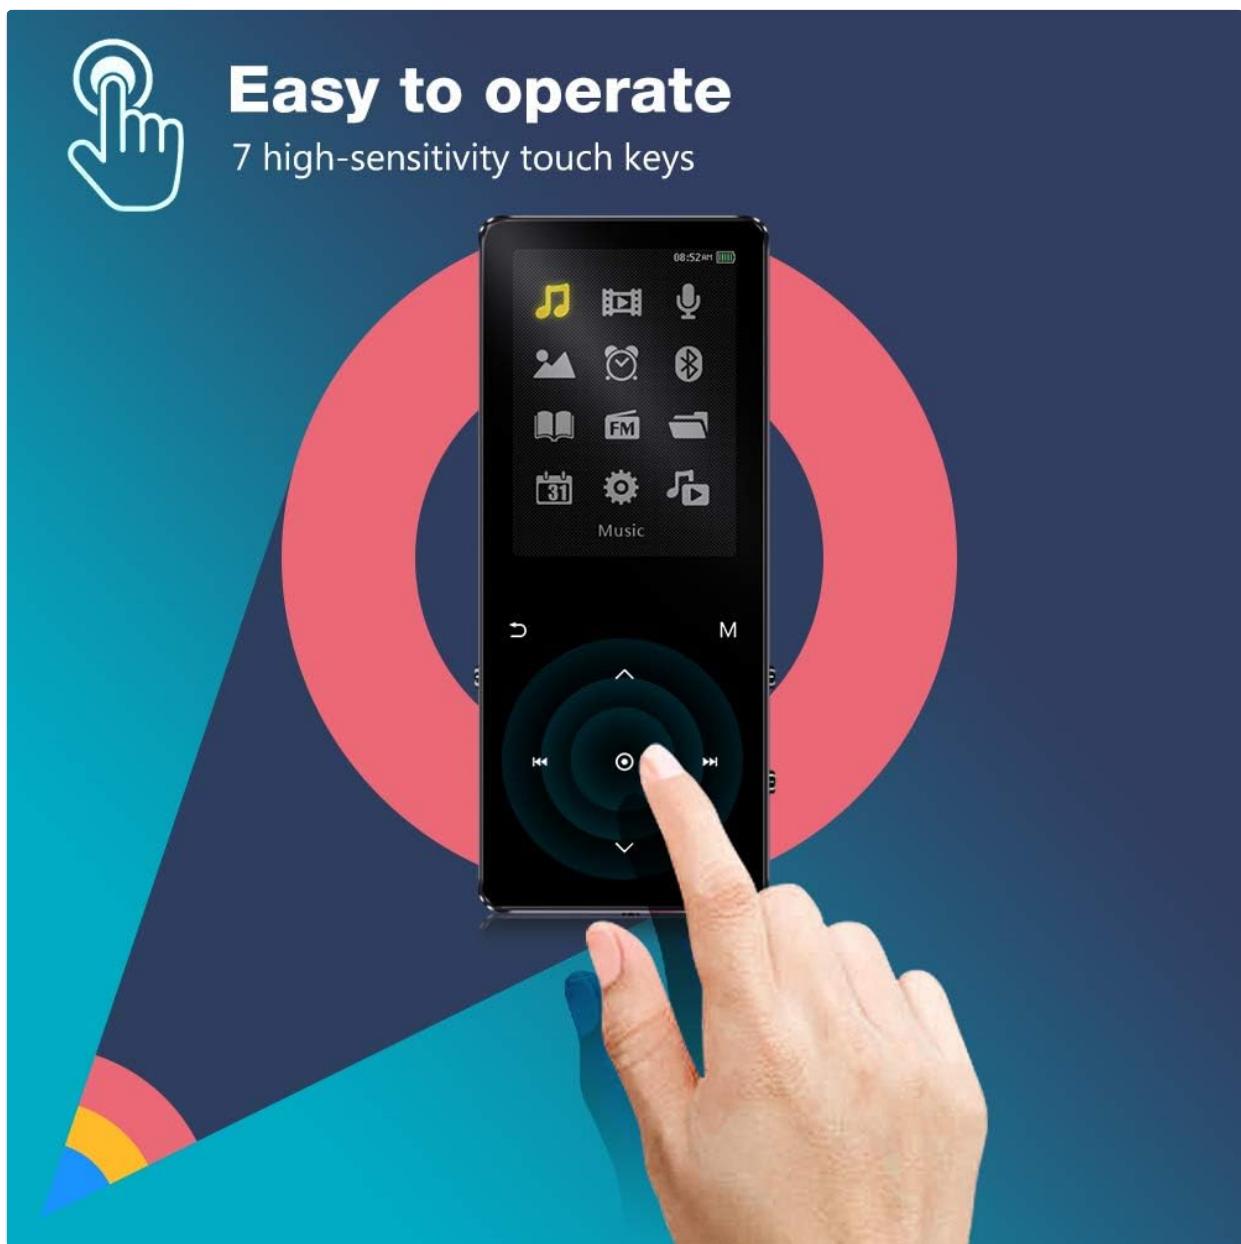


Image: The Tengsen X15 MP3 Player highlighting its 7 high-sensitivity touch keys for easy navigation.

- **Power Button:** Long press to turn on/off, short press to lock/unlock screen.
- **Touch Keys:** 7 sensitive touch buttons for menu navigation and function selection. These buttons are backlit for visibility in the dark.
- **Micro USB Port:** For charging and data transfer.
- **Headphone Jack:** 3.5mm port for wired earphones.

- **TF Card Slot:** For inserting a Micro SD card to expand storage.

4. SETUP

4.1 Charging the Device

Before first use, fully charge your MP3 player. Connect the micro USB cable to the device's USB port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.

4.2 Inserting a Micro SD Card

To expand the storage capacity, you can insert a Micro SD card (up to 128GB).

1. Locate the TF card slot on the side of the device.
2. Gently insert the Micro SD card into the slot until it clicks into place. Ensure the card is oriented correctly.
3. To remove, gently push the card in again until it pops out.



Image: The Tengsen X15 MP3 Player with a Micro SD card being inserted into its TF card slot, illustrating memory expansion capability.

4.3 Powering On/Off

- **To Power On:** Long press the Power button until the screen lights up.
- **To Power Off:** Long press the Power button until the power-off prompt appears, then confirm.

5. BASIC OPERATION

5.1 Navigating the Menu

Use the high-sensitivity touch buttons to navigate through the menus. The central button typically acts as 'Enter' or 'Confirm', while the surrounding buttons are for navigation (up, down, left, right) and 'Back' or 'Menu'.

5.2 Playing Music

The player supports various audio formats including MP3, WMA, WAV, OGG, AAC, ACELP, APE (8KHz-48KHz), and FLAC (8KHz-48KHz). It delivers HiFi lossless sound quality.

Entry HiFi level sound quality

Supports:
MP3,
WMA,
APE,
FLAC,
WAV,
AAC-LC,
ACELP etc



Image: The Tengsen X15 MP3 Player showcasing its HiFi sound quality capabilities and listing supported audio formats.

1. From the main menu, select 'Music'.
2. Browse by 'All Songs', 'Artists', 'Albums', 'Genres', or 'Playlists'.
3. Select a song to begin playback.

5.3 Bluetooth Connection

The device features Bluetooth 4.2 for stable wireless connections. It can only be paired with Bluetooth headphones or speakers, not with phones or computers.

Bluetooth

Perfect for Bluetooth headset and
Bluetooth speaker, Enjoy music
without wires.

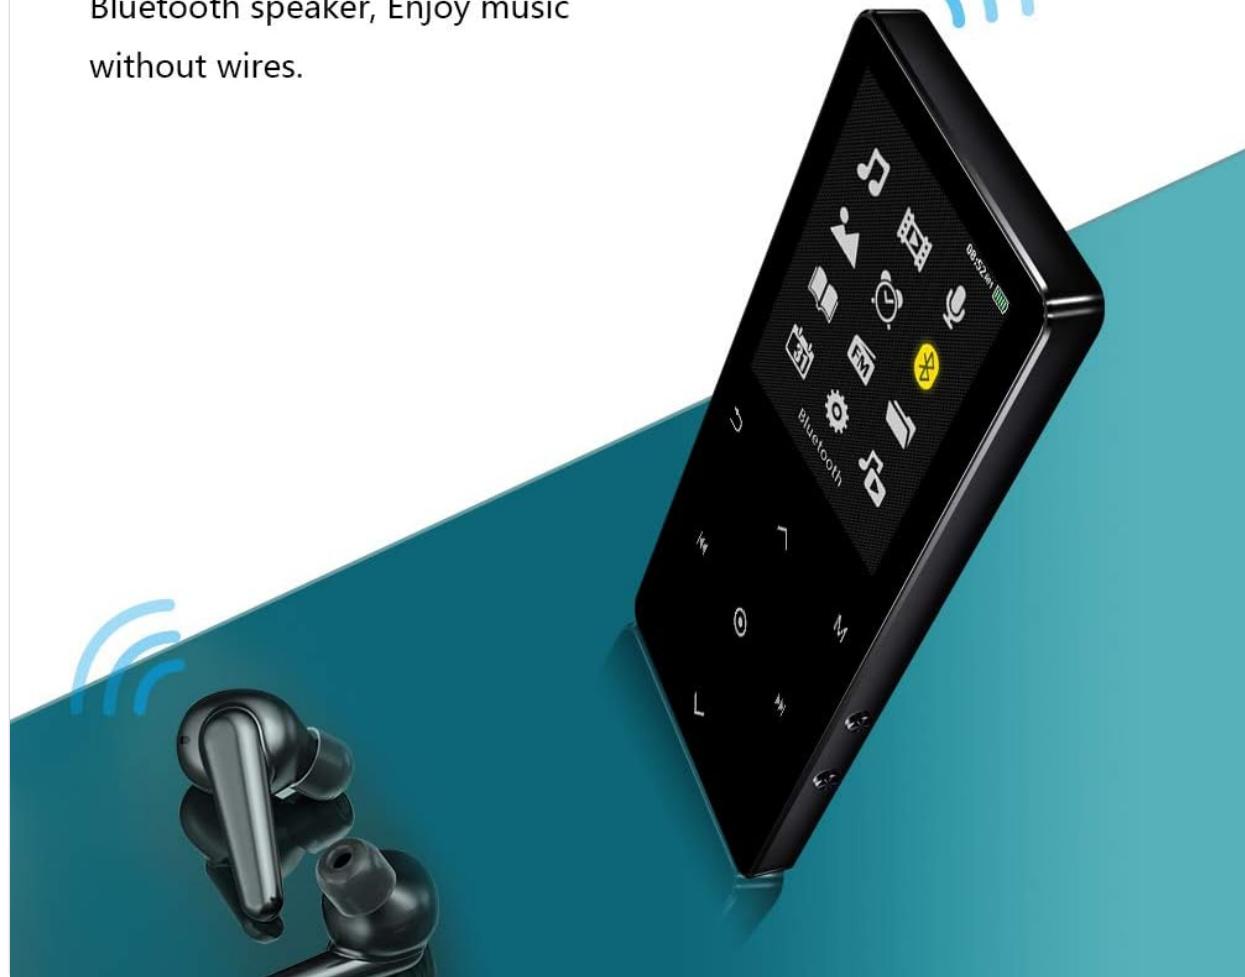


Image: The Tengsen X15 MP3 Player demonstrating its Bluetooth connectivity with a pair of wireless headphones.

1. Go to 'Bluetooth' in the main menu.
2. Turn Bluetooth 'On'.
3. Select 'Search for device' to find available Bluetooth headphones or speakers.
4. Select your device from the list to pair.

5.4 FM Radio

The integrated FM tuner allows you to listen to radio stations. **Wired earphones are essential as they act as the antenna for the FM radio.**

1. Plug in your wired earphones.
2. Select 'FM Radio' from the main menu.
3. Use the navigation buttons to scan for stations or manually tune.

5.5 Voice Recording

Record audio using the built-in microphone. Recordings are saved in WAV or MP3 format.

1. Select 'Voice Recorder' from the main menu.
2. Press the appropriate button to start/stop recording.

5.6 E-Book Function

Read TXT format e-books on your device. It supports automatic reading, memory function, bookmarks, and page selection.

1. Transfer TXT files to the 'E-book' folder on your device.
2. Select 'E-book' from the main menu and choose your file.

5.7 Photo Viewing

View images in JPG, BMP, and GIF formats.

1. Transfer image files to the 'Photo' folder on your device.
2. Select 'Photo' from the main menu and browse your images.

6. ADVANCED FEATURES

6.1 Custom Alarm

Set a personalized alarm to ensure you don't miss important moments.

1. Navigate to the 'Alarm' function in the menu.
2. Set the desired time and alarm sound.

6.2 Shuffle Playback & A-B Repeat

- **Shuffle Playback:** Enable this option in the music playback settings to play songs in a random order.
- **A-B Repeat:** During music playback, use the A-B repeat function to loop a specific section of a song. This is useful for language learning or practicing music.

7. MAINTENANCE

7.1 Cleaning

To keep your MP3 player in good condition, wipe the screen and body with a soft, dry, lint-free cloth. Avoid using harsh chemicals or abrasive materials.

7.2 Storage

When not in use for extended periods, store the device in a cool, dry place away from direct sunlight and extreme temperatures. It is recommended to charge the device periodically to maintain battery health.

8. TROUBLESHOOTING

Common Issues and Solutions

- **Device Freezes or Becomes Unresponsive:**

If the MP3 player crashes or becomes unresponsive, long press the power button to restart the device.

- **Cannot Pair with Bluetooth Device:**

Ensure the Bluetooth device (headphones/speakers) is in pairing mode. Remember, this device can only be paired with Bluetooth headphones or speakers; it cannot be paired with phones or computers.

- **FM Radio Not Working:**

Ensure wired earphones are properly plugged into the headphone jack, as they function as the antenna for the FM radio.

- **Cannot Transfer Files:**

Ensure the USB cable is securely connected to both the MP3 player and the computer. Try a different USB port or cable.

- **SD Card Not Recognized:**

Ensure the SD card is inserted correctly. Try reinserting it or using a different compatible SD card.

9. SPECIFICATIONS

Technical Specifications

Feature	Specification
Brand	Tengsen
Model Number	X15
Screen Size	2.4 Inches
Built-in Storage	8 GB
Memory Expansion	Up to 128 GB (Micro SD Card)
Connectivity Technology	Bluetooth 4.2, USB
Audio Formats Supported	MP3, WMA, WAV, OGG, AAC, ACELP, APE, FLAC
Recording Formats	WAV, MP3
E-book Format	TXT
Photo Formats	JPG, BMP, GIF
Battery Composition	Lithium-polymer
Special Features	FM Radio, High-Resolution Audio, Voice Recorder

10. WARRANTY AND SUPPORT

Your Tengsen X15 MP3 Player comes with a standard warranty. For any issues, technical support, or warranty claims, please refer to the contact information provided in the physical user manual included with your product. Our customer service team is dedicated to providing prompt and satisfactory assistance.

© 2023 Tengsen. All rights reserved.