

[manuals.plus](#) /› [VINABTY](#) /› [VINABTY BN59-01329B Voice Remote Control User Manual for Samsung Smart TVs](#)

VINABTY BN59-01329B

VINABTY BN59-01329B Voice Remote Control

USER MANUAL

1. INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your VINABTY BN59-01329B Voice Remote Control. This remote is designed to be compatible with a wide range of Samsung Smart TVs, offering convenient control including voice command functionality.

2. PRODUCT FEATURES

- **Voice Control:** Utilize voice commands for easy navigation and search.
- **Dedicated App Buttons:** Quick access to popular streaming services like Netflix, Prime Video, and Rakuten TV.
- **Ergonomic Design:** Comfortable to hold and use.
- **Easy Pairing:** Simple process to connect with your compatible Samsung TV.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Figure 1: Battery compartment on the back of the remote.

3.2 Pairing the Remote Control

To use the voice control and full functionality, the remote must be paired with your Samsung Smart TV. Follow these steps:

1. Ensure your TV is powered on.
2. Point the remote control at the TV's remote control sensor.
3. Press and hold the **Return** button and the **Play/Pause** button simultaneously for 3-5 seconds.
4. A pairing message should appear on your TV screen, indicating that the remote is connecting.
5. Once paired, the message will confirm successful connection.

If pairing fails, ensure the batteries are correctly installed and try again. Move closer to the TV if necessary.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control for optimal use.



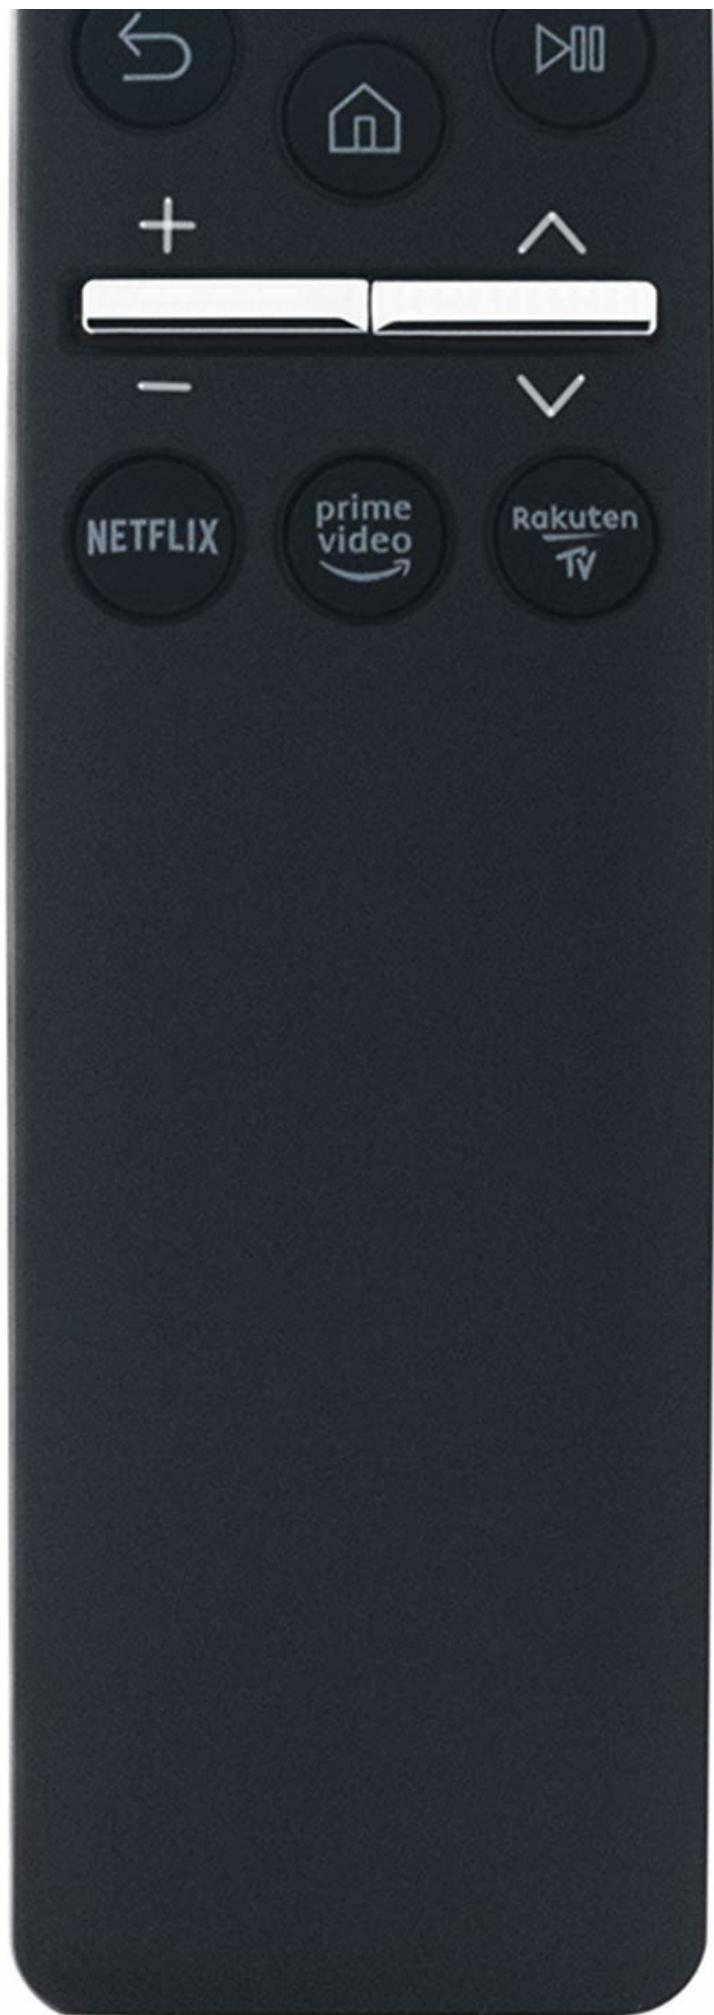




Figure 2: Front view of the remote control.

4.1 Basic Navigation

- **Directional Pad (Up/Down/Left/Right):** Navigate menus and content.
- **Select Button (Center):** Confirm selections or open items.
- **Home Button:** Access the Smart Hub or main menu.
- **Back Button:** Return to the previous screen or menu.

4.2 Volume and Channel Control

- **Volume Rocker (+/-):** Press up to increase volume, down to decrease.
- **Channel Rocker (Up/Down):** Press up to go to the next channel, down for the previous channel.
- **Mute Button:** Mute or unmute the TV audio.

4.3 Voice Control

- **Voice Command Button (Microphone icon):** Press and hold this button to activate the voice assistant. Speak your command clearly into the remote. Release the button when finished speaking.

4.4 Dedicated App Buttons

- **Netflix Button:** Directly launch the Netflix application.
- **Prime Video Button:** Directly launch the Amazon Prime Video application.
- **Rakuten TV Button:** Directly launch the Rakuten TV application.

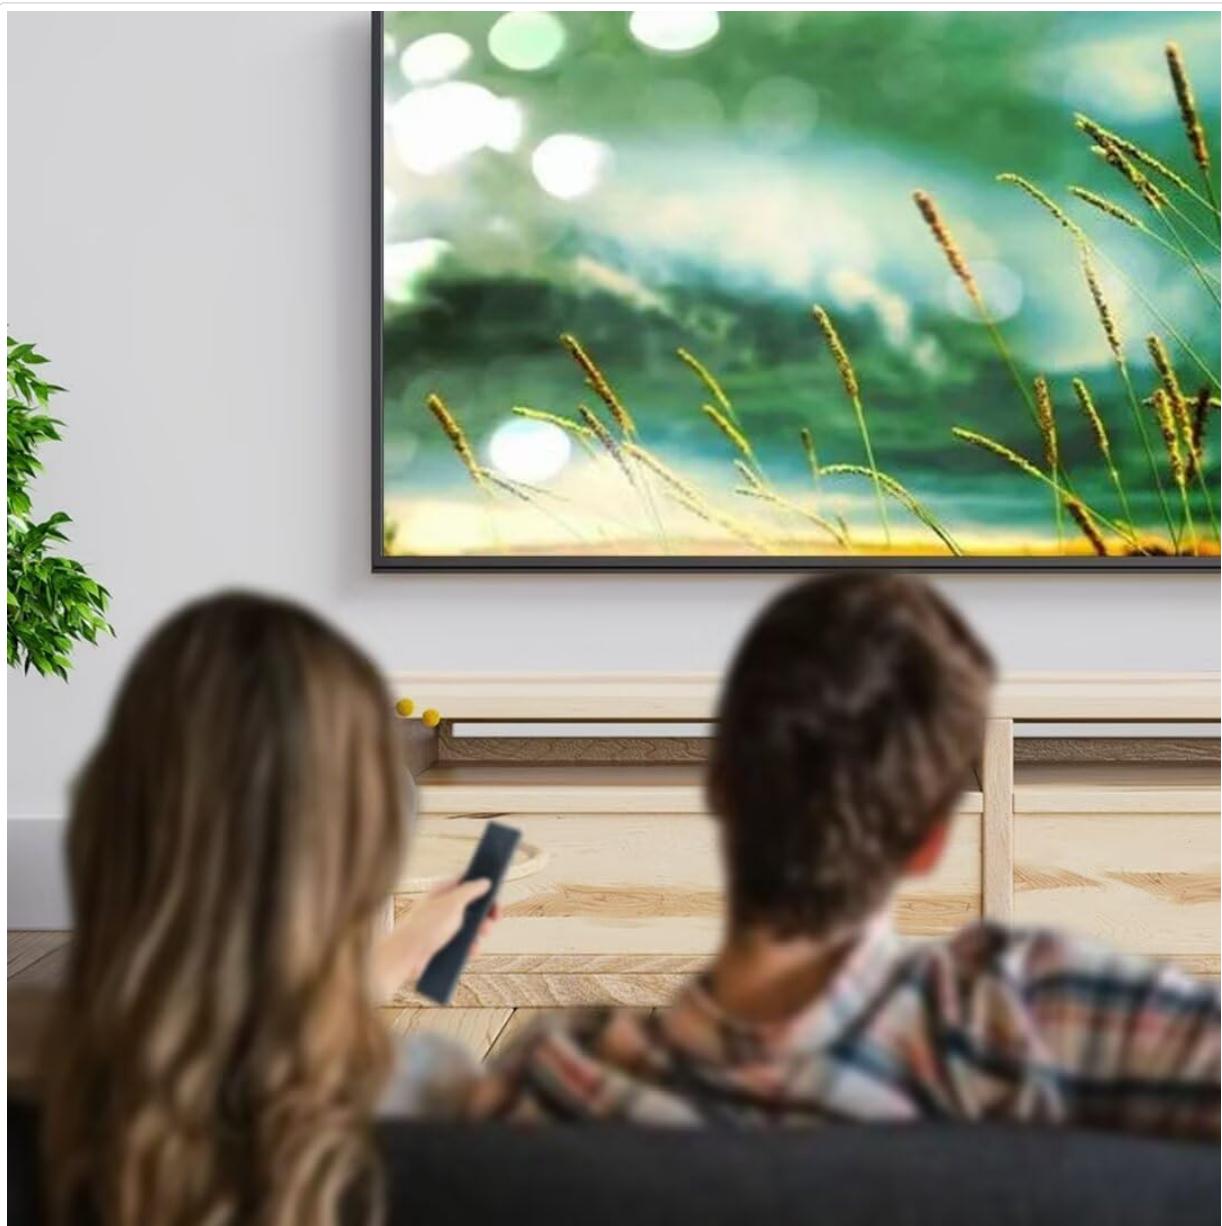


Figure 3: Remote control in use.

5. COMPATIBLE TV MODELS

This remote control is compatible with various Samsung Smart TV models, including but not limited to:

- **QLED Series:** QE85Q60T, QE85Q70T, QE55Q70T, QE55Q74T, QE55Q75T, QE55Q77T, QE65Q70T, QE65Q74T, QE65Q75T, QE65Q77T, QE75Q70T, QE75Q74T, QE75Q75T, QE75Q77T, QE49Q80T, QE49Q85T, QE55Q80T, QE55Q85T, QE65Q80T, QE65Q85T, QE75Q80T, QE75Q85T, QE85Q80T, QE43Q60T, QE43Q64T, QE43Q65T, QE43Q67T, QE50Q60T, QE50Q64T, QE50Q65T, QE50Q67T, QE55Q60T, QE55Q64T, QE55Q65T, QE55Q67T, QE58Q60T, QE65Q60T, QE65Q64T, QE65Q65T, QE65Q67T, QE75Q60T, QE75Q64T, QE75Q65T, QE75Q67T, QE55Q82R, QE65Q82R, QE55Q90R, GQ75Q90R, GQ55Q90R, QE75Q90R, GQ65Q90RGTXZG, GQ65Q90R, QE65Q90R
- **8 Series:** UE55TU8500U, UE43TU8000, UE50TU8000, UE55TU8000, UE65TU8000, UE75TU8000, UE82TU8000, UE43TU8500, UE43TU8507, UE43TU8510, UE50TU8500, UE50TU8507, UE50TU8510, UE55TU8500, UE55TU8507, UE65TU8500, UE65TU8507

For a complete list of compatible models, please refer to the product packaging or contact customer support.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or if the TV does not respond consistently. Always replace both batteries at the same time with new ones of the same type (AA).
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

7.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are correctly inserted and not depleted. Replace if necessary.
- **Re-pair Remote:** Follow the pairing instructions in Section 3.2 to re-establish connection with the TV.
- **Obstructions:** Ensure there are no objects blocking the line of sight between the remote and the TV's sensor.

7.2 Voice Control Not Working

- **Check Pairing:** Voice control requires the remote to be properly paired via Bluetooth. Re-pair if needed.
- **Speak Clearly:** Ensure you are speaking clearly and directly into the microphone on the remote.
- **TV Settings:** Verify that voice control is enabled in your TV's settings.

8. SPECIFICATIONS

| | |
|-------------------------|---------------------------------|
| Model Number | BN59-01329B |
| Product Dimensions | 6.6 x 1.6 x 0.7 inches |
| Item Weight | 1.62 ounces |
| Connectivity Technology | Bluetooth |
| Special Feature | Voice Search |
| Power Source | 2 x AA Batteries (not included) |

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.