

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Foppapedretti](#) /
- › [Foppapedretti Baby Bouncer Musical Swing Instruction Manual](#)

Foppapedretti 9702005410

Foppapedretti Baby Bouncer Musical Swing Instruction Manual

Model: 9702005410

INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your Foppapedretti Baby Bouncer Musical Swing. Please read this manual thoroughly before use and retain it for future reference. This product is designed for infants from birth up to a maximum weight of 9 kg (approximately when the child can sit up unaided).

SAFETY INFORMATION

WARNING:

- Never leave your child unattended in the bouncer.
- Do not use this product once your child can sit up unaided or weighs more than 9 kg.
- Always use the restraint system.
- Do not use the bouncer if any components are broken or missing.
- Do not use accessories or replacement parts other than those approved by the manufacturer.
- Place the bouncer on a flat, stable, and horizontal surface.
- Keep away from open flames and other sources of strong heat.
- Ensure all locking devices are engaged before use.
- This product is not intended for prolonged periods of sleep.

PACKAGE CONTENTS

Verify that all components are present and undamaged before assembly. The package should contain:

- 1 x Foppapedretti Baby Bouncer Musical Swing frame
- 1 x Seat unit with harness

- 1 x Rotating play bar with plush toys and light
- 1 x Removable tray
- 1 x Remote control
- 1 x Power adapter (transformer)
- Instruction Manual

Note: 4 x CLR 14 1.5V batteries are required for battery operation (not included).

SETUP

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble Frame:** Connect the frame components as indicated in the diagrams. Ensure all connections click securely into place.
3. **Attach Seat Unit:** Secure the seat unit to the assembled frame. Verify that it is firmly attached and cannot be easily dislodged.
4. **Install Play Bar:** Insert the rotating play bar into its designated slots on the frame. Ensure it is stable.
5. **Attach Tray:** Slide the removable tray into position until it locks.
6. **Power Connection:**
 - **AC Power:** Connect the provided power adapter to the bouncer and then to a suitable wall outlet.
 - **Battery Power:** Open the battery compartment (usually located at the base or control panel) and insert 4 x CLR 14 1.5V batteries, observing correct polarity. Close the compartment securely.
7. **Remote Control Batteries:** Insert batteries into the remote control (type usually AAA, check remote for specifics, not mentioned in product description).



Image 1: Front view of the assembled Foppapedretti Baby Bouncer Musical Swing. It shows the main seat with a puppy design, the overhead play bar with three hanging plush toys (two bears and a flower), and the sturdy frame. The control panel is visible on the right upright support.



Image 2: Side view of the Foppapedretti Baby Bouncer Musical Swing. This angle highlights the rocking base and the adjustable recline of the seat. The overhead play bar with toys is also visible, along with the Foppapedretti branding on the side support.

OPERATING INSTRUCTIONS

Powering On/Off

Press the power button on the control panel or remote control to turn the bouncer on or off.

Swing Movement

- The bouncer features multi-speed rocking movement. Use the speed control buttons on the panel or remote to adjust the intensity.

- Movement can be continuous or set with a timer for 15, 30, or 60 minutes. Select the desired timer setting using the dedicated button.
- To lock the rocking mechanism, engage the locking device located near the base. To unlock, disengage the device.

Music and Sounds

- The bouncer includes a musical device with 16 different melodies, including 5 nature sounds.
- Adjust the volume using the volume control buttons on the panel or remote.
- Cycle through melodies using the music selection button.

Play Bar and Lights

- The rotating play bar features plush toys and lights with different colors.
- Activate the lights and rotation using the corresponding buttons on the control panel or remote.

Remote Control

The remote control allows for convenient activation of seat movement and musical melodies from a distance. Ensure line of sight for optimal performance.

Using as a Rocker

The bouncer can also be used as a static rocker. Engage the locking mechanism to prevent automatic swinging and allow for manual rocking.

MAINTENANCE

Cleaning

- **Fabric Parts:** The seat fabric is not easily removable for washing. Spot clean with a damp cloth and mild soap. Allow to air dry completely.
- **Frame and Plastic Parts:** Wipe clean with a damp cloth. Do not use abrasive cleaners or solvents.
- **Tray:** The tray is easily removable for cleaning. Wash with warm soapy water and rinse thoroughly.

Battery Replacement

When the bouncer's functions (swing, music, lights) become weak or stop working, replace the batteries in both the main unit and the remote control. Always use new batteries of the specified type and ensure correct polarity. Remove batteries if the product is not used for an extended period.

Storage

Store the bouncer in a clean, dry place away from direct sunlight and extreme temperatures when not in use. Ensure it is clean and dry before storage.

TROUBLESHOOTING

- **Bouncer does not turn on:**
 - Check if the power adapter is securely plugged into both the bouncer and the wall outlet.
 - If using batteries, ensure they are correctly inserted and not depleted. Replace if necessary.

- **Swing movement is weak or inconsistent:**

- Ensure the bouncer is on a flat, level surface.
- Check battery levels if operating on battery power.
- Verify that the child's weight does not exceed 9 kg.

- **Music/Lights not working:**

- Check battery levels for the main unit and remote control.
- Ensure volume is not set to minimum.

- **Remote control not responding:**

- Replace remote control batteries.
- Ensure there are no obstructions between the remote and the bouncer's receiver.

SPECIFICATIONS

Model Number	9702005410
Maximum Supported Weight	9 kg
Gender	Unisex
Main Material	Plastic, Plush
Items in Package	1
Power Type	Battery Powered and/or AC Adapter
Batteries Required	Yes (4 x CLR 14 1.5V for main unit, not included)
Maximum Seats	1
Portable	No
Dimensions (L x W x H)	74.5 x 67 x 94.5 cm
Product Weight	7.5 kg
Manufacturer	Foppapedretti
Compliance	Complies with European standards

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact Foppapedretti customer service directly. Keep your proof of purchase for warranty claims.

Manufacturer: Foppapedretti

Website: www.foppapedretti.it

