

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Everdure](#) /

› [Everdure 49.4 Inch Indoor/Outdoor Pedestal Fan \(Model EP125WUS\) - Instruction Manual](#)

Everdure EP125WUS

Everdure 49.4 Inch Indoor/Outdoor Pedestal Fan (Model EP125WUS)

Instruction Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Please read and save these important safety instructions before using this fan. Failure to follow these instructions may result in electric shock, fire, or personal injury.

- Always plug the fan directly into a 120V AC wall outlet. Never use with an extension cord.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- Always unplug the fan before moving it, cleaning, or when not in use.
- Do not insert fingers or foreign objects into any ventilation or exhaust opening.
- Do not use this fan near water, such as in a wet basement or near a swimming pool.
- This fan is intended for indoor and outdoor use. Ensure it is placed on a stable, flat surface.

2. PACKAGE CONTENTS

Verify that all components are present and in good condition before assembly.

- Fan Body
- Base
- Pedestal Column
- Remote Controls (x2)
- Power Adapter
- Screwdriver
- Flat Washer
- Base Screw
- User Manual
- Quick Start Guide

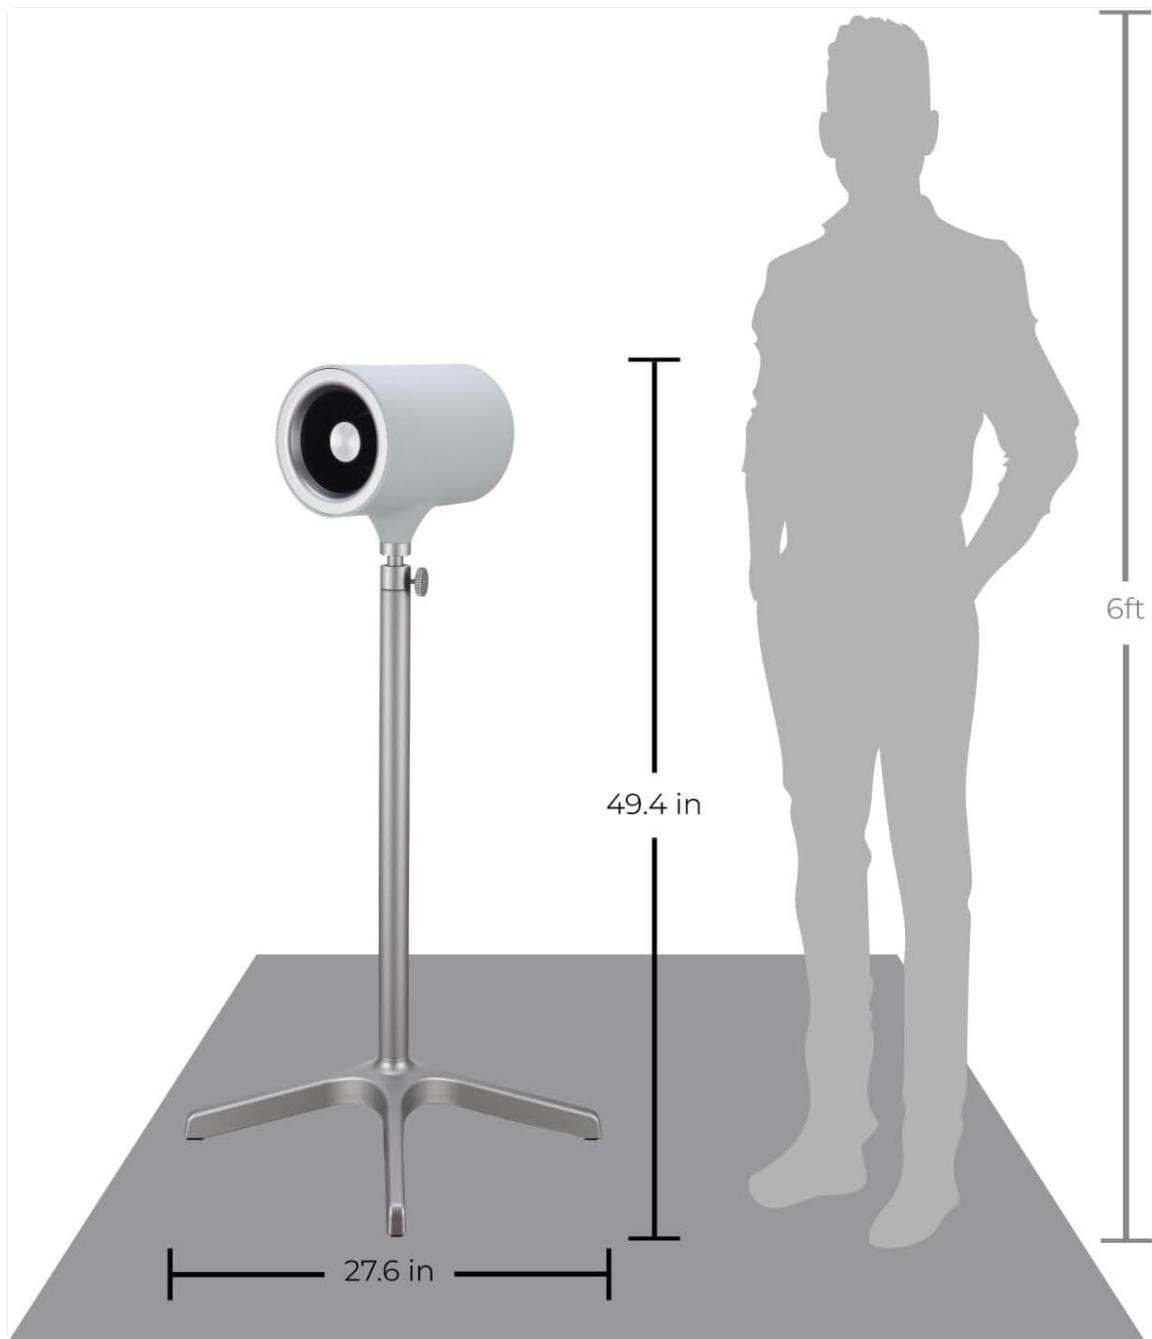


Image 1: All components of the Everdure Pedestal Fan laid out for inspection. Includes the fan head, pedestal, base, two remote controls, power adapter, and assembly tools.

3. SETUP & ASSEMBLY

Follow these steps to assemble your Everdure Pedestal Fan:

- 1. Attach the Pedestal Column to the Base:** Align the pedestal column with the hole in the base. Insert the base screw through the flat washer and into the bottom of the base. Tighten securely using the provided screwdriver.
- 2. Attach the Fan Body to the Pedestal Column:** Carefully place the fan body onto the top of the pedestal column. Rotate clockwise until it is securely tightened.
- 3. Adjust Height:** Rotate the adjustment collar counterclockwise to loosen the pedestal, then raise or lower the fan to your desired height. Rotate clockwise to secure it in place.
- 4. Attach Remote Control Holder:** Secure the remote control holder to the pedestal column, no more than 4 inches below the fan head.

5. **Connect Power:** Plug the power adapter into the port at the back of the pedestal, then plug the adapter into a suitable power outlet.



Image 2: The Everdure Pedestal Fan fully assembled, showing its 49.4-inch height and 27.6-inch base width, with a person for scale.

4. OPERATING INSTRUCTIONS

Your Everdure Pedestal Fan offers versatile control for optimal comfort.

Power On/Off

Press the power button on the fan's control panel or on the remote control to turn the fan on or off.

Speed Settings

The fan features 6 speed settings. Use the '+' and '-' buttons on the control panel or remote to adjust the airflow intensity.


Oscillation Control

- **Horizontal Oscillation:** Press the oscillation button on the control panel or remote to activate 80-degree left-to-right oscillation, distributing air across a wide area.

- **Vertical Tilt:** Manually adjust the fan head up or down by 40 degrees to direct airflow precisely where needed.

Remote Control Usage

Two remote controls are included for convenient operation from a distance. Store the remote in the hidden fan compartment when not in use.

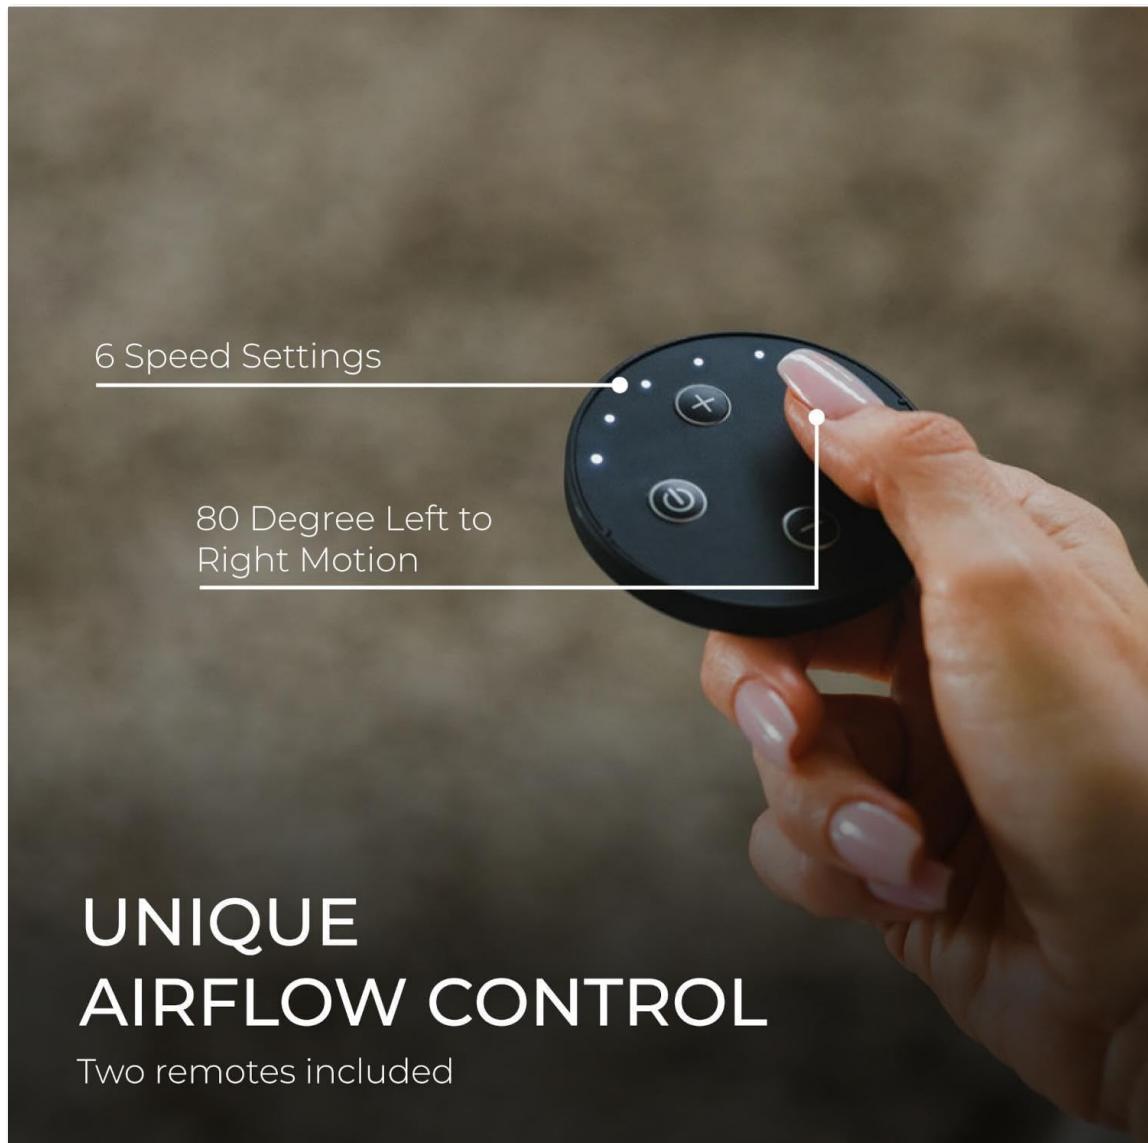

UNIQUE AIRFLOW CONTROL

Two remotes included

Image 3: The remote control for the Everdure Pedestal Fan, highlighting buttons for 6 speed settings and 80-degree oscillation.

Energy Efficiency & Quiet Operation

The fan's 30-watt high-performance motor provides powerful airflow with low energy consumption. At its lowest setting, the fan operates at 61.1 dBA, ensuring quiet performance suitable for bedrooms or offices.

5. MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your fan.

Cleaning the Fan

- Always unplug the fan from the power outlet before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.

- For deeper cleaning, carefully remove the front grille (refer to the user manual for specific instructions on grille removal) and wipe the fan blades with a soft, dry cloth. Ensure all parts are completely dry before reassembling and plugging in the fan.

Remote Control Battery Replacement

If the remote control stops responding, replace its batteries. Refer to the user manual for the correct battery type and replacement procedure.

6. TROUBLESHOOTING

If you encounter issues with your Everdure Pedestal Fan, refer to the following common solutions:

- **Fan not turning on:** Ensure the power adapter is securely plugged into both the fan and a working wall outlet. Check if the outlet is receiving power.
- **No airflow or weak airflow:** Verify that the fan speed is set to a desired level. Ensure there are no obstructions blocking the fan's intake or exhaust.
- **Unusual noise:** Unplug the fan and check for any loose parts or debris inside the grille. Clean the fan as per the maintenance instructions.
- **Remote control not working:** Check and replace the batteries in the remote control. Ensure there are no obstructions between the remote and the fan's sensor.

If problems persist, please contact Everdure customer support.

7. SPECIFICATIONS

Brand	Everdure
Model Name	White Pedestal Fan (EP125WUS)
Product Dimensions	27.6"D x 27.6"W x 49.4"H
Item Weight	9.78 Pounds
Power Source	Corded Electric
Wattage	30 watts
Voltage	240 Volts
Noise Level	61.1 Decibels (on low setting)
Number of Power Levels	6
Control Method	Remote
Indoor/Outdoor Usage	Indoor, Outdoor
Motor Type	Brushless

8. WARRANTY & SUPPORT

For warranty information or technical support, please refer to the contact details provided in your Quick Start Guide

or visit the official Everdure website. Keep your purchase receipt for warranty claims.