

[manuals.plus](#) /› [Cuisinart](#) /› [Cuisinart CPT-740 4-Slice Digital MemorySet Toaster Instruction Manual](#)

## Cuisinart CPT-740

# Cuisinart CPT-740 4-Slice Digital MemorySet Toaster Instruction Manual

Model: CPT-740

## 1. INTRODUCTION

Thank you for purchasing the Cuisinart CPT-740 4-Slice Digital MemorySet Toaster. This appliance is designed to provide customized toasting experiences with its advanced digital controls and MemorySet feature. Please read this manual thoroughly before use to ensure safe and efficient operation.

## 2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, press the CANCEL button, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies,

walls, and the like, when in operation.

- Do not attempt to dislodge food when toaster is plugged into electrical outlet.
- This product is BPA free.

### 3. PRODUCT FEATURES

---

The Cuisinart CPT-740 toaster offers a range of features designed for optimal toasting performance and user convenience:

- **Multiple Toasting Functions:** Includes Toast, Bagel, Defrost, Reheat, and Cancel.
- **MemorySet Feature:** Save and recall your preferred toasting settings with a touch of a button.
- **Digital Shade Control:** A 7-setting shade dial allows for precise browning, from light to dark.
- **Large Digital Display:** Clearly shows selected settings and a countdown timer.
- **1.5-inch Wide Slots:** Accommodates various bread types, including thick slices and bagels.
- **High Lift Lever:** Raises toast higher for easy removal of smaller items.
- **Dual Independent Toasting Controls:** Allows two different sets of toast to be prepared simultaneously with separate settings.
- **Removable Crumb Tray:** Facilitates easy cleaning.
- **Cord Wrap:** Located underneath the unit for tidy storage.



Figure 1: Front view of the Cuisinart CPT-740 Toaster, highlighting its digital display and control buttons.

## 4. SETUP

1. **Unpack:** Carefully remove the toaster and all packaging materials. Retain packaging for future storage or shipping.
2. **Placement:** Place the toaster on a clean, dry, stable, and heat-resistant surface. Ensure there is adequate clearance around the toaster for proper ventilation.
3. **Power Connection:** Plug the power cord into a standard electrical outlet.
4. **First Use:** Before toasting any food, operate the toaster once or twice without bread to burn off any manufacturing residues and eliminate odors. This is normal and safe.

## 5. OPERATING INSTRUCTIONS

The CPT-740 toaster features intuitive controls for a personalized toasting experience.

### 5.1. Basic Toasting

- 1. Insert Bread:** Place up to four slices of bread or other items into the toasting slots. The 1.5-inch wide slots accommodate various thicknesses.
- 2. Select Bread Type:** Use the 'BREAD TYPE' button to cycle through options like White, Bagel, Grain, Sweet, Waffle, English Muffin, or Gluten-Free. The digital display will show your selection.
- 3. Adjust Shade:** Use the '+' and '-' buttons to select your desired shade setting from 1 (lightest) to 7 (darkest). The digital display will show the selected shade.
- 4. Start Toasting:** Push down the carriage lever until it locks into place. The toaster will begin the toasting cycle, and the digital display will show a countdown timer.
- 5. Completion:** Once the cycle is complete, the toast will automatically pop up. Use the high lift lever if needed for smaller items.



Figure 2: The toaster with bread inserted, ready for the toasting cycle.

## 5.2. Special Functions

- Bagel:** Press the 'BAGEL' button after selecting your shade. This function toasts the cut side of the bagel and warms the other side.
- Defrost:** Press the 'DEFROST' button for frozen items. This setting first thaws and then toasts the item.
- Reheat:** Press the 'REHEAT' button to warm previously toasted items without further browning.
- Cancel:** Press the 'CANCEL' button at any time to stop the toasting cycle and eject the toast.

## 5.3. MemorySet Feature

The MemorySet feature allows you to save up to two preferred toasting settings for quick recall.

- 1. To Save a Setting:** Set your desired bread type and shade level. Press and hold the 'MEMORY' button until the display indicates the setting is saved (e.g., 'Memory 1 Saved').
- 2. To Recall a Setting:** Press the 'MEMORY' button briefly to cycle through your saved settings (e.g.,

'Memory 1', 'Memory 2'). The toaster will automatically apply the saved bread type and shade.



Figure 3: The Cuisinart CPT-740 Toaster in a kitchen setting with various toasted items, demonstrating its versatility.

## 6. MAINTENANCE AND CLEANING

---

Proper maintenance ensures the longevity and performance of your toaster.

- **Always Unplug:** Ensure the toaster is unplugged from the electrical outlet and completely cooled before cleaning.
- **Crumb Tray:** Slide out the removable crumb tray from the bottom of the toaster. Discard crumbs and wipe the tray clean with a damp cloth. Reinsert the tray securely.
- **Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. For stubborn stains, use a mild non-abrasive cleaner. Do not use abrasive cleaners or metal scouring pads, as they may scratch the stainless steel finish.
- **Never Immerse:** Never immerse the toaster in water or any other liquid.
- **Storage:** When not in use, store the toaster in a clean, dry place. Use the cord wrap feature to keep the power cord tidy.

## 7. TROUBLESHOOTING

---

If you encounter issues with your Cuisinart CPT-740 toaster, refer to the following common troubleshooting tips:

- **Toaster Not Turning On:** Ensure the power cord is securely plugged into a working electrical outlet. Check your circuit breaker if necessary.
- **Toast Not Ejecting:** If toast remains in the slots after the cycle, unplug the toaster and carefully remove the item using non-metallic tongs. Do not force the carriage lever.

- **Uneven Toasting:** Ensure bread slices are centered in the slots. Adjust the shade setting; lighter settings may result in less even browning. Different bread types may require different shade settings.
- **Smoke from Toaster:** If smoke appears, immediately press the CANCEL button and unplug the toaster. This is usually caused by food lodged in the slots or excessive crumbs in the tray. Clean the crumb tray and inspect slots.

## 8. SPECIFICATIONS

<b>Brand</b>	Cuisinart
<b>Model Number</b>	CPT-740
<b>Color</b>	Silver
<b>Material</b>	Stainless Steel
<b>Product Dimensions</b>	11.44"D x 11.73"W x 7.29"H
<b>Wattage</b>	1800 watts
<b>Number of Slices</b>	4
<b>Shade Settings</b>	7
<b>Voltage</b>	220 Volts
<b>Item Weight</b>	7 Pounds
<b>UPC</b>	086279177483



Figure 4: Dimensions of the Cuisinart CPT-740 Toaster.

## 9. WARRANTY AND SUPPORT

---

This product comes with a **LIMITED 3-YEAR WARRANTY**. For detailed information regarding warranty policies, troubleshooting steps, or any other support inquiries, please refer to the official Cuisinart website or contact Cuisinart customer service. This product is BPA free.