

Bissell 2488

Bissell CleanView Upright Vacuum Cleaner Model 2488 User Manual

Model: 2488 | Brand: Bissell

1. INTRODUCTION AND OVERVIEW

The Bissell CleanView Upright Vacuum Cleaner, Model 2488, is designed for efficient cleaning across various surfaces in your home. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your vacuum cleaner to ensure optimal performance.

Key Features:

- **OnePass Technology:** Delivers powerful suction and an advanced brush design for effective cleaning on the first pass.
- **Scatter-Free Technology:** Reduces debris scatter on hard floors, effectively collecting hard-to-see particles.
- **Multi-Cyclonic System:** Ensures consistent suction power and keeps dirt contained within the bin.
- **Specialized Tools:** Includes a TurboBrush Tool, Dusting Brush, Crevice Tool, and Extension Wand for versatile cleaning.
- **Extended Reach:** Features a 25-foot power cord and a 6-foot hose for extensive cleaning coverage.





Figure 1: Front view of the Bissell CleanView Upright Vacuum Cleaner, Model 2488, in orange and black.

2. SETUP AND ASSEMBLY

Follow these steps to assemble your Bissell CleanView Upright Vacuum Cleaner:

1. **Attach Handle:** Insert the handle into the main body of the vacuum until it clicks securely into place.
2. **Connect Hose:** Connect the flexible hose to the hose inlet port on the back of the vacuum. Ensure a snug fit.
3. **Attach Tools:** Secure the included cleaning tools (TurboBrush Tool, Dusting Brush, Crevice Tool, Extension Wand) onto the onboard storage clips for easy access.
4. **Wrap Power Cord:** Wrap the 25-foot power cord around the cord wraps on the side of the vacuum for organized storage.





Figure 2: Side view of the vacuum cleaner, illustrating the hose connection and onboard tool storage.

3. OPERATING INSTRUCTIONS

Power On/Off:

Plug the power cord into a suitable electrical outlet. Press the power button located on the handle to turn the vacuum on or off.

Adjusting Cleaning Height:

The vacuum features an adjustable height setting to optimize cleaning for different floor types. Rotate the dial on the vacuum's base to select the appropriate setting:

- **Low Carpet:** For low-pile carpets and rugs.
- **High Carpet:** For high-pile carpets and shag rugs.
- **Bare Floor:** For hard floors such as wood, tile, or laminate.



Figure 3: Close-up of the vacuum base, highlighting the adjustable height dial for different floor types.

Using Attachments:

To use the hose and attachments, ensure the vacuum is in the upright position. Detach the hose from its storage clip and connect the desired tool. The onboard tools include:

- **TurboBrush Tool:** Ideal for pet hair on upholstery, stairs, and small carpeted areas.
- **Dusting Brush:** For delicate surfaces, blinds, and vents.
- **Crevice Tool:** For tight spaces, corners, and edges.
- **Extension Wand:** Provides extended reach for high areas or under furniture.



Figure 4: The set of specialized cleaning tools included with the vacuum cleaner.

4. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your vacuum cleaner.

Emptying the Dirt Bin:

The Bissell CleanView features a bagless design with an easy-to-empty dirt bin. Press the tank release button, lift the dirt bin away from the vacuum, and empty its contents into a trash receptacle. Reattach the bin securely until it clicks.

Cleaning Filters:

The vacuum is equipped with a HEPA filter system. Refer to the filter compartment for instructions on how to remove and clean the filters. Filters should be cleaned regularly according to usage to maintain suction power and air quality.

5. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, consult the following common solutions:

- **No Power:** Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
- **Loss of Suction:** Empty the dirt bin if full. Check for clogs in the hose, nozzle, or filters. Clean or replace filters as needed.
- **Brush Roll Not Spinning:** Ensure the vacuum is reclined for operation. Check for obstructions in the brush roll.

- **Unusual Noise:** Turn off and unplug the vacuum. Inspect for any foreign objects caught in the brush roll or hose.

For persistent issues, contact Bissell customer support.

6. SPECIFICATIONS

Brand	Bissell
Model Number	2488
Form Factor	Upright
Special Feature	Bagless
Filter Type	HEPA Filter
Is Cordless?	No
Capacity	1 Liters
Hose Length	6 Feet
Product Dimensions	15.5"L x 11.3"W x 32.4"H
Noise Level	80 Decibels
Amperage	2.5 Amps
Material	Plastic

7. WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. For detailed warranty information, please refer to the documentation included with your product or visit the official Bissell website. For customer support, product registration, or to purchase replacement parts, please visit www.bissell.com or contact their customer service line.