

- Manuals.plus /
- › Mobile Spec /
 - › MobileSpec MBS11302 Fashion Bluetooth Earbuds User Manual

Mobile Spec MBS11302

MobileSpec MBS11302 Fashion Bluetooth Earbuds

Model: MBS11302 | Brand: Mobile Spec

INTRODUCTION

Thank you for choosing the MobileSpec MBS11302 Fashion Bluetooth Earbuds. These earbuds are designed for seamless audio experience, allowing you to effortlessly switch between listening to music and engaging in hands-free conversations. Featuring Bluetooth wireless technology and fast charge compatibility, they offer convenience and performance for your daily audio needs.



Image: MobileSpec MBS11302 Fashion Bluetooth Earbuds. The image displays the white earbuds, connected by a cable that includes an inline control module with three buttons.

WHAT'S IN THE BOX

- MobileSpec MBS11302 Fashion Bluetooth Earbuds
- User Manual

SETUP

Charging the Earbuds

Before first use, fully charge your earbuds. The MobileSpec MBS11302 earbuds are fast charge compatible. Connect the charging cable to the charging port on the inline control module and plug the other end into a

compatible USB power source. The indicator light will show charging status and turn off or change color when fully charged.

Bluetooth Pairing

1. Ensure the earbuds are charged and powered off.
2. Press and hold the multi-function button (usually the center button on the inline control) until the indicator light flashes rapidly, indicating pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "MBS11302" or "MobileSpec Earbuds" from the list of found devices.
5. Once connected, the indicator light on the earbuds will typically stop flashing and remain solid, or turn off. A voice prompt may also confirm the connection.
6. If prompted for a password, enter "0000" (four zeros).

The earbuds will automatically attempt to reconnect to the last paired device when powered on, if the device's Bluetooth is active and within range.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Press and hold the multi-function button until the indicator light turns on and/or you hear a power-on prompt.
- **Power Off:** Press and hold the multi-function button until the indicator light turns off and/or you hear a power-off prompt.

Music Playback

- **Play/Pause:** Press the multi-function button once.
- **Next Track:** Press and hold the Volume Up (+) button.
- **Previous Track:** Press and hold the Volume Down (-) button.
- **Volume Up:** Short press the Volume Up (+) button.
- **Volume Down:** Short press the Volume Down (-) button.

Phone Calls

- **Answer Call:** Press the multi-function button once when a call comes in.
- **End Call:** Press the multi-function button once during a call.
- **Reject Call:** Press and hold the multi-function button for approximately 2 seconds when a call comes in.
- **Redial Last Number:** Double-press the multi-function button.

MAINTENANCE

Cleaning

To maintain optimal performance and hygiene, regularly clean your earbuds. Use a soft, dry, lint-free cloth to wipe the surfaces. For ear tips, gently remove them and clean with a slightly damp cloth, ensuring they are completely dry before reattaching. Do not use harsh chemicals or abrasive materials.

Storage

When not in use, store the earbuds in a clean, dry place away from extreme temperatures and direct sunlight. Avoid

tangling the cable to prevent damage.

Water Resistance

These earbuds are *not water resistant*. Avoid exposure to water, sweat, rain, or excessive moisture to prevent damage to the internal components.

TROUBLESHOOTING

Problem	Possible Solution
Earbuds do not power on.	Ensure the earbuds are fully charged. Connect to a power source and allow time to charge.
Cannot pair with device.	Ensure earbuds are in pairing mode (flashing indicator light). Make sure Bluetooth is enabled on your device. Move earbuds closer to your device. Forget/remove "MBS11302" from your device's Bluetooth list and try pairing again. Restart both the earbuds and your device.
No sound or low volume.	Check the volume level on both the earbuds and your connected device. Ensure the earbuds are properly paired and connected. Try playing different audio sources.
Call quality is poor.	Ensure the microphone is not obstructed. Move closer to your connected device. Check for environmental interference.

SPECIFICATIONS

Model Name	MobileSpec
Connectivity Technology	Wireless
Wireless Communication Technology	Bluetooth
Material	Plastic
Compatible Devices	Bluetooth-enabled devices (such as smartphones, tablets, and smart speakers) from various brands
Control Type	Media Control
Cable Feature	Without Cable
Item Weight	0.05 Kilograms (1.83 ounces)
Water Resistance Level	Not Water Resistant
Bluetooth Range	10 Meters (approx. 33 feet)
Earpiece Shape	Rounded Tip
Color	White

Ear Placement	In Ear
Form Factor	In Ear
Product Dimensions	1.3 x 4.8 x 5.6 inches

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Mobile Spec website. Typical warranty periods and support options vary by region and retailer.

If you encounter issues not covered in this manual, please contact Mobile Spec customer service for assistance.

© 2024 Mobile Spec. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

