

[Manuals.plus](#) /

› [AYRELY](#) /

› AYRELY® Super Loud Alarm Clock for Heavy Sleepers Adults,Twin Bell Retro 4 Inch Silent Non-Ticking Quartz with Backlight, Luminous dial, Alarm Clocks for Bedrooms Bedside (Silver) - Instruction Manual

AYRELY AYCL-BELL

AYRELY® Super Loud Twin Bell Retro Alarm Clock Instruction Manual

Model: AYCL-BELL | Brand: AYRELY

PRODUCT OVERVIEW

The AYRELY Super Loud Twin Bell Retro Alarm Clock is designed to provide a reliable and effective wake-up solution, especially for heavy sleepers. It features a classic twin-bell design, a silent non-ticking quartz movement, and a luminous dial with an on-demand backlight for easy nighttime viewing. Its powerful ringing mechanism ensures you start your day on time.



Front view of the AYRELY Super Loud Twin Bell Retro Alarm Clock in silver finish, showcasing its classic design and luminous dial.

SETUP

1. Battery Installation

The alarm clock is powered by one (1) AA battery (not included). To install the battery:

1. Locate the battery compartment cover on the back of the clock.
2. Slide the cover downwards to open the compartment.
3. Insert one (1) AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.

4. Replace the battery compartment cover by sliding it upwards until it clicks into place.



Rear view of the alarm clock, highlighting the battery compartment and control knobs for time and alarm settings.

2. Initial Time Setting

After installing the battery, set the current time:

1. Locate the "Time Knob" on the back of the clock (usually the larger knob).
2. Rotate the Time Knob in either direction until the hour and minute hands display the correct current time.

OPERATING INSTRUCTIONS

1. Setting the Alarm Time

To set your desired wake-up time:

1. Locate the "Alarm Knob" on the back of the clock (usually the smaller knob).
2. Rotate the Alarm Knob to move the small alarm hand to your desired alarm time. Note that the alarm hand moves independently of the main time hands.
3. Ensure the "Alarm Switch" (ON/OFF toggle) on the back of the clock is in the "ON" position to activate the alarm.

2. Alarm Function

The clock features a super loud twin-bell alarm. When the main hour hand reaches the set alarm time, the metal hammer will strike the bells, producing a clear and powerful sound. There is no snooze function, ensuring you wake up promptly.

Loud Wake Up Alarm Clock

The traditional ringing alarm clock is loud enough to make you a punctual person



The loud twin-bell alarm is designed to effectively wake up heavy sleepers.

3. Backlight and Luminous Dial

The clock face and hands are designed with luminous materials that absorb light during the day and glow in the dark for easy viewing at night. For instant illumination:

- Press and hold the "Light Button" located on the back of the clock to activate a soft yellow backlight. Release the button to turn off the light.




Real silent movement
Give you a completely quiet sleep environment

The luminous dial glows in low light conditions after absorbing ambient light.

Nightlight Function


Press and hold the backside light button to turn on the soft yellow light for night time viewing

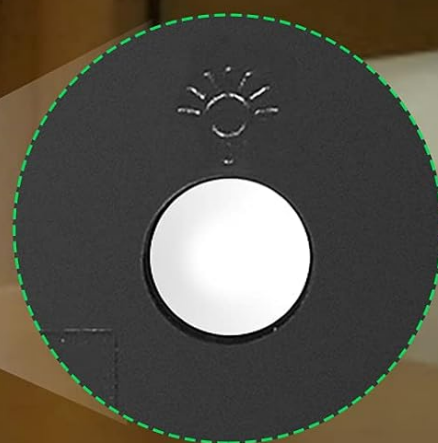

Pressing the button on the back activates a soft backlight for clear viewing in the dark.

4. Silent Non-Ticking Movement

The clock features a sweep second hand that moves continuously without any ticking noise, ensuring a quiet environment for sleeping or working.

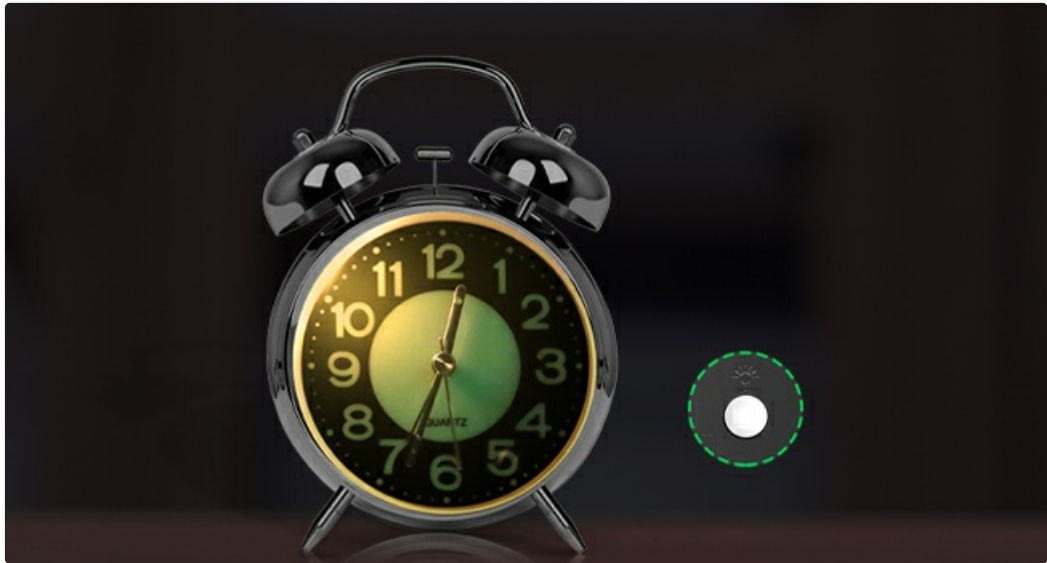

The silent, non-ticking movement ensures a peaceful environment.

MAINTENANCE

1. Cleaning

To clean the clock, wipe it gently with a soft, dry cloth. Do not use abrasive cleaners or immerse the clock in water.

2. Battery Replacement

When the clock hands slow down or the alarm sound weakens, it's time to replace the battery. Follow the battery installation steps in the "Setup" section.

TROUBLESHOOTING

- **Alarm not sounding:**
 - Ensure the Alarm Switch on the back of the clock is in the "ON" position.
 - Check if the battery is correctly installed and has sufficient power. Replace if necessary.
 - Verify that the alarm hand is set to the desired time.
- **Time is inaccurate:**
 - Replace the battery with a fresh one.
 - Ensure the Time Knob is not accidentally moved.
- **Luminous dial not glowing:**
 - The luminous material needs to absorb light to glow. Expose the clock to bright indoor light or sunlight for at least 40 minutes for optimal glow.
- **Alarm is too loud:**
 - This clock is specifically designed to be super loud for heavy sleepers. There is no volume adjustment. Consider placing the clock further away from your bed if the sound is too intense.

SPECIFICATIONS

Brand	AYRELY
Model Number	AYCL-BELL
Color	Silver
Display Type	Analog
Style	Classic
Special Features	Silent Clock, Loud Alarm, Alarm, Night Mode, Luminous Dial
Product Dimensions	4.5"W x 6.2"H
Power Source	Battery Powered (1 x AA battery)
Material	Metal
Item Weight	6.7 ounces
Watch Movement	Quartz



Product dimensions: 4.5 inches wide by 6.2 inches high.

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

This video demonstrates the features of the AYRELY 4-inch Battery Operated Twin Bell Loud Alarm Clock, including its design, silent movement, and powerful alarm sound.

WARRANTY AND SUPPORT

AYRELY is committed to providing high-quality home décor products. For any questions, concerns, or support regarding your alarm clock, please contact AYRELY customer service through the retailer's platform or visit the official AYRELY brand store for more information. Please refer to your purchase documentation for specific warranty details.

You can visit the AYRELY Store for more products and information: [AYRELY Store](#)

© 2025 AYRELY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question