

[Manuals.plus](#) /

› [BRUNO](#) /

› BRUNO BOE080-BE Electric Coffee Maker with Mill User Manual

BRUNO BOE080-BE

BRUNO BOE080-BE Electric Coffee Maker with Mill User Manual

Model: BOE080-BE

INTRODUCTION

Thank you for purchasing the BRUNO BOE080-BE Electric Coffee Maker with Mill. This appliance is designed to provide freshly ground and brewed coffee for individual or household use. Please read this manual thoroughly before operating the device to ensure safe and efficient use. Keep this manual for future reference.

■ベージュ



■カーキ



■ブルーグレー



Image: The BRUNO BOE080-BE Electric Coffee Maker with Mill in beige, showing its compact, cylindrical design.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before use.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The appliance is not dishwasher safe. Refer to the cleaning instructions.

- Use only the AC adapter provided with the unit.
- Do not use outdoors.

COMPONENTS

Familiarize yourself with the parts of your BRUNO Electric Coffee Maker with Mill:

1. **Lid:** Covers the bean hopper.
2. **Bean Hopper:** Holds whole coffee beans for grinding.
3. **Grinding Mechanism:** Internal burr grinder.
4. **Control Panel:** Power button and indicator lights.
5. **Grind Adjustment Dial:** Adjusts coffee grind size.
6. **Filter Basket:** Holds the reusable filter.
7. **Reusable Filter:** For brewing coffee.
8. **Water Tank:** Integrated for brewing.
9. **Carafe/Mug:** Collects brewed coffee.
10. **AC Adapter Port:** For power connection.



Image: The BRUNO coffee maker disassembled, showing the main unit, filter assembly, and the separate carafe/mug.

SETUP AND FIRST USE

Before using your coffee maker for the first time, follow these steps:

1. **Unpack:** Carefully remove all packaging materials and inspect the appliance for any damage.
2. **Clean:** Wash the reusable filter, carafe, and lid with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the main unit with a damp cloth.
3. **Assemble:** Place the reusable filter into the filter basket. Ensure the carafe is securely attached to the bottom of the main unit.
4. **Rinse Cycle:** For the first use, perform a rinse cycle without coffee. Fill the water tank to the maximum level, close the lid, and run a brewing cycle. Discard the hot water. This cleans the internal components.
5. **Power Connection:** Connect the AC adapter to the appliance and then plug it into a suitable power outlet.

OPERATING INSTRUCTIONS

Follow these steps to brew coffee using your BRUNO Electric Coffee Maker with Mill:

1. Add Coffee Beans

- Open the lid of the bean hopper.
- Add whole coffee beans to the hopper. Do not overfill. The capacity is suitable for a single serving (approximately 10-15g of beans).
- Close the lid securely.



Image: A hand adding whole coffee beans into the top bean hopper of the coffee maker.

2. Adjust Grind Size

- Locate the grind adjustment dial on the body of the appliance.
- Rotate the dial to select your desired grind size. Finer grinds are suitable for espresso-like coffee, while coarser grinds are better for drip coffee. Refer to the markings on the dial for guidance.



Image: A close-up view of the coffee maker's body, highlighting the grind adjustment dial with various grind size indicators.

3. Add Water

- Remove the lid and carefully pour fresh, cold water into the water tank.
- Do not exceed the maximum fill line (200 ml capacity).
- Replace the lid securely.

4. Start Brewing

- Ensure the carafe is properly seated.
- Press the power button on the control panel to start the grinding and brewing process. The indicator lights will illuminate.
- The appliance will first grind the beans, then automatically proceed to brew the coffee.
- Once brewing is complete, the appliance will automatically shut off.



Image: A hand pressing the main power button located on the control panel of the coffee maker.

5. Serve

- Carefully remove the carafe and enjoy your freshly brewed coffee.
- Be cautious as the coffee and carafe will be hot.

CARE AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

- **Always unplug the appliance before cleaning.**
- **Carafe and Filter:** After each use, remove the carafe and reusable filter. Wash them with warm, soapy water and rinse thoroughly. Allow them to air dry completely before reassembling.
- **Grinding Mechanism:** Use a small brush (not included) to remove any residual coffee grounds from the grinding mechanism. Do not rinse the grinding mechanism with water.

- **Exterior:** Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Water Tank:** The water tank is integrated. To clean, wipe the interior with a damp cloth. For descaling, refer to the descaling section below.
- **Storage:** When not in use for an extended period, ensure the appliance is clean and dry. Store it in a cool, dry place.

Descaling

Over time, mineral deposits (limescale) can build up in the water tank and internal components, affecting performance. Descale your coffee maker every 2-3 months, or more frequently if you have hard water.

1. Prepare a descaling solution according to the manufacturer's instructions (e.g., white vinegar diluted with water, or a commercial descaling agent).
2. Pour the descaling solution into the water tank.
3. Place an empty carafe under the dispenser.
4. Run a brewing cycle without coffee.
5. After the cycle, discard the solution.
6. Run 2-3 cycles with fresh, clean water to rinse out any remaining descaling solution.



Image: A detailed view of the fine mesh of the reusable coffee filter, which requires regular cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; AC adapter damaged.	Ensure the AC adapter is securely plugged into both the appliance and a working power outlet. Try a different outlet. Contact customer support if the adapter is damaged.
Coffee is not brewing.	No water in tank; filter clogged; appliance needs descaling.	Fill water tank. Clean the reusable filter. Perform a descaling cycle.
Coffee tastes weak or watery.	Insufficient coffee beans; grind size too coarse; too much water.	Add more coffee beans. Adjust grind to a finer setting. Ensure water level matches desired coffee strength.

Problem	Possible Cause	Solution
Grinder is not working.	Beans jammed; grinding mechanism clogged.	Unplug the appliance. Carefully remove any jammed beans. Clean the grinding mechanism with a brush.
Coffee overflows from filter.	Filter clogged; too many coffee grounds; grind too fine.	Clean the filter thoroughly. Reduce the amount of coffee grounds. Adjust grind to a coarser setting.

SPECIFICATIONS

Feature	Detail
Brand	BRUNO
Model Number	BOE080-BE
Capacity	200 Milliliters
Color	Beige
Special Feature	Built-in Mill
Coffee Maker Type	Drip Coffee Machine
Operation Mode	Fully Automatic
Wattage	800 watts
Voltage	5 Volts
Power Source	AC adapter
Filter Type	Reusable
Material	Plastic
Dishwasher Safe	No
Included Components	Carafe, Filter
Item Weight	600 Grams

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official BRUNO website. Keep your proof of purchase for warranty claims.



