

">

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Indesit](#) /
- › [Indesit ING 72T/WH 5-Burner Gas Hob User Manual](#)

Indesit ING 72T/WH

Indesit ING 72T/WH 5-Burner Gas Hob User Manual

Model: ING 72T/WH (8050147590331)

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Indesit ING 72T/WH 5-burner gas hob. Please read these instructions carefully before installation, operation, or maintenance to ensure optimal performance and safety.



Image: The Indesit ING 72T/WH gas hob, featuring a sleek white glass surface, five gas burners with black cast iron pan supports, and front-mounted control knobs.

SAFETY INFORMATION

Always prioritize safety when installing, operating, or maintaining your gas hob. Failure to follow these instructions could result in fire, electric shock, serious injury, or death.

- **Gas Safety:** Ensure proper ventilation. Do not store flammable materials near the appliance. In case of a gas leak, turn off the gas supply, open windows, and do not operate electrical switches.
- **Electrical Safety:** The appliance must be properly grounded. Do not use extension cords. Disconnect power before servicing.
- **Burn Hazard:** Surfaces become hot during use. Use oven mitts. Keep children away from the hob during and after operation.
- **General Precautions:** Do not leave cooking unattended. Use appropriate cookware. Do not use the hob as a

storage surface.

SETUP AND INSTALLATION

Installation should only be performed by a qualified technician in accordance with local regulations and standards.

1. **Unpacking:** Carefully remove all packaging materials. Inspect the hob for any damage.
2. **Placement:** Ensure adequate clearance from walls and cabinets as specified in the installation guide (not provided here, refer to product packaging). The hob requires a stable, heat-resistant countertop.
3. **Gas Connection:** Connect the hob to the gas supply using approved flexible or rigid piping. Check for leaks using a soapy water solution.
4. **Electrical Connection:** Connect the hob to a grounded electrical outlet for the electronic ignition system. Ensure the voltage and frequency match the appliance's requirements.
5. **Ventilation:** Ensure proper ventilation is in place, such as an extractor hood, to remove combustion products.

OPERATING INSTRUCTIONS

Your Indesit gas hob is designed for efficient cooking. Follow these steps for safe operation.

Igniting a Burner

1. Ensure all burner components (burner cap, flame spreader) are correctly placed.
2. Push down and turn the corresponding control knob counter-clockwise to the maximum flame position (large flame symbol).
3. Hold the knob down for a few seconds to allow the thermocouple to heat up, which activates the flame failure device.
4. Once the flame is stable, release the knob. If the flame extinguishes, repeat the process.

Adjusting Flame Size

Rotate the control knob between the maximum flame (large flame symbol) and minimum flame (small flame symbol) positions to adjust the heat intensity. For simmering, use the minimum flame setting.

Turning Off a Burner

Turn the control knob clockwise to the "OFF" position (dot symbol). Ensure the flame is completely extinguished.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your hob and ensure its safe operation.

- **Daily Cleaning:** After each use, allow the hob to cool. Wipe the glass surface with a soft cloth and mild detergent. Avoid abrasive cleaners or scouring pads.
- **Burner Components:** Periodically remove burner caps and flame spreaders. Wash them with warm soapy water, rinse, and dry thoroughly before reassembling. Ensure burner ports are not clogged.
- **Cast Iron Grates:** The cast iron pan supports can be cleaned with warm soapy water. For stubborn stains, a non-abrasive cleaner suitable for cast iron can be used. Ensure they are completely dry before placing them back on the hob.
- **Control Knobs:** Remove and clean the control knobs with a damp cloth. Do not immerse them in water.
- **Ignition Spark Plugs:** Keep the spark plugs clean and dry to ensure reliable ignition.

TROUBLESHOOTING

Before contacting customer service, try these common troubleshooting steps.

Problem	Possible Cause	Solution
Burner does not ignite.	No gas supply, power outage, clogged burner port, wet spark plug.	Check gas valve. Check power supply. Clean burner components. Dry spark plug.
Flame is uneven or yellow.	Clogged burner ports, incorrect gas pressure.	Clean burner ports. Contact a qualified technician to check gas pressure.
Flame extinguishes after releasing knob.	Thermocouple not heated sufficiently, faulty thermocouple.	Hold knob down longer. If problem persists, contact service.

SPECIFICATIONS

Feature	Detail
Brand	Indesit
Model Number	8050147590331 (ING 72T/WH)
Color	White
Product Dimensions (D x W x H)	50 x 75 x 10 cm
Material	Glass, Cast Iron
Number of Heating Elements	5 Gas Burners
Fuel Type	Gas
Item Weight	16.6 Kilograms
Special Feature	Black Cast Iron Grates

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Indesit website. Keep your proof of purchase for warranty claims.

If you encounter issues that cannot be resolved using the troubleshooting guide, please contact a qualified service technician or Indesit customer support.



