

[Manuals.plus](#) /

› [BELLA](#) /

› BELLA Pro 6.3qt Touchscreen Air Fryer User Manual

BELLA 90110

BELLA Pro 6.3qt Touchscreen Air Fryer User Manual

Model: 90110

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury. Keep this manual for future reference.

- Always place the air fryer on a stable, heat-resistant surface, away from walls and other appliances.
- Do not immerse the cord, plug, or main unit in water or other liquids.
- Do not block the air intake or air outlet vents.
- The appliance surfaces become hot during use. Use oven mitts when handling hot components.
- Unplug the air fryer from the outlet when not in use and before cleaning.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

PRODUCT OVERVIEW

The BELLA Pro 6.3qt Touchscreen Air Fryer utilizes High Performance Circular Heat Technology and a powerful 1700-watt heating system to deliver fast, crispy, and evenly cooked food. Its large 6.3-quart capacity is suitable for various meals, from fried chicken to homemade pizzas. The unit features a digital touchscreen control panel for easy operation.



Figure 1: Front view of the BELLA Pro 6.3qt Touchscreen Air Fryer, highlighting the digital display and control panel.



Figure 2: Angled view of the BELLA Pro 6.3qt Touchscreen Air Fryer, showcasing its stainless steel exterior and ergonomic handle.

Key Features:

- **Capacity:** 6.3 Quarts (5.3 lbs food capacity)
- **Power:** 1700 Watts
- **Control:** Digital Touchscreen with pre-set functions
- **Temperature Range:** 90°F to 400°F

- **Timer:** Integrated 60-minute auto shutoff timer with audible tone
- **Technology:** High Performance Circular Heat Technology for even cooking
- **Material:** Stainless Steel exterior
- **Cleaning:** Dishwasher safe, PFOA free nonstick pan and crisping tray

SETUP

1. **Unpacking:** Carefully remove all packaging materials, stickers, and labels from the air fryer.
2. **Initial Cleaning:** Before first use, wash the removable pan and crisping tray in warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the air fryer on a flat, stable, heat-resistant surface. Ensure there is at least 6 inches of clear space around the back and sides of the unit to allow for proper air circulation.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Using the Touchscreen Control Panel:

The digital touchscreen allows for precise control over cooking settings. The display shows temperature and time. Pre-set functions are available for common dishes.

- **Power Button:** Press to turn the unit on/off.
- **Temperature Control:** Use the temperature buttons (usually + and -) to adjust the cooking temperature from 90°F to 400°F.
- **Time Control:** Use the time buttons (usually + and -) to set the cooking duration up to 60 minutes.
- **Menu/Preset Functions:** Select from various pre-programmed cooking modes (e.g., Air Fry, Roast, Broil, Bake, Reheat, Keep Warm, Pizza, Dehydrate).

Cooking Process:

1. **Prepare Food:** Place your food in the crisping tray, then insert the tray into the pan. Slide the pan into the air fryer. Do not overfill.
2. **Power On:** Press the Power button to turn on the air fryer.
3. **Set Temperature and Time:** Use the temperature and time controls, or select a pre-set function. The air fryer preheats up to 50% faster than a conventional oven.
4. **Start Cooking:** Press the Start button (if applicable, or it may start automatically after setting).
5. **Shake/Flip (Optional):** For even cooking, some foods may require shaking or flipping halfway through the cooking cycle. The air fryer may beep to remind you.
6. **Completion:** The air fryer will automatically shut off after the set time and emit an audible tone. Carefully remove the pan using the handle.
7. **Serve:** Transfer cooked food to a serving dish.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your air fryer.

- **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.

- **Dishwasher Safe Parts:** The nonstick pan and crisping tray are dishwasher safe. For best results and to prolong the nonstick coating, hand washing with warm, soapy water is recommended.
- **Exterior Cleaning:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the stainless steel finish.
- **Interior Cleaning:** Wipe the interior of the appliance with a damp cloth. If necessary, use a mild detergent.
- **Heating Element:** Gently clean the heating element with a soft brush to remove any food residue.
- **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the common problems and solutions below:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; unit not properly assembled.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker. Ensure the pan is fully inserted into the unit.
Food is not cooked evenly.	Basket is overloaded; temperature too low; food not shaken/flipped.	Cook food in smaller batches. Increase cooking temperature. Shake or flip food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; high fat content food.	Clean the pan and crisping tray thoroughly after each use. For fatty foods, drain excess oil from the pan during cooking.
Food is not crispy.	Not enough oil; temperature too low; cooking time too short.	Lightly coat food with oil. Increase temperature or cooking time. Ensure food is dry before air frying.

SPECIFICATIONS

Model Number	90110
Capacity	6.3 Quarts
Wattage	1700 Watts
Material	Stainless Steel (Outer Material)
Control Method	Touch Control
Special Feature	Temperature Control
Nonstick Coating	Yes (PFOA free)
Dishwasher Safe Parts	Yes (Pan and Crisping Tray)
Product Dimensions	8.07 x 5.31 x 2.76 inches
Item Weight	13.42 pounds (6.1 Kilograms)
UPC	829486901102
Air Frying Technology	Circular Heat Technology

WARRANTY AND SUPPORT

For warranty information or technical support, please contact BELLA customer service. Keep your proof of purchase for any warranty claims.

You can find contact information and frequently asked questions on the official BELLA website: [Visit the BELLA Store on Amazon](#)

© 2023 BELLA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question