

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ciciglow](#) /

› [Ciciglow Vintage Corded Desk Telephone User Manual](#)

**ciciglow B08MDXFF4H**

# Ciciglow Vintage Corded Desk Telephone User Manual

Model: B08MDXFF4H

## 1. PRODUCT OVERVIEW

---

This manual provides instructions for the Ciciglow Vintage Corded Desk Telephone. This antique-style telephone features a rotary-style dial pad with modern push-buttons, designed for use with standard US and UK telephone wiring.



Image 1.1: Front view of the Ciciglow Vintage Corded Desk Telephone, showcasing its antique bronze finish and rotary-style push-button dial pad.

## 2. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x User Manual
- 1 x Telephone Base
- 1 x Telephone Receiver
- 1 x Telephone Wiring (for US connection)
- 1 x Telephone British Wiring (random color)
- 1 x Telephone Receiver Cable

## 3. SETUP AND INSTALLATION

1. **Connect the Handset:** The telephone receiver should be connected to the telephone base using the coiled receiver

cable. Insert one end of the crimped cable into the receiver and the other end into the socket on the base marked for the receiver.



Image 3.1: The telephone handset connected to the base unit via the coiled cord.

2. **Connect to Telephone Line:** Connect the telephone line cord (power supply cable) to the socket on the base marked with "TE cable". Plug the other end of this cable into your wall telephone supply socket.
3. **Verify Connection:** After plugging the phone into the wall socket, lift the handset and listen for a dial tone. If a clear dial tone is heard, the telephone is properly connected and ready for use.

## 4. OPERATING INSTRUCTIONS

This telephone features a push-button dial pad designed to resemble a classic rotary dial. To make a call:

- Lift the handset from the cradle.
- Listen for a dial tone.
- Press the desired number keys (0-9, \*, #) to dial the telephone number.
- To redial the last number, press the **REDIAL** button located in the center of the dial pad.
- To end a call, place the handset back onto the cradle.



Image 4.1: Detail of the push-button dial pad, including the 'REDIAL' button.

## 5. MAINTENANCE

Proper care will ensure the longevity of your vintage telephone:

- **Environmental Conditions:** Avoid exposing the telephone to extreme temperatures, humidity, or direct sunlight.
- **Cleaning:** Before cleaning, unplug the telephone from the wall socket. Clean the telephone using only a damp cloth. Do not use abrasive cleaners, solvents, or immerse the phone in water.

## 6. TROUBLESHOOTING

If you encounter issues with your telephone, consider the following:

- **No Dial Tone:** Ensure all cables are securely connected to both the telephone base and the wall socket. Test the wall socket with another working phone if available.
- **Poor Call Quality:** Check the receiver cable connection. Ensure the telephone line cord is not damaged.
- **Buttons Not Responding:** Verify the phone is properly connected and receiving power from the telephone line.

## 7. SPECIFICATIONS

Item Type	Vintage Telephone
Brand	Ciciglow
Model	B08MDXFF4H
Material	ABS Plastic
Main Body Color	Antique Bronze

<b>Number Storage Function</b>	Yes
<b>Caller Identification</b>	No
<b>Visual Function</b>	No
<b>Telephone Type</b>	Corded
<b>Dialer Type</b>	Rotary (Push-button style)
<b>Power Source</b>	Corded Electric
<b>Weight</b>	Approx. 712g (1.52 pounds)
<b>Product Dimensions (L x W x H)</b>	0.39 x 0.39 x 0.39 inches <i>(Note: These dimensions appear to be placeholder values and may not reflect the actual product size.)</i>

## 8. WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your purchase receipt for warranty claims.

Manufacturer: CiCiglow