

[Manuals.plus](#) /

> [VINABTY](#) /

> VINABTY RMT-D197A Replacement Remote Control for Sony CD DVD Players

VINABTY RMT-D197A

VINABTY RMT-D197A Replacement Remote Control User Manual

For Sony CD and DVD Players

INTRODUCTION

Thank you for choosing the VINABTY RMT-D197A Replacement Remote Control. This remote is designed to provide seamless control for your compatible Sony CD and DVD players. This manual will guide you through the setup, operation, and maintenance of your new remote control.

SETUP

Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: Back view of the remote control with the battery compartment open, illustrating where to insert the two AAA batteries.

Note: Always replace both batteries at the same time. Do not mix old and new batteries or different types of batteries. Remove batteries if the remote will not be used for an extended period.

OPERATING INSTRUCTIONS

Point the remote control directly at your Sony CD or DVD player. Ensure there are no obstructions between the remote and the device.





Image: Front view of the VINABTY RMT-D197A remote control, displaying the layout of all buttons.

Basic Functions

- **I/O (Power):** Turns the device on or off.
- **OPEN/CLOSE:** Opens or closes the disc tray.
- **VOL +/-:** Adjusts the volume level.
- **PLAY:** Starts playback of a disc or track.
- **PAUSE:** Pauses playback. Press again to resume.
- **STOP:** Stops playback.
- **PREV / NEXT:** Skips to the previous or next track/chapter.
- **FAST/SLOW PLAY:** Controls fast forward or slow motion playback.
- **REPLAY / ADVANCE:** Repeats a section or advances through a section.

Navigation and Menu Functions

- **Arrow Buttons (Up, Down, Left, Right) & Enter:** Navigate through menus and confirm selections.
- **MENU:** Accesses the main menu of the DVD/CD player.
- **RETURN:** Returns to the previous screen or menu.
- **DISPLAY:** Shows on-screen information about the current playback.

Additional Functions

- **Number Buttons (0-9):** Directly select tracks, chapters, or input numerical values.
- **CLEAR:** Clears numerical input or selections.
- **TV INPUT:** Switches the input source on a connected TV (if supported by the player).
- **PICTURE NAVI:** Accesses picture navigation features.
- **AUDIO:** Changes audio tracks or language during playback.
- **SUBTITLE:** Toggles or selects subtitle options.
- **TIME/TEXT:** Displays time information or text data.

COMPATIBLE MODELS

This VINABTY RMT-D197A replacement remote control is compatible with the following Sony CD and DVD player models:

- DVP-SR510
- DVP-SR510H
- DVP-SR90
- DVPSR201P
- DVPSR210P
- DVPSR405P
- DVP-SR500WM

And other models that originally used the RMT-D197A remote control.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface and internal components.

Battery Replacement

If the remote control becomes unresponsive or its range decreases, it may be time to replace the batteries. Refer to the "Battery Installation" section for instructions.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote is not working:**
 - Ensure batteries are installed correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Check if there are any obstructions between the remote and the device's infrared sensor.
 - Ensure the remote is pointed directly at the device.
- **Buttons are unresponsive:**
 - Clean the remote control surface, especially around the buttons, to remove any dirt or debris.
 - Try replacing the batteries.
- **Short operating range:**
 - Replace the batteries.
 - Ensure there are no strong light sources (like direct sunlight or fluorescent lights) interfering with the infrared signal.

SPECIFICATIONS

Model Number	RMT-D197A
--------------	-----------

Brand	VINABTY
Power Source	2 x AAA Batteries (not included)
Connectivity Technology	Infrared
Number of Buttons	25
Maximum Range	10 Meters
Color	Black

WARRANTY

Warranty information for this product is not explicitly provided in the available data. Please refer to the retailer's return policy or contact the manufacturer, VINABTY, directly for details regarding warranty coverage.

SUPPORT

For further assistance or inquiries, please contact the retailer where you purchased the VINABTY RMT-D197A remote control. You may also visit the VINABTY official website for potential support resources, if available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08MDXQ5PN>

More documents and user manuals: <https://manuals.plus/>