

[Manuals.plus](#) /

› [Arafuna](#) /

› ARAFUNA MD1003B DVD Player User Manual

Arafuna 1003B

ARAFUNA MD1003B DVD Player User Manual

Model: 1003B

INTRODUCTION

Thank you for purchasing the ARAFUNA MD1003B DVD Player. This manual provides detailed instructions on how to set up, operate, and maintain your new DVD player. Please read this manual thoroughly before use to ensure proper operation and to maximize your enjoyment of the product.



Image: The ARAFUNA MD1003B DVD Player, showcasing its compact design, disc tray, and included remote control.

Package Contents

- ARAFUNA MD1003B DVD Player x 1 unit
- Remote Control x 1
- AV Cable x 1
- HDMI Cable x 1



DVDプレーヤー + リモコン



マニュアル



HDMIケーブル



AVケーブル

Image: A visual representation of the items included in the product package: the DVD player, user manual, HDMI cable, and AV cable.

SETUP GUIDE

Follow these steps to connect your DVD player to your television or projector.

Connecting to a TV/Projector

The ARAFUNA MD1003B DVD Player offers both HDMI and AV (RCA) output options for versatile connectivity.

HDMI Connection (Recommended for 1080P High Quality)

1. Connect one end of the HDMI cable (included) to the HDMI OUT port on the back of the DVD player.
2. Connect the other end of the HDMI cable to an HDMI IN port on your TV or projector.
3. Turn on your TV/projector and select the corresponding HDMI input source (e.g., HDMI 1, HDMI 2).

AV (RCA) Connection

1. Connect the yellow plug of the AV cable (included) to the VIDEO OUT port on the back of the DVD player.
2. Connect the red plug to the R (Right Audio) OUT port and the white plug to the L (Left Audio) OUT port on the back of the DVD player.
3. Connect the other ends of the AV cable to the corresponding VIDEO IN (yellow), R AUDIO IN (red), and L AUDIO IN (white) ports on your TV or projector.
4. Turn on your TV/projector and select the corresponding AV input source.



Image: A detailed diagram illustrating the rear connection ports (HDMI and AV outputs) and the front panel controls of the DVD player, including the USB port and various buttons.

レジューム機能&コンパクト

急に停電後、再生を中断せずに続けて開始します。
コンパクトサイズで置き場所を選ばずに設置できます。



Image: An illustration demonstrating how to connect the DVD player to a television using either AV cables (1) or an HDMI cable (2), highlighting the compact size of the player.

OPERATING INSTRUCTIONS

Basic Disc Playback

1. Ensure the DVD player is connected to your TV and powered on.
2. Press the **OPEN/CLOSE** button on the remote control or the front panel to open the disc tray.
3. Place a DVD or CD disc gently onto the disc tray with the label side facing up.
4. Press the **OPEN/CLOSE** button again to close the disc tray. The player will automatically begin reading the disc.
5. Use the remote control to navigate menus, play, pause, stop, or skip tracks/chapters.

Remote Control Functions

The remote control provides full control over your DVD player. Its buttons are designed to be larger for ease of use.



Image: The ARAFUNA MD1003B DVD Player alongside its remote control, highlighting the user-friendly button layout.

- **POWER:** Turns the player on/off.
- **OPEN/CLOSE:** Opens and closes the disc tray.
- **PLAY/PAUSE:** Starts or pauses playback.
- **STOP:** Stops playback.
- **PREV/NEXT:** Skips to the previous/next track or chapter.
- **REV/FWD:** Fast reverse/forward.
- **SETUP:** Accesses the system settings menu.
- **VOL+/-:** Adjusts the volume.

- **MUTE:** Mutes/unmutes the audio.
- **TITLE/MENU:** Accesses the disc title or menu.
- **ZOOM:** Zooms in/out on the picture.
- **REPEAT:** Repeats current track/chapter or entire disc.

USB Playback

The player supports playback of various media formats from a USB drive (up to 64GB, FAT32 format).

1. Insert your USB drive into the USB port on the front of the DVD player.
2. The player should automatically detect the USB drive and display its contents. If not, press the **DVD/USB** button to switch to USB mode.
3. Use the navigation buttons on the remote control to browse and select your desired media files (JPEG, MP3, etc.).
4. Press **ENTER** or **PLAY** to start playback.

CPRM Compatibility & Region Free Playback

This DVD player is compatible with CPRM discs, allowing you to play recorded terrestrial digital broadcasts. It is also region-free, meaning it can play DVDs from any region, not just Japan.

Note: This DVD player is not a Blu-ray player and cannot play Blu-ray discs.

CPRM対応 & リージョンフリー

ご注意: Blue-rayディスクを再生できません



DVD CD-RW CD-R VCD
CD DVD-RW SVCD EVD



MP3 JPG AVI MPG
MPEG4 VOB FLV JPEG



Image: An illustration highlighting the DVD player's CPRM compatibility for recorded content and its region-free capability, allowing playback of discs from around the world. It also lists supported disc and USB formats.

Resume Function

The player features a resume function that allows playback to continue from the last stopped position, even after a power interruption or turning the unit off.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your DVD player.

Cleaning the Unit

- Wipe the exterior of the player with a soft, dry cloth. Do not use liquid cleaners or aerosol sprays.
- For the disc tray, ensure it is free of dust and foreign objects before inserting a disc. Use a soft, lint-free cloth

to gently wipe the tray if necessary.

Disc Care

- Handle discs by their edges to avoid fingerprints and scratches.
- Store discs in their cases when not in use to protect them from dust and damage.
- Clean dirty discs with a soft, lint-free cloth, wiping from the center outwards.

TROUBLESHOOTING

If you encounter issues with your DVD player, refer to the following common problems and solutions:

1. Disc Playback Issues (Interrupted playback, sound/image interruption)

- **Cause:** Low disc quality (e.g., blank discs, recorded discs), high disc writing speed, aged discs, improper storage leading to faded/deformed/scratched discs, or dust/dirt on the disc.
- **Solution:** Try a different disc. Ensure discs are clean and free from scratches. Use high-quality discs and appropriate writing speeds when recording.
- **Cause:** Unsupported disc format or region restrictions.
- **Solution:** Verify the disc format is supported (CD, DVD, DVD-R/+R, DVD-/RW, CD-R/-RW, VCD, SVCD). While the player is region-free, ensure the disc itself is not damaged or corrupted.

2. "No Disc" Displayed

- **Cause:** Attempting to play a Blu-ray disc.
- **Solution:** This player does not support Blu-ray discs. Ensure you are using a standard DVD or CD.
- **Cause:** Disc file format not supported.
- **Solution:** Confirm the disc contains supported file formats (CD, DVD, DVD-R/+R, DVD-/RW, CD-R/-RW, VCD, SVCD).

3. Disc Tray Issues

- **Cause:** Disc tray is dirty or contains foreign objects.
- **Solution:** Before use, inspect the disc tray for any dirt or foreign objects. Clean it gently if necessary to prevent disc scratches during playback.

4. No Screen Display when Connected via HDMI

- **Cause:** DVD player power lamp is not normal.
- **Solution:** Check if the DVD player's power indicator is on and stable.
- **Cause:** Incorrect TV input selected.
- **Solution:** Ensure your TV is set to the correct HDMI input source (e.g., if connected to HDMI 1 on the TV, select HDMI 1 input on the TV).
- **Cause:** Damaged HDMI cable.
- **Solution:** If the player operates normally but there's no display, the HDMI cable might be faulty. Try replacing it with a new HDMI cable.
- **Cause:** Analog input jack oxidation (for AV connection).
- **Solution:** If using AV connection and there's no image, re-insert the RCA plugs firmly to ensure good contact.

SPECIFICATIONS

Feature	Specification
Brand	Arafuna
Model Number	1003B
Color	Black
Product Dimensions	22.5 cm (Length) x 21 cm (Width) x 4.5 cm (Height)
Product Weight	800 grams
Media Type Supported	CD, DVD, SVCD, VCD
Resolution	1920 x 1080 (1080P Upscaling)
Connector Type	RCA, HDMI
Connectivity Technology	USB
Total USB Ports	1
Compatible Devices	Television
Controller Type	Remote Control
Battery Included	No
Battery Use Required	Yes (for remote control)
CPRM Compatible	Yes
Region Free	Yes
USB Max Capacity	64GB (FAT32 format)

1080P高画質

HDMI出力対応で1080P高解像度
をサポートできます



Image: The DVD player connected to a large screen TV, demonstrating its 1080P high-quality output capability.

最新のドライバを搭載されるので

高精細な映像を楽しめます



ノイズが
軽減



読み込
み早い



長持ち



エラー
訂正



Image: An internal view of the DVD player, emphasizing the A9 chip, which contributes to reduced noise, faster reading, durability, and error correction.

WARRANTY AND SUPPORT

ARAFUNA is committed to providing reliable products and excellent customer service.

Warranty Information

If you encounter any problems or defects with the product within the warranty period, our company will provide full support.

Contacting Support

Please feel free to contact us for any inquiries or issues. You can reach us through the following method:

- Go to your Amazon account: "**Account Service**" > "**Order History**" > "**Seller**" > "**Ask a question**".

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question