



Manuals.plus /

› TELESIN /

› TELESIN Battery Charger Kit for GoPro Hero 12 11 10 9 Black Instruction Manual

TELESIN SQ-BCG-04-TGP

TELESIN Battery Charger Kit for GoPro Hero 12 11 10 9 Black Instruction Manual

Model: SQ-BCG-04-TGP | Brand: TELESIN

PRODUCT OVERVIEW

The TELESIN Battery Charger Kit is designed for GoPro Hero 12, 11, 10, and 9 Black cameras, offering a dual solution for both charging and storage. This compact and portable device allows for simultaneous charging of up to three batteries while also providing secure storage for batteries and two TF cards. It ensures your GoPro camera is always ready for action by providing reliable power and protection for your essential accessories.



Image: The TELESIN Battery Charger Kit, showcasing the charger case, two 1750mAh batteries, and a Type-C charging cable.

KEY FEATURES

- **Dual Functionality:** Serves as both a storage box and a charger for up to three GoPro Hero 12/11/10/9 Black batteries simultaneously.
- **Protective Storage:** Keeps water droplets, dust, and debris out, ensuring the safety of your batteries and up to two TF cards.
- **Compact and Portable:** Small and lightweight design allows for easy transport in bags or pockets.
- **Efficient Charging:** Fully charges three batteries in approximately 2 hours.
- **1750mAh Batteries:** Includes two high-capacity replacement batteries to extend your GoPro's running time.
- **Type-C USB Interface:** Features a user-friendly reversible Type-C port for convenient charging.
- **Safety Guaranteed:** Built-in protection against overcharging, short circuits, electronic shock, over-discharge, over-temperature, over-current, and over-voltage.
- **Battery Status Indicators:** Three color-coded LED indicators clearly display the charging status of

each battery.

PACKAGE CONTENTS

Please verify that all items are present in the package:

- 1 x TELESIN Triple Battery Charger Case (Model: SQ-BCG-04-TGP)
- 2 x TELESIN 1750mAh Batteries for GoPro Hero 12/11/10/9 Black (Model: SQ-BCB-02-TGP)
- 1 x Type-C Charging Cable

SETUP

1. Charging the Case

Connect the provided Type-C charging cable to the charger case's Type-C port. Plug the other end of the cable into a USB power source (e.g., wall adapter, computer USB port, power bank). The indicator lights on the charger will illuminate to show the charging status of the batteries inside. A full charge for the case and batteries takes approximately 2.5 hours.



Image: The TELESIN charger case connected to a wall adapter, demonstrating the charging setup.

2. Inserting Batteries and TF Cards

Open the lid of the charger case. Insert up to three GoPro Hero 12/11/10/9 Black batteries into the designated slots. Ensure the battery contacts align correctly with the charger pins. The case also features two additional slots for storing TF (microSD) cards.



Image: The TELESIN charger case with three batteries and two TF cards inserted, demonstrating its charging and storage capabilities.

OPERATION

Battery Charging Status Indicators

The charger case features three LED indicators on the front, corresponding to each battery slot. These indicators provide clear visual feedback on the charging status:

Green Light (Always On): Battery is fully charged.

Yellow Light (Stays on, Blue Light Breathes): Battery is close to full charge.

Red Light (Stays on, Blue Light Breathes): Battery is currently charging.

Blue Light (Always On): Standby mode (no battery or charging complete).

Clearly displayed

Clarify battery status

Three colors display

Clearly see the status of
each battery



Battery full

Green light always on



Close to full

Yellow light stays on
blue light breathes



Charging

Red light stays on
blue light breathes



Standby

Blue light always on



Image: A visual guide to the TELESIN charger's LED indicators, explaining the meaning of green, yellow, red, and blue lights for battery status.

Storage Function

When not charging, the case functions as a protective storage unit. Close the lid securely to protect your batteries and TF cards from environmental elements like dust and moisture. Its compact size makes it ideal for travel and daily use.

Compact & Portable

Fits easily in backpacks



Image: The TELESIN charger case, highlighting its compact dimensions (52mm x 58mm x 59mm) and demonstrating its portability by fitting into various bags.

MAINTENANCE

To ensure the longevity and optimal performance of your TELESIN Battery Charger Kit, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the charger case. Avoid using abrasive cleaners or solvents. For the charging contacts, use a cotton swab lightly dampened with isopropyl alcohol if necessary, ensuring it is completely dry before use.
- **Storage:** Store the charger and batteries in a cool, dry place away from direct sunlight and extreme temperatures. When storing for extended periods, ensure batteries are charged to about 50% to prolong their lifespan.
- **Handling:** Avoid dropping the charger or batteries, as this can cause internal damage. Do not attempt to disassemble the charger or batteries.

TROUBLESHOOTING

If you encounter issues with your TELESIN Battery Charger Kit, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Batteries not charging.	<ul style="list-style-type: none"> Loose cable connection. Faulty charging cable or power source. Batteries not inserted correctly. Dirty battery contacts. 	<ul style="list-style-type: none"> Ensure the Type-C cable is securely connected to both the charger and the power source. Try a different Type-C cable or USB power adapter. Re-insert batteries, ensuring they are fully seated and contacts align. Clean battery and charger contacts with a dry, soft cloth.
Indicator lights not working.	<ul style="list-style-type: none"> No power supply. Charger malfunction. 	<ul style="list-style-type: none"> Verify the charger is connected to a working power source. If the issue persists after checking power and connections, contact customer support.
Batteries drain quickly after charging.	<ul style="list-style-type: none"> Battery degradation. High power consumption by camera. 	<ul style="list-style-type: none"> Battery lifespan decreases over time. Consider replacing old batteries. Adjust camera settings (e.g., screen brightness, Wi-Fi) to reduce power consumption.

SPECIFICATIONS

Feature	Detail
Product Dimensions (Charger)	2.05 x 2.28 x 2.32 inches (52mm x 58mm x 59mm)
Item Weight	7 ounces (approx. 198g)
Battery Capacity	1750mAh (each battery)
Output Voltage	4.4 Volts
Charging Time (3 batteries)	Approx. 2 hours
Interface	USB Type-C
Compliance	RoHS, FCC
Compatible Cameras	GoPro Hero 12, Hero 11, Hero 10, Hero 9 Black

WARRANTY AND SUPPORT

TELESIN products are manufactured with high-quality standards. This product comes with a standard manufacturer's warranty. For specific warranty details, technical support, or any inquiries regarding your TELESIN Battery Charger Kit, please visit the official TELESIN website or contact their customer service directly.

You can find more information and contact details on the [TELESIN Amazon Store](#).

