

Secrets SV-9-PUR

Secrets Vibrating Lace Panties with Vibrating Ball and Remote Control User Manual

Model: SV-9-PUR

1. INTRODUCTION

Thank you for choosing the Secrets Vibrating Lace Panties. This product is designed to provide discreet pleasure with its integrated vibrating ball and convenient remote control. To ensure safe and optimal use, please read this instruction manual thoroughly before operating the device.

Safety Warnings

- This product is intended for adult use only.
- Keep out of reach of children.
- Do not use if you have any pre-existing medical conditions or if irritation occurs. Consult a healthcare professional if you experience discomfort.
- Discontinue use immediately if the product shows signs of damage or malfunction.
- Clean the product thoroughly before and after each use as per the maintenance instructions.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x Secrets Lace Panties
- 1 x Vibrating Ball
- 1 x Wireless Remote Control
- 1 x USB Charging Cable

3. PRODUCT FEATURES

- **Lace Panties:** Elegant design with a dedicated, discreet compartment for the vibrating ball.
- **Compact Vibrating Ball:** Powerful motor with quiet operation.
- **10 Vibration Settings:** Offers a variety of patterns for personalized experience.
- **Wireless Remote Control:** Operates the vibrator from a distance of up to 6 meters.
- **Rechargeable:** Both the vibrating ball and remote control are rechargeable via the included USB cable.



This image displays the Secrets Vibrating Lace Panties. The panties are made of purple lace with a floral pattern and feature thin, adjustable straps. A discreet compartment for the vibrating ball is integrated into the design.

4. SETUP

4.1 Charging the Devices

1. Locate the charging ports on both the vibrating ball and the remote control.
2. Connect the provided USB charging cable to each device and then to a standard USB power source (e.g., computer USB port, wall adapter).
3. Allow both devices to fully charge before first use. Charging indicators (if present) will typically illuminate during charging and turn off or change color when fully charged.

4.2 Inserting the Vibrating Ball

1. Identify the dedicated compartment within the lace panties. This compartment is designed to securely hold the vibrating ball.
2. Gently place the vibrating ball into the compartment, ensuring it is positioned comfortably and securely.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

- **Vibrating Ball:** Press and hold the power button on the vibrating ball for 2-3 seconds to turn it on or off.
- **Remote Control:** Press the power button on the remote control to activate it.

5.2 Using the Remote Control

1. Ensure both the vibrating ball and the remote control are powered on.
2. The remote control should automatically pair with the vibrating ball. If not, try turning both devices off and on again.
3. Use the designated buttons on the remote control to cycle through the 10 vibration settings.
4. The remote control has an operating range of up to 6 meters, allowing for discreet control.

6. MAINTENANCE

6.1 Cleaning the Vibrating Ball and Remote Control

1. Always remove the vibrating ball from the panties before cleaning.
2. Clean the vibrating ball and remote control with warm water and a mild, toy-safe soap or a specialized toy cleaner.
3. Rinse thoroughly with clean water.
4. Dry completely with a lint-free cloth before storing or recharging.
5. Do not submerge the vibrating ball or remote control in water unless explicitly stated as waterproof.

6.2 Washing the Lace Panties

1. Always remove the vibrating ball from the panties before washing.
2. Hand washing is recommended for lace garments to preserve their delicate structure.
3. Use a mild detergent and cool water.
4. Gently squeeze out excess water; do not wring.
5. Lay flat or hang to air dry. Do not tumble dry, iron, or bleach.

7. TROUBLESHOOTING

- **Device not turning on:** Ensure both the vibrating ball and remote control are fully charged. Press and hold the power button for the required duration.
- **Vibrator not responding to remote:** Check that both devices are powered on and within the 6-meter operating range. Try turning both off and on again to re-establish connection.
- **Weak vibration:** The vibrating ball may require recharging. Connect it to the USB charging cable until fully charged.
- **Short battery life:** Ensure devices are fully charged before use. Avoid storing in extreme temperatures.

8. SPECIFICATIONS

- **Model Number:** SV-9-PUR
- **Brand:** Secrets
- **Dimensions (Product):** Approximately 19 x 11.5 x 4.5 cm
- **Weight (Product):** 140 grams
- **Vibration Settings:** 10 patterns
- **Remote Control Range:** Up to 6 meters
- **Power Source:** Rechargeable via USB
- **UPC:** 848416006595

9. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Secrets Vibrating Lace Panties, please contact the retailer or manufacturer directly. Please retain your proof of purchase for warranty claims, if applicable. Specific warranty details may vary by region and retailer.

